Operator's Manual

C. 1
FEB
96
D

LeCROY DIGITAL OSCILLOSCOPES
9350/54 SERIES

9354 SERIES

LeCroy

Innovators in Instrumentation

C. 1
FEB
96
D

OPERATOR'S MANUAL

LeCROY DIGITAL OSCILLOSCOPES
9350/54 SERIES

Revision D – February 1996

LeCroy

Corporate Headquarters
700 Chestnut Ridge Road
Chestnut Ridge, NY 10977–6499
Tel: (914) 578-6020, FAX: 578-5985

European Headquarters
Mannheimerstrasse 175
D–69123 Heidelberg, Germany
Tel: (49) 6221 840989
FAX: (49) 6221 833827

European Manufacturing
2, rue du Pré-de-la-Fontaine
P.O. Box 341
1217 Meyrin 1/Geneva, Switzerland
Tel: (41) 22 719 21 11, FAX: 22 782 39 15

Copyright © February 1996, LeCroy. All rights reserved. Information in this publication supersedes all earlier versions. Specifications subject to change.

TABLE OF CONTENTS

INTRODUCTION

1 **Key Features**

2 **General Information**

Initial Inspection 2–1
Warranty 2–1
Product Assistance 2–1
Maintenance Agreements 2–2
Documentation Discrepancies 2–2
Service Procedure 2–2
Return Procedure 2–2

3 **Instrument Architecture**

Architecture 3–1
ADCs and Memories 3–2
Trigger 3–3
Automatic Calibration 3–3
Display 3–3
Manual/Remote Control 3–3

4 **Installation**

Operating Environment 4–1
Power Requirements 4–1
Safety Information 4–1
Power On 4–2

5 **Front-panel Overview**

6 **Control of the Oscilloscope**

Active Buttons 6–1
Switching between Menus 6–1
Performing Actions 6–1
Setting Menu Options 6–2
General Instrument Reset 6–2

DISPLAY

7 Display Overview

Real-Time Clock Field (1) 7–1
Displayed Trace Field (2) 7–1
Trigger Level Field (3) 7–1
Acquisition Summary Field (4) 7–2
Trigger Delay Field (5) 7–2
Trigger Configuration Field (6) 7–2
Time and Frequency Field (7) 7–2
Trigger Status Field (8) 7–2
Grid (9) 7–3
Menu Field (10) 7–3
Message Field (11) 7–3

TIMEBASE + TRIGGER

8 Timebase + Trigger Capabilities

Timebase Capabilities 8–1
Single Shot 8–1
Peak Detect 8–2
Random Interleaved Sampling 8–2
Roll Mode 8–3
Sequence Mode 8–3
Trigger Capabilities 8–5
EDGE Trigger 8–5

9 Timebase + Trigger Direct Controls

STOP 9–1
AUTO 9–1
NORM 9–2
SNGL 9–2
AUTO SETUP 9–2
DELAY 9–3
ZERO 9–3
TIME/DIV 9–3
LEVEL 9–3
TIMEBASE SETUP 9–3
TRIGGER SETUP 9–3

10 Timebase Setup

Timebase Setup Menu 10–1
More on Channel Use 10–2
Sequence Mode 10–3
External Clock 10–5

11 Trigger Setup

Trigger Setup Menu 11–1
How the Trigger Modes Overlap 11–1
Choosing the Trigger Mode 11–1
EDGE Trigger 11–2
Trigger Symbols 11–3
SMART Trigger 11–4
GLITCH Trigger 11–5
Interval Trigger 11–8
TV Trigger 11–10
State-Qualified Trigger 11–13
Edge-Qualified Trigger 11–15
Dropout Trigger 11–17
Pattern Trigger 11–19
Trigger Symbols 11–22

CHANNELS

12 Channels Direct Controls

2–Channel Oscilloscopes
Trace ON/OFF 12–1
Offset 12–1
Find 12–1
Volts/Div 12–1
VAR 12–1
Coupling 12–2

4–Channel Oscilloscopes
Trace ON/OFF 12–3
Select Channel 12–3
Offset 12–3
Find 12–3
Volts/Div 12–4
VAR 12–4
Coupling 12–4

13 Coupling

Coupling Menu 13–1
ProBus System 13–2
More on Coupling 13–3
Probes 13–3

ZOOM + MATH

14 Zoom + Math Capabilities

Zoom 14–1
Waveform Mathematics 14–2

15 Zoom + Math Direct Controls

Trace ON/OFF 15–1
Select Trace 15–1
⇔ Position 15–1
⇳ Position 15–1
⇔ Zoom 15–2
⇳ Zoom 15–2
Reset 15–2
Math Setup 15–2

16 Math Setup

Math Setup Menu 16–1
How to use Math 16–1
Standard and Optional Processing Packages 16–1
Setup Menu for Zoom 16–3
Setup Menu for Arithmetic 16–4
Setup Menu for Average 16–5
Setup Menu for Enhanced Resolution 16–7
Setup Menu for Extrema 16–8
Setup Menu for FFT 16–10
FFT Interruption (Abort) 16–10
Setup Menu for FFT Average 16–11
Setup Menu for Functions 16–12
Setup Menu for Rescale 16–14

MENU CONTROLS

17 Menu Buttons & Knobs

Menu Buttons 17–1
Menu Knobs 17–1
DISPLAY 17–2
UTILITIES 17–2
WAVEFORM STORE 17–2
WAVEFORM RECALL 17–2
CURSORS/MEASURE 17–2
PANEL SETUPS 17–2
SCREEN DUMP 17–2
SHOW STATUS 17–3
CLEAR SWEEPS 17–3
General Instrument Reset 17–3

18 Display

Display Menu 18–1
Standard Display vs. XY Display 18–1
Persistence Display 18–2
Screen Presentation 18–3
Standard Display 18–5
XY Display 18–6
Persistence 18–7

19 Utilities

Utilities Menu 19–1
Hardcopy Setup Menu 19–2
Internal Printer Setup Menu 19–3
Time/Date Menu 19–4
GPIB & RS232 Menu 19–5
RS–232–C Connector 19–6
Mass Storage File System 19–7
Mass Storage Menu 19–11
Storage Media Menu 19–12
Floppy Menu 19–13
Template and Formatting Menu 19–14
File Transfers Menu 19–15

Preferences Menu 19–16
File Name Preferences Menu 19–17
New Directory Menu 19–18
Special Modes Menu 19–19
Reference Clock Menu 19–20
CAL BNC Out Menu 19–21

20 Waveform Store

Waveform Store Menu 20–1

21 Waveform Recall

Waveform Recall Menu 21–1
Recall from Internal Memory 21–1
Recall from Storage Device 21–2

22 Cursors/Measure

Cursors in Standard Display 22–1
Cursors in Persistence Display 22–1
Cursors in XY Display 22–1
Automatic Measurements 22–3
Pass/Fail 22–3
Parameter Information & Warning Symbols 22–6
Cursors Menu 22–7
Parameters Menu 22–8
Standard Voltage Parameters 22–9
Standard Time Parameters 22–10
Custom Parameters 22–11
Adding/Deleting Custom Parameters 22–12
Parameters Requiring Setup 22–13
Parameters Requiring Setup (Customize) 22–14
Pass/Fail Testing 22–15
Pass/Fail Menu 22–16
Change Test on Parameters 22–17
Change Limits for Test on Parameters 22–18
Change Test on Mask 22–19
Generate Mask from Waveform 22–20
Recall Mask from Mass Storage Device 22–21
Set Pass/Fail Actions 22–22

23 Panel Setups

Panel Setups Menu 23–1
Recall Setup Menu 23–2
Recall Setup from Card, Floppy or Hard Disk 23–3

24 Show Status

Acquisition Summary 24–1
System Summary 24–2
Text & Times Summary 24–3
Waveform Summary 24–4
Memory Used Summary 24–5

Appendix A Specifications

Appendix B Enhanced Resolution

Appendix C Fast Fourier Transform (FFT)

Appendix D Parameter Measurement Methods

DECLARATION OF CONFORMITY

Manufacturer's Name:	LeCroy SA	LeCroy Corporation
Manufacturer's Address:	2, rue du Pré-de-la-Fontaine CH-1217 Meyrin Switzerland	700 Chestnut Ridge Road Chestnut Ridge, NY 10977 USA

declares that under its sole responsibility, the products listed below, including all their options, conform to Directive 89/336/EEC for Electromagnetic Compatibility. Compliance has been demonstrated to the following specifications, listed in the Official Journal of European Communities.

Product Name:	LeCroy Digital Oscilloscope
Model Numbers:	9350A, 9350AM, 9350AL 9354A, 9354AM, 9354AL, 9354TM
EN 50081-1: 1992, Emissions	EN 55022: 1994, Radiated Emissions Class B EN 55022: 1994, Conducted Emissions Class B
EN 50082-1: 1992, Immunity	IEC 1000-4-2: 1995, Electrostatic Discharges IEC 1000-4-3: 1995, RF Electromagnetic Field IEC 1000-4-4: 1995, Fast Electrical Transients
Issued:	January 10, 1996
By:	J.-P. Vittet T&M Engineering

2-CHANNEL FRONT-PANEL

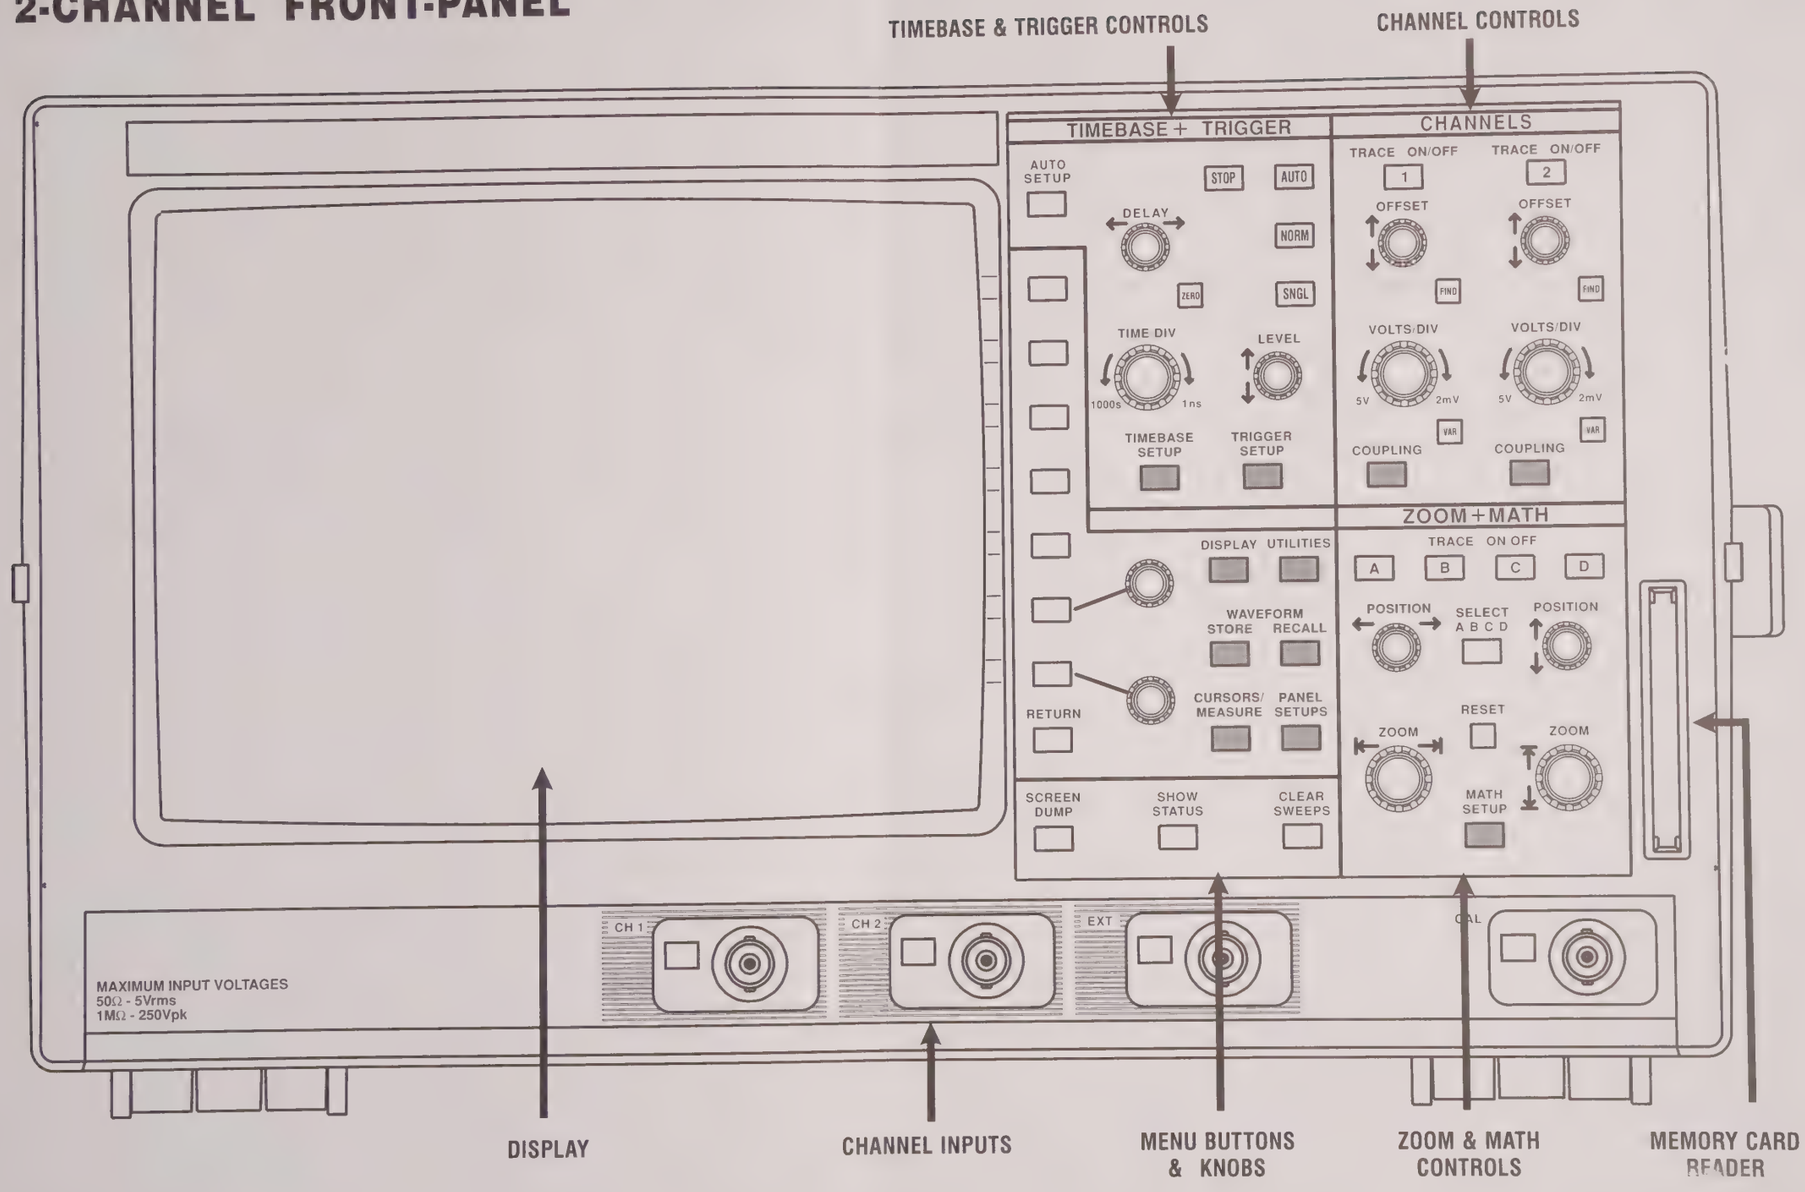

4-CHANNEL FRONT-PANEL

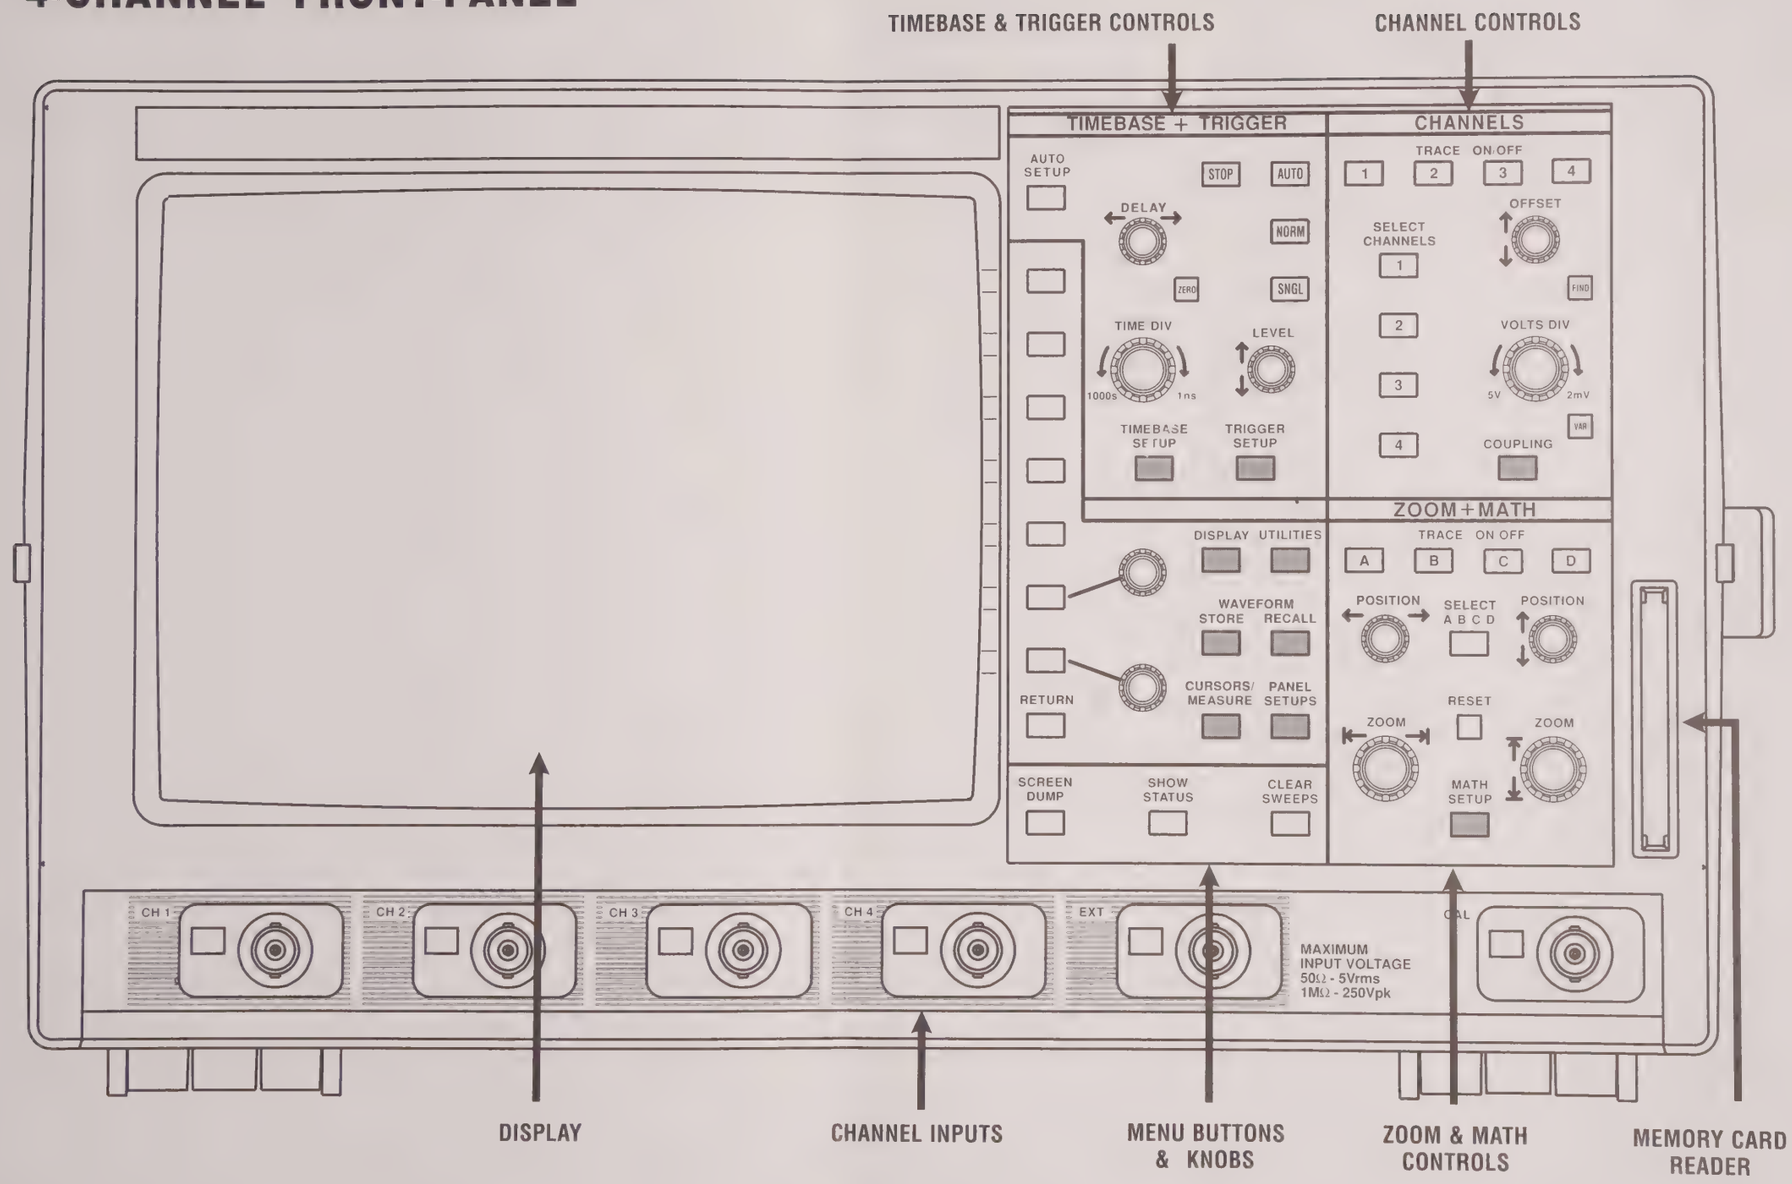

REAR PANEL

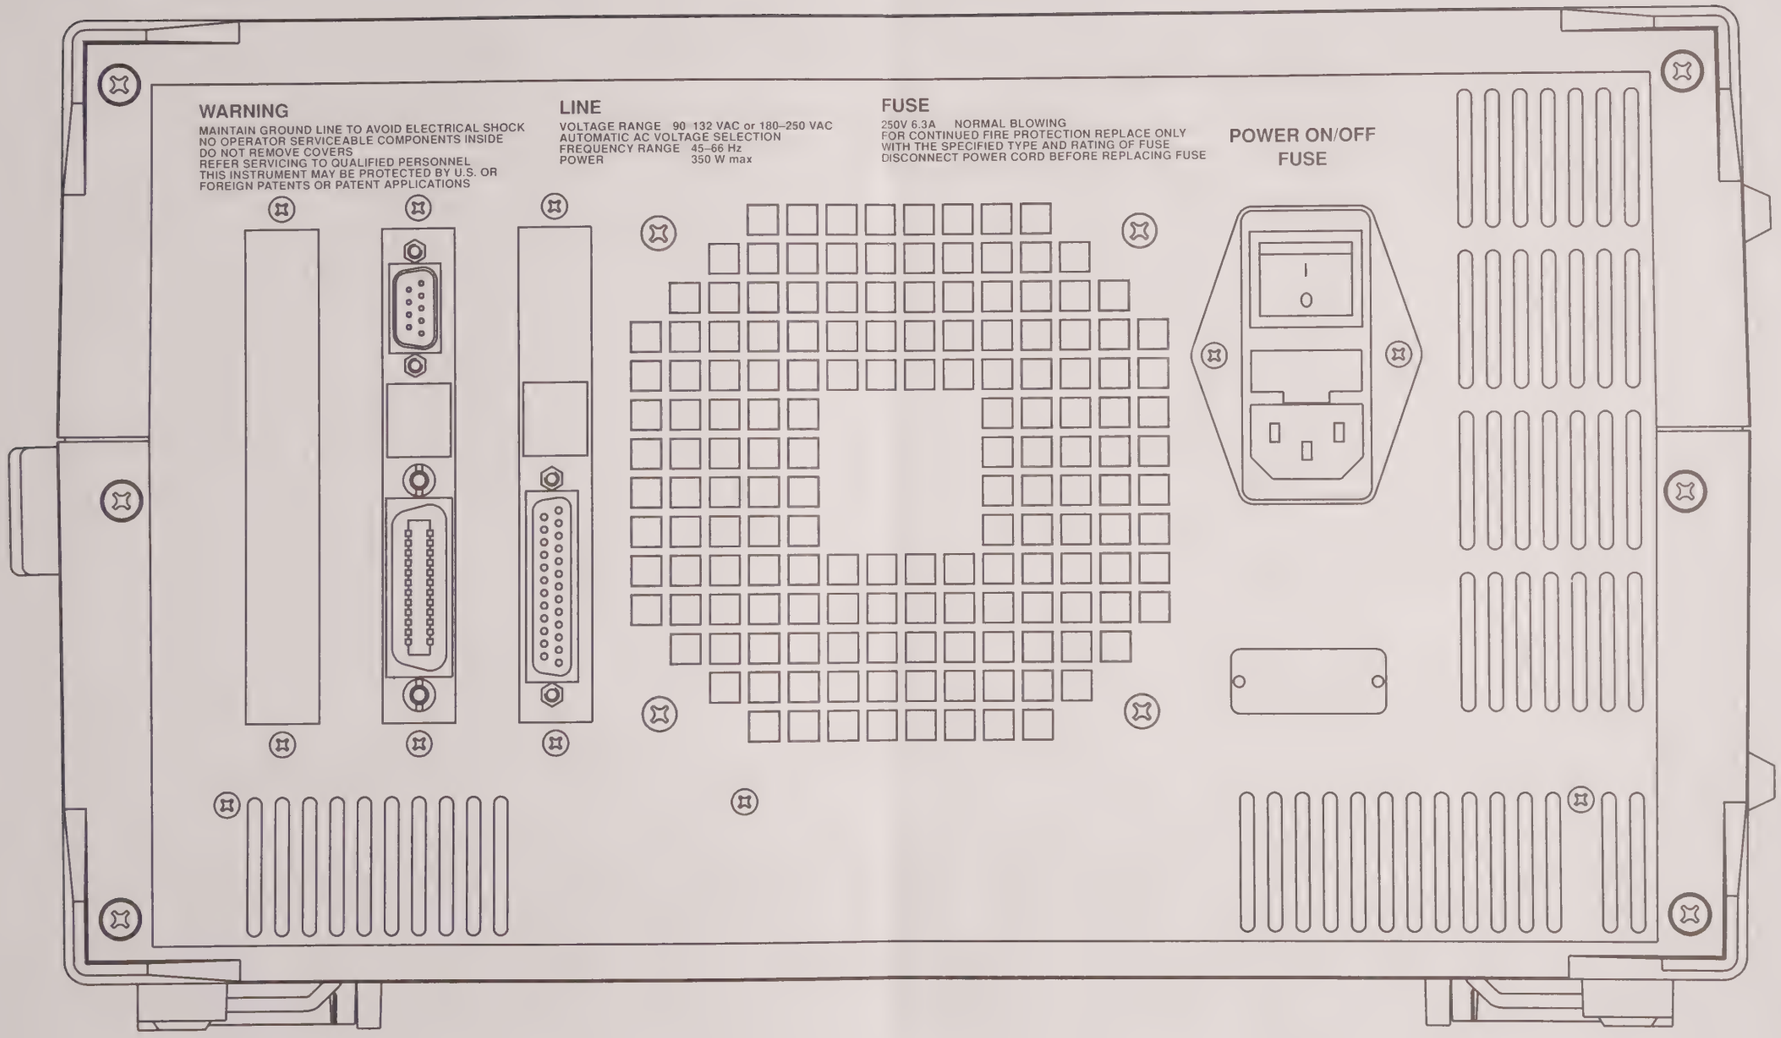
WARNING
MAINTAIN GROUND LINE TO AVOID ELECTRICAL SHOCK
NO OPERATOR SERVICEABLE COMPONENTS INSIDE
DO NOT REMOVE COVERS
REFER SERVICING TO QUALIFIED PERSONNEL
THIS INSTRUMENT MAY BE PROTECTED BY U.S. OR FOREIGN PATENTS OR PATENT APPLICATIONS
LINE
VOLTAGE RANGE 90 132 VAC or 180–250 VAC
AUTOMATIC AC VOLTAGE SELECTION
FREQUENCY RANGE 45–66 Hz
POWER 350 W max
FUSE
250V 6.3A NORMAL BLOWING
FOR CONTINUED FIRE PROTECTION REPLACE ONLY WITH THE SPECIFIED TYPE AND RATING OF FUSE
DISCONNECT POWER CORD BEFORE REPLACING FUSE
POWER ON/OFF
FUSE

1 Key Features

The LeCroy 9350 series digital oscilloscopes provide a set of powerful features for a wide range of applications. Not only do they allow two- or four-channel simultaneous, high speed single-shot capture, but their extensive capabilities and 10 GS/s repetitive sampling make them invaluable as fast, general-purpose oscilloscopes as well.

The oscilloscopes' key features include:

- 500 MHz bandwidth.
- Up to 2 GS/s digitizing rate for transient signals (up to 1 GS/s on 2–channel models).
- 10 GS/s digitizing rate for repetitive signals.
- 25k, 100k (M models) or 2M (L models) of acquisition memory per channel.
- Memory can be combined to achieve up to 8M (up to 4M on 2-channel instruments) of acquisition memory.
- Advanced peak-detect system, synchronous to standard acquisition mode.
- Advanced triggering capabilities including Pattern and Glitch trigger.
- Automatic waveform measurements.
- Automatic Pass/Fail testing.
- Choice of PCMCIA Memory Card, PCMCIA Hard Disk, or DOS Floppy mass storage options.
- Vertical resolution up to 11 bits.
- High-resolution display (810 x 696).
- Built-in printer (option).
- ProBus™ intelligent probe system.

INITIAL INSPECTION

It is recommended that the shipment be thoroughly inspected immediately upon delivery to the purchaser. All material in the container should be checked against the enclosed Packing List. LeCroy cannot accept responsibility for shortages in comparison with the Packing List unless notified promptly. If the shipment is damaged in any way, please contact the Customer Service Department or local field office immediately.

WARRANTY

LeCroy warrants its oscilloscope products to operate within specifications under normal use for a period of three years from the date of shipment. A yearly calibration is recommended to ensure in-spec performance. Spares, replacement parts and repairs are warranted for 90 days. The instrument's firmware is thoroughly tested and thought to be functional, but is supplied "as is" with no warranty of any kind covering detailed performance. Products not manufactured by LeCroy are covered solely by the warranty of the original equipment manufacturer.

In exercising this warranty, LeCroy will repair or, at its option, replace any product returned to the Customer Service Department or an authorized service facility within the warranty period, provided that the warrantor's examination discloses that the product is defective due to workmanship or materials and that the defect has not been caused by misuse, neglect, accident or abnormal conditions or operation.

The purchaser is responsible for transportation and insurance charges for the return of products to the servicing facility. LeCroy will return all in–warranty products with transportation prepaid.

This warranty is in lieu of all other warranties, expressed or implied, including but not limited to any implied warranty of merchantability, fitness, or adequacy for any particular purpose or use. LeCroy shall not be liable for any special, incidental, or consequential damages, whether in contract or otherwise.

PRODUCT ASSISTANCE

Answers to questions concerning installation, calibration, and use of LeCroy equipment are available from the Customer Care Center, 700 Chestnut Ridge Road, Chestnut Ridge, New York 10977–6499, U.S.A., tel. (914) 578–6020, and 2, rue du Pré-de-la-Fontaine, 1217 Meyrin 1, Geneva, Switzerland, tel. (41) 22/719 21 11, or your local field engineering office.

MAINTENANCE AGREEMENTS

LeCroy offers a selection of customer support services. Maintenance agreements provide extended warranty and allow the customer to budget maintenance costs after the initial three-year warranty has expired. Other services such as installation, training, enhancements and on-site repairs are available through specific Supplemental Support Agreements.

DOCUMENTATION DISCREPANCIES

LeCroy is committed to providing state-of-the-art instrumentation and is continually refining and improving the performance of its products. While physical modifications can be implemented quite rapidly, the corrected documentation frequently requires more time to produce. Consequently, this manual may not agree in every detail with the accompanying product. There may be small discrepancies in the values of components for the purposes of pulse shape, timing, offset, etc., and, occasionally, minor logic changes. Where any such inconsistencies exist, please be assured that the unit is correct and incorporates the most up-to-date circuitry. In a similar way the firmware may undergo revision when the instrument is serviced. Should this be the case, manual updates will be made available as necessary.

SERVICE PROCEDURE

Products requiring maintenance should be returned to the Customer Service Department or authorized service facility. LeCroy will repair or replace any product under warranty at no charge. The customer is responsible for transportation charges to the factory. All in–warranty products will be returned to the customer with transportation prepaid.

For all LeCroy products in need of repair after the warranty period, the customer must provide a Purchase Order Number before repairs can be initiated. The customer will be billed for parts and labor for the repair, as well as for shipping.

RETURN PROCEDURE

To determine your nearest authorized service facility, contact the Customer Service Department or your field office. All products returned for repair should be identified by the model and serial numbers and include a description of the defect or failure, name and phone number of the user, and, in the case of products returned to the factory, a Return Authorization Number (RAN). The RAN may be obtained by contacting the Customer Care Center in New York, tel. (914) 578–6020, in Geneva, tel. (41) 22/719 21 11, or your nearest sales office.

Return shipments should be made prepaid. LeCroy will not accept C.O.D. or Collect Return Shipments. Air-freight is generally recommended. Wherever possible, the original shipping carton should be used. If a substitute carton is used, it should be rigid and be packed such that the product is surrounded with a minimum of four inches of excelsior or similar shock-absorbing material. In addressing the shipment, it is important that the Return Authorization Number be displayed on the outside of the container to ensure its prompt routing to the proper department within LeCroy.

ARCHITECTURE

The instrument features 500 MS/s 8-bit ADCs for each channel. Faster sample rates can be achieved by combining two or four channels, bringing the sample rate to a maximum of 1 GS/s on 2-channel models and 2 GS/s on 4-channel[1] models. When all available channels are used, the waveform acquisition memories consist of 25K data points per channel – on Models M and L respectively 100K and 2M. More acquisition memory – up to 4M on 2-channel L models and up to 8M on 4-channel L models – can be achieved by combining two or four channels. Four memories are available for temporary storage and four additional memories are available for waveform zooming and processing. The central processor is a Motorola microprocessor which performs computations and controls the oscilloscope's operation.

All front-panel knobs and buttons are constantly monitored by the front-panel processor, and front-panel setups are rapidly reconfigured via the unit's internal 16-bit bus. Data are quickly processed according to the selected front-panel setups, and are transferred to the display memory for direct waveform display or stored in the reference memories.

The main microprocessor controls the unit's GPIB (IEEE–488) remote control port, as well as the RS-232-C port which is used to directly interface the oscilloscope to a digital plotter, printer, remote terminal or other low-speed device.

[1] *Achieved by means of an external adaptor – the PP092.*

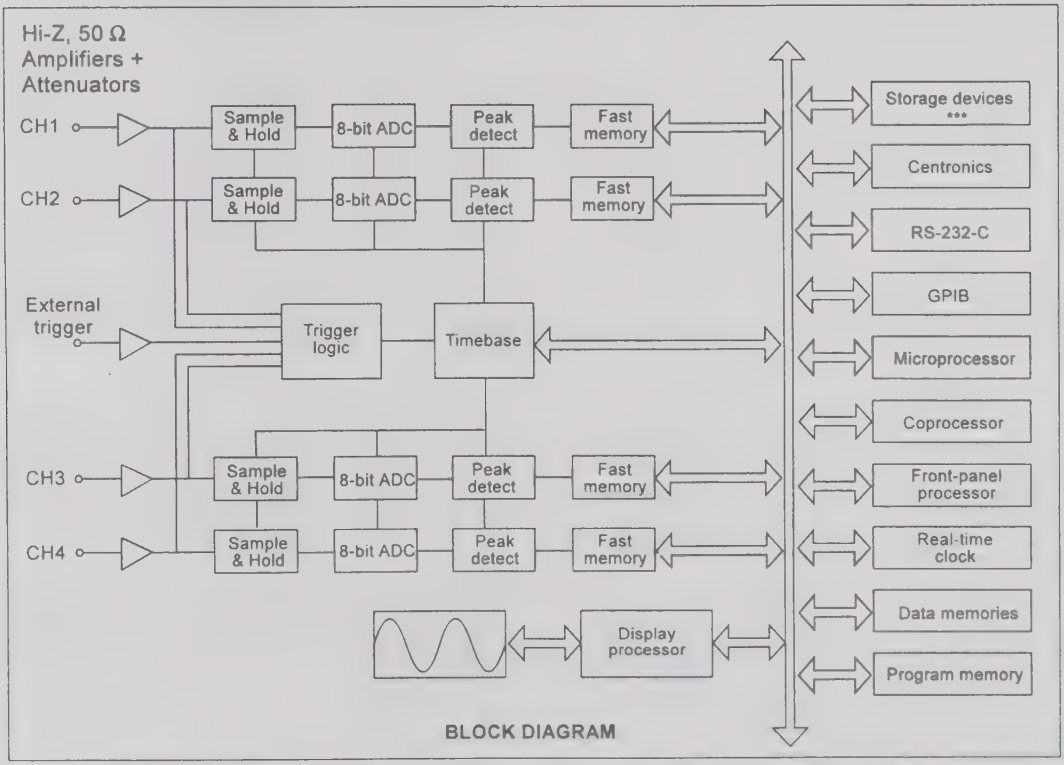

BLOCK DIAGRAM

ADCs AND MEMORIES

Each of the oscilloscope's identical input channels is equipped with a 500 MS/s, 8-bit ADC. This multiple ADC architecture ensures absolute amplitude and phase correlation, maximum ADC performance for multi-channel acquisitions, large record lengths and excellent time resolution. In addition, faster sample rates can be achieved by combining two or four channels, bringing the sample rate to a maximum of 1 GS/s on 2-channel models and 2 GS/s on 4-channel models.

Acquisition memories of up to 2M-points simplify transient capture by providing long waveform records that capture waveforms even when trigger timing or signal speed is uncertain. More acquisition memory (up to 4M on 2-channel models, up to 8M on 4-channel models) can be achieved by combining two or four channels. In addition, a special

expansion facility magnifies waveforms by up to 20000 times the selected timebase speed.

Repetitive signals can be acquired and stored at a Random Interleaved Sampling (RIS) rate of 10 GS/s. RIS is a high-precision digitizing technique that enables measurement of repetitive signals to the instrument's full bandwidth, with an effective sampling interval of 100 ps and measurement resolution of 10 ps. (See Chapter 8, "Timebase + Trigger Capabilities").

TRIGGER

The digitally-controlled trigger system offers an extensive range of trigger capabilities. Front-panel and menu controls allow selection of the appropriate trigger function for the signal.

In the standard trigger mode the front-panel controls are used to select and set parameters such as pre– and post–trigger recording, sequence and roll modes, in addition to the Auto, Normal and Single modes. The trigger source can be any of the input channels, line or external. The coupling is selected from AC, LF REJect, HF REJect, HF, and DC, and the slope from positive, negative, and window. (See Chapter 8, Timebase + Trigger Capabilities).

AUTOMATIC CALIBRATION

The oscilloscope has an automatic calibration facility that ensures overall vertical accuracy of ± 2% of full scale. Vertical gain and offset calibration take place each time the Volts/div is modified. In addition, periodic calibration is performed to ensure long term stability at the current setting.

DISPLAY

The large 12.5 × 17.5 cm (9-inches diagonal) screen displays waveforms with enhanced resolution and serves as an interactive, user-friendly interface via a set of pushbuttons located immediately to the right of the CRT.

The oscilloscope displays up to four waveforms, while simultaneously reporting the parameters controlling signal acquisition. The screen also presents internal status and measurement results, as well as operational, measurement, and waveform analysis menus.

A hard copy of the screen is available via the unit's front-panel screen-dump button.

MANUAL/REMOTE CONTROL

The layout of the front-panel and operation will be very familiar to users of analog oscilloscopes. The "analog" feel is emphasized by rapid instrument response and the fact that waveforms are presented instantly on the high-resolution screen.

The oscilloscope has also been designed for remote control operation in automated testing and computer-aided measurement applications. The entire measurement process, including cursor and pulse parameter settings, dynamic modification of front-panel settings, and display organization, can be controlled via the rear-panel GPIB (IEEE–488) and RS-232-C ports.

Four front-panel setups can be stored and recalled either manually or by remote control, thus ensuring rapid front-panel configuration. When the power is switched off, the current front-panel setting is automatically stored for subsequent recall at the next power-on.

OPERATING ENVIRONMENT

The oscilloscope will operate to its specifications if the environment is maintained within the following parameters:

Temperature ..... 5° to 40° C (41° to 104° F)
Humidity ..... <80%
Operating category II

POWER REQUIREMENTS

The oscilloscope operates from a 115 V (90 to 132 V) or 220 V (180 to 250 V) normal power source at 45 Hz to 66 Hz. No voltage selection is required since the instrument automatically adapts to the line voltage which is present.

The instrument operates at line frequencies up to 440 Hz. However, the leakage current from phase to ground slightly exceeds the safety recommendations for industrial instruments in some countries. This current reaches 4 mA max. at 250 V/400 Hz.

The power supply of the oscilloscope is protected against short circuits and overload by means of two 6.3/250 V fuses. The fuses are located above the mains plug.

Remove the power cable before changing or inspecting a fuse. Open the fuse box by inserting a small screwdriver under the plastic cover and prying it open.

SAFETY INFORMATION

Any use of this instrument in a manner not specified by the manufacturer may impair the instrument's safety protection.

The oscilloscope has been designed to operate from a single-phase power source with one of the current-carrying conductors (neutral conductor) at ground (earth) potential. However, operation from power sources in which both current-carrying conductors are live with respect to ground (such as phase-to-phase on a tri-phase system) is also possible, as the oscilloscope is equipped with over-current protection for both mains conductors. None of the current-carrying conductors may exceed 250 V RMS with respect to ground potential. The oscilloscope is provided with a three-wire electrical cord containing a three-terminal polarized plug for mains voltage and safety ground connection. The plug's ground terminal is connected directly to the frame of the unit. For adequate protection against electrical hazard, this plug must be inserted into a mating outlet containing a safety ground contact.

The oscilloscope has not been designed to make direct measurements on the human body. Users who connect a LeCroy oscilloscope directly to a person do so at their own risk.

POWER ON

Connect the oscilloscope to the power outlet and switch it on by pressing the power switch located on the rear panel. After the instrument is switched on, auto-calibration is performed and a test of the oscilloscope's ADCs and memories is carried out. The full testing procedure takes approximately 10 seconds, after which time a display will appear on the screen.

See front-panel foldout at the beginning of the manual.

TIMEBASE & TRIGGER CONTROLS allow direct adjustment of Time/Div, Trigger Level and Trigger Delay. The AUTOSETUP button automatically adjusts the oscilloscope to acquire and display signals on the input channels.

CHANNEL CONTROLS allow selection of displayed traces and adjustment of vertical sensitivity and offset. The FIND button automatically adjusts the sensitivity and offset to match the input signal.

The MEMORY CARD INTERFACE allows fast and convenient storage of waveforms and instrument setups.

ZOOM & MATH CONTROLS allow you to move, define and expand a trace. (The SELECT ABCD button is used to select a trace).

MENU BUTTONS & KNOBS allow easy control of the most sophisticated tasks.

CHANNEL INPUTS have selectable input impedance of 50 Ω or 1 MΩ over the entire sensitivity range. PROBUS™ probe interface supports a wide range of optional probes.

DISPLAY – High-resolution 9–inch screen.

Many of the most commonly used controls can be directly accessed using the labelled pushbuttons and rotary knobs on the front panel. Activating these controls usually causes an immediate visible action. The dark-grey buttons, together with the SHOW STATUS buttons, all give access to menus which have similar behavior. These are the MENU ENTRY keys. They turn on menus on the right-hand side of the display. These menus allow further control of the acquisition, processing, and display modes of the instrument. The SHOW STATUS button gives access to a series of displays summarizing the status of the acquisition, the instrument, and the waveforms.

ACTIVE BUTTONS

Menu buttons which are active have boxes drawn around their accompanying texts on the screen. Other texts are for information only and the corresponding buttons are not used. There are seven menu buttons. The lower two buttons also have associated knobs.

SWITCHING BETWEEN MENUS

Any time a MENU ENTRY key is pressed, the instrument immediately displays the current configuration. This menu becomes the new primary menu.

Some of these primary menus have secondary menus under them. The heavy outline of the box associated with the button shows that there is a hidden menu behind it. Pushing the button will cause the appropriate secondary menu to be shown.

Whenever the RETURN button is pressed, the previous primary menu is shown. If the current menu is a primary menu then the menu will be switched off.

When the oscilloscope is put under remote control, the REMOTE ENABLE menu will be shown. It will contain a button "GO TO LOCAL" if this action is allowed. This is the only manual way to turn the REMOTE ENABLE menu off.

PERFORMING ACTIONS

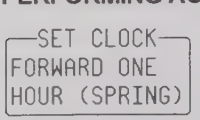

While most menu buttons modify a selected variable, some perform specific actions. In this case, the text which accompanies the button is written in all capital letters.

In most cases, the effect of changing a value in a menu causes the appearance of the screen to change because the new value is immediately used to change the acquisition settings or the processing, or for the display to be shown.

SETTING MENU OPTIONS

Many options are controllable via the menu buttons and knobs. When setting up a new configuration, the buttons should be adjusted, starting at the top to allow for the fact that the menu control for one primary option may be different from that of another primary option.



Some "single" buttons have one highlighted field among several in their associated texts. Pressing the button advances the highlighted field. If there is a knob associated with the button, it can also be used to navigate among the choices. If only one choice is shown, the button will not do anything.

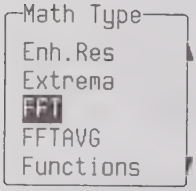

There are also "double" buttons with one highlighted field. In this case, pressing the lower button causes the highlight to go forward among the choices whereas pressing the upper button causes the highlight to go backward. The arrow at the side of the button's text shows how the highlight will move. The arrow is missing if the highlight is at the beginning or end of the list of allowed values.



Some button and knob combinations control the value of a continuously adjustable variable. The knob is used to set the value of the variable, while the button may be used to either choose a highlighted field or make a simple change of the value of the variable.





Other button and knob combinations control the value of several continuously adjustable variables. The knob is used to set the value of the variable which is highlighted, while the button is used to choose which variable is to be highlighted.



GENERAL INSTRUMENT RESET

To reset the instrument, simultaneously press the AUTO SETUP button, the top menu-button, and the RETURN button. The instrument will revert to its default power-up settings.

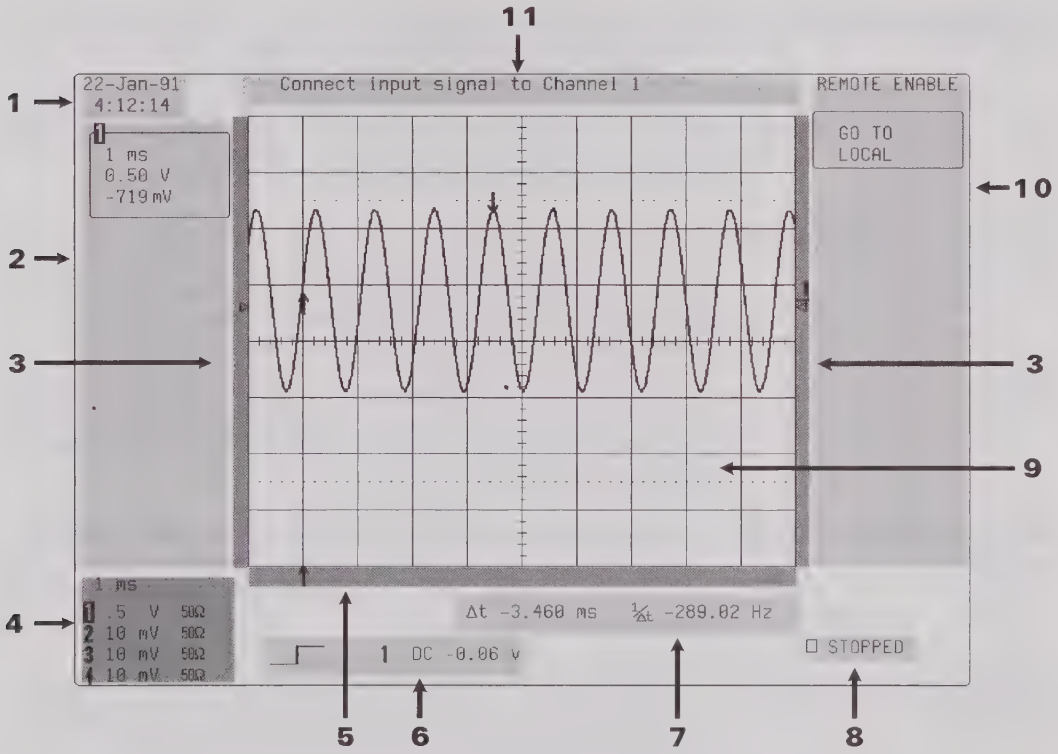

REAL-TIME CLOCK FIELD (1)

Displays the current date and time provided by a battery-backed real-time clock.

DISPLAYED TRACE LABEL FIELD (2)

Contains the identity of the displayed trace, its timebase and Volts/div settings, and cursor readings when applicable. Up to four traces can be shown simultaneously.

TRIGGER LEVEL FIELD (3)

Contains the trigger level indicator on both sides of the grid, and the ground indicator for each channel on the right side of the grid.

ACQUISITION SUMMARY FIELD (4)

Contains the common timebase setting and, for each channel, the vertical gain, probe attenuation and coupling. For 4-channel instruments, the currently selected channel is highlighted.

Note: The displayed trace field shows the acquisition parameters that were set when the trace was captured or processed, whereas the acquisition summary indicates the present setting.

TRIGGER DELAY FIELD (5)

Indicates the trigger delay (arrow symbol) with respect to the left-hand edge of the grid. The delay can be adjusted from 0 to 10 divisions (pre-trigger) or from 0 to –10000 screen divisions (post-trigger). Pre-trigger delay appears as an upward arrow at the appropriate position in the field. Post-trigger is given as a delay in seconds.

When the relative-time cursors (two arrow cursors) are active (selected in MEASURE menu), this field displays the time interval between the two cursors. It also displays the frequency corresponding to 1/(time interval).

TRIGGER CONFIGURATION FIELD (6)

Displays the trigger source, slope, level and coupling. When applicable, additional information is given (hold-off by time or by number of events, logic states, etc...). A simple icon gives an overview of the trigger conditions.

TIME AND FREQUENCY FIELD (7)

This field displays time and frequency relative to cursors; e.g. when the absolute-time cursor (cross-hair cursor) is active (selected in MEASURE menu), this field displays the time between the cursor and the trigger point.

TRIGGER STATUS FIELD (8)

Indicates the trigger re-arming status (AUTO, NORMAL, SINGLE, STOPPED).

During an acquisition the little box at the left of the re-arming status will indicate when an intermediate acquisition occurs. This feature helps to monitor the trigger rate before the waveform is reconstructed.

For NORMAL status, a message SLOW TRIGGER may appear in the field when needed.

For slow acquisition, a message SLOW UPDATE appears, reminding the user that it will take a while before a new waveform will finish.

The region just to the left of the trigger status field can contain messages showing that lengthy processes, such as FFT calculations or screen dumps, are under way.

GRID (9)

Displays traces from the acquisition or reference memories. A dual- or quad-grid presentation can also be selected in the display menu (see Chapter 18).

MENU FIELD (10)

This field is divided into seven sub-fields with menu buttons and two rotary knobs. Each field can display the name of a menu or perform an operation when the associated menu button is pressed. The RETURN button is used to restore the next higher menu level.

MESSAGE FIELD (11)

This field is used to display a variety of messages (warnings, indications, titles, etc…) that explain the instrument's current status.

TIMEBASE CAPABILITIES

Depending on the timebase setting, the following three sampling modes are possible:

- Single Shot
- Random Interleaved Sampling
- Roll Mode

For all timebases for which the single shot mode or roll mode can be used, the acquisition memory can be subdivided into user-defined segments to give:

- Sequence Mode

SINGLE SHOT

Single Shot acquisition is the basic acquisition technique of a digital oscilloscope. Other timebase modes of the oscilloscope make use of this single shot acquisition technique.

An acquired waveform consists of a series of measured voltage values sampled at a uniform rate on the input signal. The acquisition is typically stopped at a fixed time after the arrival of a trigger event as determined by the trigger delay. The acquisition consists of a single series of measured data values associated with one trigger event. The time of the trigger event is measured using the timebase clock. The horizontal position of a waveform is determined using the trigger event as the definition of time 0. Waveform display is also done with this definition. Since each channel has its own ADC, the voltage on each of the input channels is sampled and measured at the same instant. This allows very reliable time measurements between different channels.

Trigger delay can be selected anywhere in a range that allows the waveform to be sampled from well before the trigger event up to the moment it occurs (100% pretrigger), or at a time starting at the equivalent of 10000 divisions (at the current Time/div) after the trigger.

For fast timebase settings the maximum single shot sampling rate of the ADC's is used; this is 500 MegaSamples per second[1]. As the timebase is slowed down, more and more data samples are used to fill the waveform until the maximum memory size of the waveform has been reached. For timebases slower than this, the sampling rate is decreased while maintaining the number of data samples in the

[1] *On one and each channel. Higher sampling rates can be achieved by combining channels. See Appendix A.*

waveform. Single shot acquisition is allowed for all timebase ranges slower than 10 ns/div.

PEAK DETECT

When using slow timebases, sample rate decreases as mentioned above, and very short events like glitches can be missed if they occur between two samples. To prevent this, a special circuitry – the peak detect system – can be switched on, capturing the signal envelope with a resolution of 2.5 ns, without destroying the underlying data which is captured simultaneously and on which processing (pulse parameters, FFT, averaging) can be performed.

RANDOM INTERLEAVED SAMPLING

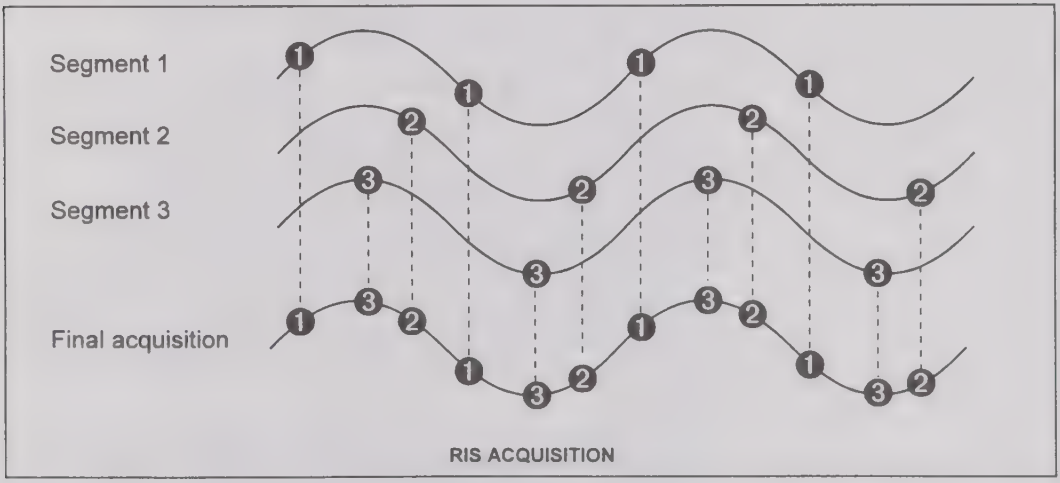

RIS ACQUISITION

Random Interleaved Sampling (RIS) is an acquisition technique that allows effective sampling rates higher than the maximum single shot sampling rate (500 MS/s)[2], and is used on repetitive waveforms with a stable trigger.

The maximum effective sampling rate of 10 GS/s can be achieved by acquiring 20 single-shot acquisitions (also called bins) at 500 MHz, with each bin positioned approximately 0.1 ns after the previous one. The process of acquiring 20 bins that satisfy this time constraint is random. The relative time between ADC sampling in-

[2] *On one and each channel. Higher sampling rates can be achieved by combining channels. See Appendix A.*

constraint is random. The relative time between ADC sampling instants and the event trigger provides the necessary variation. It is measured by the timebase to 10 ps accuracy.

Typically, 104 trigger events may be needed to complete an acquisition, although sometimes many more are needed. These segments are interleaved to provide a waveform that covers a time interval that is a multiple of the maximum single shot sampling rate. However, the real time interval over which the data for the waveform has been collected is orders of magnitude longer and depends on the trigger rate and the level of interleaving desired. The oscilloscope is capable of acquiring approximately 10000 RIS segments per second.

RIS acquisitions are allowed for timebase settings from 1 ns/div up to the point at which a 1 GS/s (1 ns/point) acquisition fills the available memory. At slower timebase settings there is no need to use the RIS technique.

RIS acquisitions do not have to be "complete" in order to be useful. A RIS acquisition can be stopped manually (STOP) or automatically (AUTO). The oscilloscope can treat RIS waveforms with missing segments.

ROLL MODE

Single shot acquisitions at timebase settings slower than 0.5 s/div (10 s/div for 2M records) have a sufficiently low data rate to allow the display of the incoming points in real time. The oscilloscope shows the incoming data continuously until a trigger event is detected and the acquisition is completed. The latest data is used to update a trace display that moves from right to left, similar to the output of a strip chart recorder.

Waveform MATH and Parameter calculations are done on the completed waveforms. The behavior of the STOP, SNGL, NORM, and AUTO buttons is modified when a roll mode acquisition is being used (see Chapter 9).

SEQUENCE MODE

Sequence mode is an alternative to single shot acquisition, and provides many unique features. The complete waveform consists of a selectable number of fixed-size segments acquired in a single shot mode (see Appendix A for the limits). The dead time between the trigger events for consecutive segments can be kept to 100 μs as opposed to the hundreds of milliseconds usually required between consecutive single shot waveforms. Complicated sequences of events covering a large time interval can be captured with fine details if there are uninteresting periods between the events. Time meas-

sequence waveform using the full precision of the acquisition timebase. Trigger time stamps are given for each of the segments in the TEXT & TIMES Status menu. Each individual segment can be displayed using the ZOOM capability or be used as input to the MATH package. For remote operation, sequence mode can be used to take full advantage of the high data transmission capability of the oscilloscope by overlapping the transmission of one waveform with the acquisition of its successor.

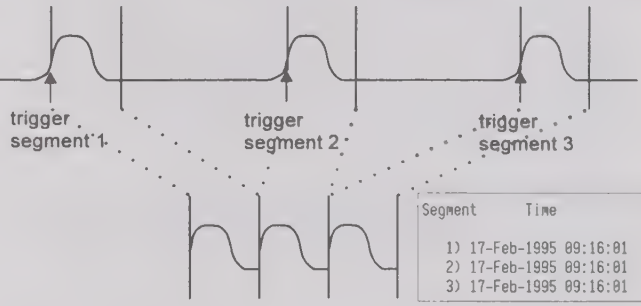
trigger segment 1
trigger segment 2
trigger segment 3
Segment Time since Segment 1 between Segments
1) 17-Feb-1995 09:16:01
2) 17-Feb-1995 09:16:01 5.999983 ms
3) 17-Feb-1995 09:16:01 11.999965 ms 5.999983 ms

SEQUENCE ACQUISITION EXAMPLE

In sequence mode the timebase setting is used to determine the acquisition duration of each segment, which will be 10 x TIME/DIV. The timebase setting, the desired number of segments, the maximum segment length and the total memory available for the oscilloscope model are used to determine the actual number of samples/segment and time/point to be used. The display of the complete waveform with all of its segments may not entirely fill the screen.

Sequence mode is normally used to acquire the desired number of segments and terminate the waveform acquisition. It can also be used to acquire the segments continuously, overwriting the oldest ones as necessary. Then a manual STOP order or a timeout condition can be used to terminate the waveform acquisition. The behavior of the STOP, SNGL, NORM, and AUTO buttons is modified when a sequence mode acquisition is being used (see Chapter 9). To ensure low dead time between segments, button-pushing and knob-turning must be avoided during acquisition of sequences.

TRIGGER CAPABILITIES

The oscilloscope trigger is used to determine when to stop sampling data. The trigger possibilities have been divided into two classes: :

- **EDGE** – including:
  - simple threshold triggers on an input signal
  - LINE signal triggers
  - triggers with holdoff by time
  - triggers with holdoff by number of trigger events
- **SMART** – including triggers requiring one trigger signal:
  - GLITCH triggers on the pulse width of a trigger signal
  - INTERVAL triggers on the interval between trigger transitions
  - TV triggers for composite video signals
  - DROPOUT trigger for transitions that cease after a while
  - PATTERN trigger on a logical combination of the state of each channel

    and
  - Qualified triggers which trigger on one signal after a transition on another signal with possible additional requirements

To capture rare phenomena such as glitches or spikes, missing bits, or intermittent faults, an oscilloscope must be able to trigger on elusive events. The 9350 series of oscilloscopes offer a variety of sophisticated trigger modes. They are based on a counter which can be set by one signal and pre-set, to count a specified number of events of another signal (1 to 10^9), or alternatively to measure time intervals up to 20 s.

A discussion of each of the SMART triggers can be found in Chapter 11, together with instructions on how to set them up.

EDGE TRIGGER

Single Edge triggers are described by a source, coupling, slope, and level condition. These same parameters are used to build up the SMART triggers.

Source is selected from:

- CH1, CH2 (CH3, CH4): the acquisition channel signal conditioned for the overall voltage gain, coupling, and bandwidth as described in Chapters 12 and 13.
- LINE: the line voltage which powers the oscilloscope. It can be used to provide a stable display of signals synchronous with the power line. Coupling and level are not relevant for this selection.

- EXT: the signal applied to the EXT BNC connector. It can be used to trigger the oscilloscope within a range of ± 0.5 V and an input impedance of 1 MΩ and 50 Ω. (Not applicable if external clock is selected in timebase menu).
- EXT/10: the signal applied to the EXT BNC connector. It can be used to trigger the oscilloscope within a range of ± 5 V and an input impedance of 1 MΩ and 50 Ω. (Not applicable if external clock is selected in timebase menu).

Coupling refers to the type of signal coupling at the input of the trigger circuit. Note that the trigger coupling can be selected independently for each of the sources. The DROPOUT and Qualified triggers use these selections. Therefore, a change of trigger source may also result in a change of the trigger coupling shown. The coupling choices are:

- **DC**: All of the signal's frequency components are coupled to the trigger circuit. This coupling mode is used in the case of high-frequency bursts, or where the use of AC coupling would shift the effective trigger level.
- **AC**: Signals are capacitively coupled; DC levels are rejected and frequencies below 50 Hz are attenuated.
- **LF REJ**: Signals are coupled via a capacitive high-pass filter network. DC is rejected and signal frequencies below 50 kHz are attenuated. The LF REJ trigger mode is used when stable triggering on medium to high frequency signals is desired.
- **HF REJ**: Signals are DC coupled to the trigger circuit and a low-pass filter network attenuates frequencies above 50 kHz. The HF REJ trigger mode is used to trigger on low frequencies.
- **HF**: Used for triggering on high-frequency repetitive signals in excess of 300 MHz. Maximum trigger rates greater than 500 MHz are possible. HF triggering should be used only when needed. It will be automatically overridden and set to AC when it is incompatible with other characteristics of the trigger mode. This is the case for the SMART triggers. Only one slope is available. It will be shown by the trigger symbol.

Slope selects the direction of the trigger voltage transition to be used to generate a trigger event.

The selected slope is associated with a trigger source in the same way as the coupling.

Level defines the source voltage at which the trigger circuit will generate an event. The selected level is associated with a trigger source in the same way as the coupling. Note that the trigger level is specified in volts and is normally unchanged when the vertical gain or offset is modified.

The amplitude of trigger signals and the range of trigger levels are limited as follows:

- ± 5 screen divisions with a channel as trigger source.
- ± 0.5 V with EXT as trigger source.
- ± 5 V with EXT/10 as trigger source.
- None with LINE as trigger source (zero crossing is used).

EDGE Trigger with Holdoff

Holdoff is an additional characteristic of the trigger circuitry. When the Holdoff is OFF, the time between successive trigger events is limited only by the input signal, the coupling, and the oscilloscope's bandwidth.

Sometimes a stable display of complex repetitive waveforms can be achieved by putting a condition on this time. This holdoff is expressed either as a time or an event count. The time is measured starting at one trigger event, and the next event arriving after this time is allowed to trigger the oscilloscope. The event count is the number of trigger events to be ignored after one trigger event until the next one to be allowed. The choice of which holdoff mode is to be used depends on the application. Often, either one can be used to obtain the same result.

It should be noted that the holdoff is started by potential triggers and not at the end of an acquisition. Potential triggers will be accepted if the oscilloscope is ready, but will be ignored if the instrument is still busy handling the previous trigger event. In fact, the holdoff ensures synchronization between successive real triggers.

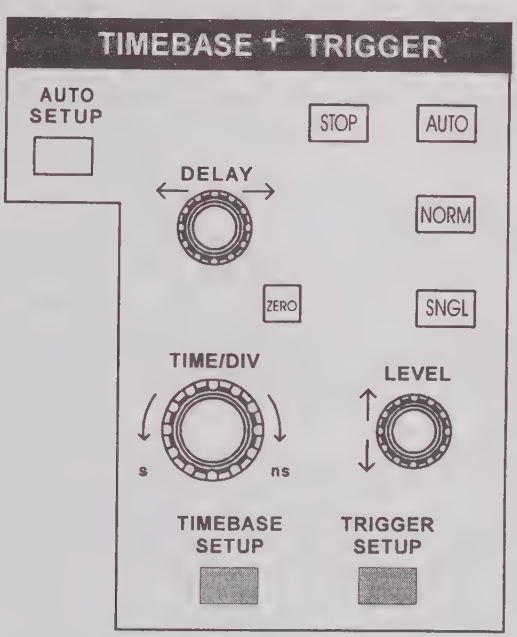

STOP

This button is used to halt the acquisition and can be used in all three re-arming modes (AUTO, NORM, SNGL). Pressing the STOP button prevents the oscilloscope from acquiring a new signal.

If the STOP button is pressed while a single-shot acquisition is under way, the last acquired signal will be kept.

If a RIS acquisition has been started, it will be stopped and a partial waveform reconstruction will be performed.

If the acquisition is in the ROLL mode, it will be stopped and the incomplete acquisition data will be shown as if a trigger had occurred.

For Sequence acquisitions, the timebase will be stopped and all the new segments will be shown.

AUTO

In AUTO mode, the oscilloscope automatically displays the signal if NO trigger occurs for more than 500 ms. If a trigger occurs within this time, the oscilloscope behaves as in NORMal mode.

For the RIS mode, the acquisition will be terminated and shown each second, although some needed segments may be missing.

For the ROLL mode, the oscilloscope samples the input signals continuously and indefinitely. The acquisition has no trigger condition but can be stopped as desired by the user.

For Sequence mode, the acquisition will be terminated if the time between two consecutive triggers exceeds a selectable timeout (see the UTILITIES menu under SPECIAL MODES). The next acquisition is then started from segment 1.

NORM

In this mode the screen is continuously updated as long as a valid trigger is present. If no valid trigger is present, the last signal is preserved and the warning "SLOW TRIGGER" is displayed in the Trigger Status Field.

For the ROLL mode, the acquisition is terminated when the last needed data after a trigger have been taken. The display is paused, showing the entire waveform. After a moment it will go back into the roll mode while it waits for the next trigger.

For the Sequence mode, the acquisition is terminated after the last segment is acquired. The next acquisition is started immediately. A Sequence WRAP mode in NORMal is the same as in SINGLE.

SNGL

In Single Shot mode the instrument waits for one single trigger to occur, then displays the signal and stops acquiring. If no signal occurs, the button can be pressed again to show the signal being observed without a trigger.

When in RIS mode, (selected in TIMEBASE SETUP), the instrument will wait for all the trigger events required to build up ONE signal on screen before it stops (this may require as many as 4000 trigger events).

The ROLL mode is the same as single shot except that there is no need to push the button a second time to show the signal.

AUTO SETUP

This button automatically scales the timebase, trigger level, offset, and Volts/div to provide a stable display of REPETITIVE signals.

Auto-setup rules:

– Auto Setup operates only on channels which are ON. If no channels are ON, then Auto Setup will operate on ALL the channels and will turn them all ON.

- Signals detected must have an amplitude between 2 mV and 40 V, a frequency greater than 50 Hz, and a duty cycle greater than 0.1%.
- If signals are detected on several channels, the channel with the lowest number will determine the selection of the timebase and trigger source.

DELAY

This knob is used to adjust the pre- or post-trigger delay.

Pre-trigger adjustment is available from 0 to 100% of the full time-scale, in steps of 1%. The pre-trigger delay is illustrated by the vertical arrow symbol on the bottom of the grid.

Post-trigger adjustment is available from 0 to 10000 divisions in 0.1 division increments. The post-trigger-delay value is labelled in seconds and is located in the Trigger Delay Field on the screen.

ZERO

Pressing this button causes the trigger delay to be set to zero, i.e. the trigger instant is the left-hand edge of the grid.

TIME/DIV

This knob selects the time per division in a 1–2–5 sequence. The time/div setting is displayed in the Acquisition Summary field.

LEVEL

This knob adjusts the trigger threshold.

The amplitude of trigger signals and the range of trigger levels is limited as follows:

- ± 5 screen divisions with a channel as trigger source
- ± 0.5 V with EXT as trigger source
- ± 5 V with EXT/10 as trigger source
- Inactive with Line as trigger source

The trigger sensitivity is better than 1/3rd of a screen division.

TIMEBASE SETUP

This menu-entry key calls up the "TIMEBASE SETUP" menu described in chapter 10.

TRIGGER SETUP

This menu-entry key calls up the "TRIGGER SETUP" menu described in chapter 11.

TIMEBASE SETUP MENU

The Timebase Setup menu is used to select:

- Single-shot or Interleaved (RIS) acquisition
- External clock
- Channel pairing and Peak Detect
- Sequence mode
- The number of segments in sequence mode
- The maximum record length

The menu also shows the status of:

- The number of points acquired
- The sampling rate
- The total time span

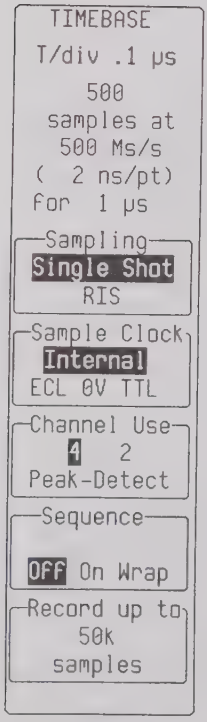

Sampling

Two essential modes of operation may be selected with this menu button:

- **Single Shot** – the oscilloscope displays data collected during successive single-shot acquisitions from the input channels. This mode allows captures of **non-recurring** or **very low repetition-rate** events **simultaneously** on **all** the input channels.
- **RIS** – the oscilloscope uses a Random Interleaved Sampling technique to achieve a higher effective sampling rate than in single-shot mode, provided the input signal is repetitive and the trigger is stable.

Sample Clock

Selects the sample clock mode (internal or external). See page 10-5.

Channel Use

Selects channel pairing (see following page). Also controls the peak detect mode (see page 8-2).

Sequence

Selects Sequence mode. See page 10–3.

Record up to

Selects the maximum record lengths of the acquisition channels.

MORE ON CHANNEL USE

Channels can be combined to achieve more memory and more sampling rate by interleaving the ADCs in time.

When channels are paired, Channel 1 and Channel 4[1] are disabled and the maximum sampling rate on Channel 2 and Channel 3[1] is 1 GS/s. The maximum record length is also doubled. On 4–channel units and on fast timebases it is possible to achieve 2 GS/s by means of a special adaptor (PP092) placed on Channel 2 and Channel 3. As soon as the PP092 is in place, the oscilloscope interleaves the four 500 MS/s ADCs and the acquisition memory to achieve a maximum sampling rate of 2 GS/s and up to four times the initial record length.

9350/54					
		Memory per channel			
Channels used	Max. sample rate	9350/54	9350/54M	9350/54L	Notes
All Peak Detect OFF	500 MS/s	25k	100k	2M	All channels active
All Peak Detect ON	100 MS/s data 400 MS/s peak	10k data + 10k peaks	50k data + 50k peaks	1M data + 1M peaks	All channels active 2.5 ns peak detect
Paired Peak Detect OFF	1 GS/s	50k	250k	4M	9350: CH1 9354: CH2 + CH3
Paired + PP092 Peak Detect OFF	2 GS/s	100k	500k	8M	9354 models only

9354T/TM				
		Memory per channel		
Channels used	Max. sample rate	9354T	9354TM	Notes
All Peak Detect OFF	500 MS/s	100k	500k	All channels active
All Peak Detect ON	100 MS/s data 400 MS/s peak	50k data + 50k peaks	250k data + 250k peaks	All channels active 2.5 ns peak detect
Paired Peak Detect OFF	1 GS/s	250k	1M	CH2 + CH3
Paired + PP092 Peak Detect OFF	2 GS/s	500k	2M	

[1] *4–channel units only*

SEQUENCE MODE

When Sequence is set to ON

1. If the trigger mode is SINGLE, the oscilloscope fills the segments and stops, or if there are not enough trigger events to fill the segments, it waits forever unless the STOP trigger mode button is pressed.
2. If the trigger mode is NORM, the oscilloscope fills the segments and then, if more trigger events occur, the acquisition is restarted from segment 1.
3. If the trigger mode is AUTO, and if the time between two consecutive triggers exceeds a selectable time-out, the acquisition is restarted from segment 1.

The time-out can be selected in the UTILITIES menu under SPECIAL MODES (Chapter 19).

When Sequence is set to WRAP

The segments are filled continuously until the STOP trigger mode button is pressed. The last N segments will be displayed. An alternative way to stop the WRAP sequence is through AUTO mode; if the time between two consecutive triggers exceeds a selectable time-out, the acquisition will stop.

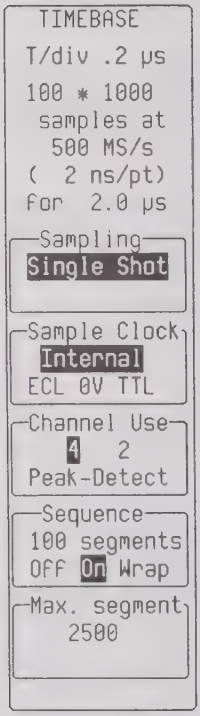

Sequence

The menu knob is used to select the desired number of segments.

Max. segment

Selects via the menu knob/button the maximum record length for each segment.

Note: A summary of the acquisition conditions is displayed at the top of the menu: number of segments, available record length per segment, sampling rate, and timebase setting.

EXTERNAL CLOCK

Oscilloscopes fitted with the option CKIO allow the user to supply clock signals at the External TRIG BNC input which will be used to drive the ADCs of the instrument. Additional menu fields allow the choice of the type of external clock signal and the size of the record to be acquired.

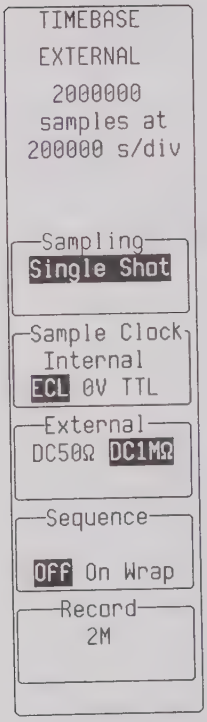

Sampling

This button is inactive when the external sample clock is being used. Only single-shot acquisition mode is available.

Sample Clock

Press this button to select the appropriate description of the signal applied to the TRIG BNC connector for use as the sample clock. The rising edge of the signal is used to clock the ADCs of the oscilloscope. The effective thresholds for sampling the input are:

- ECL – –1.3 V
- 0 V – 0.0 V
- TTL – +1.5 V
- RP (Rear Panel) specifies that the 500 MHz external clock connected to the rear panel is to be used as the sample clock.

The risetime and falltime of the signal should both be less than 10 ns.

(Usable only if EXT trigger is not used as the trigger source.)

External

Selects the input coupling for the external clock signal.

Sequence

This button is used to select Sequence Mode if desired. The knob is used to adjust the number of segments. Trigger time stamps are not available when the external clock is in use. The AUTO sequence timeout feature is not available. The intersegment dead time is no longer guaranteed.

Record

Use the knob to select the desired number of samples for the single-shot acquisition.

Notes when using External Clock

The time/div is expressed in s/div which should be thought of as samples/div.

The trigger delay is also expressed in samples and can be adjusted as usual.

No attempt is made to measure the time difference between the trigger and the external clock. Therefore, successive acquisitions of the same signal can appear to jitter on the screen.

The oscilloscope will require a number of pulses (typically 50) before it recognizes the external clock signal. The acquisition is halted only when the trigger conditions have been satisfied and the appropriate number of data points have been accumulated.

Any adjustment to the time/division knob automatically returns the oscilloscope to normal (internal) clock operation.

TRIGGER SETUP MENU

The Trigger Setup menu is used to select:

- The trigger mode
- The Edge trigger settings
- SMART trigger settings that enable triggering on:
  - Glitches
  - Intervals
  - TV signals
  - Edge- or State-qualified events
  - Dropouts
  - Patterns

HOW THE TRIGGER MODES OVERLAP

Once specified, Trigger Level (i.e. threshold) and Trigger Coupling are the only parameters that are passed unchanged from mode to mode – and this is done for each trigger source.

CHOOSING THE TRIGGER MODE

The Trigger Setup menu can be displayed at any time by pushing the dark-grey menu-entry key marked TRIGGER SETUP.

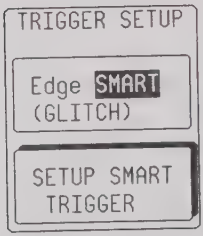

The top menu button allows the choice between EDGE and SMART triggers.

After activating the SMART trigger with the top menu button, all of the parameters for the current SMART trigger are shown for modification in the menu.

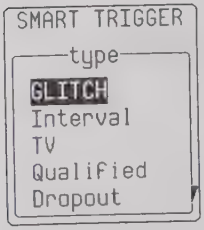

When SMART is selected, the SETUP SMART TRIGGER menu button gives access to a lower level menu where a different SMART trigger can be chosen. The top button in this menu gives the choice of SMART trigger types available.

EDGE TRIGGER

The EDGE mode is used to:

- Select a trigger source
- Select the coupling for each source
- Select the slope (positive or negative)
- Define the holdoff in time or events

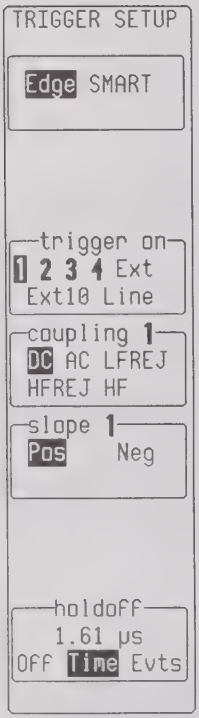

Edge/SMART

Activates either **Edge** trigger or **SMART** trigger mode.

trigger on

Selects the trigger source in Edge mode.

coupling

Selects the trigger coupling for the current source. .

slope

Defines the trigger point to be on either the **positive** or **negative** slope of the selected source.

holdoff

Holdoff disables the oscilloscope's trigger circuit for a definable period of time or number of events *after* a trigger event occurs.

By pressing the holdoff menu button, holdoff can be defined as:

- a period of time
- a number of events (an event being a change in the input signal that satisfies the trigger conditions)

The menu knob is used to vary the "holdoff" value.

Time holdoff values in the range 10 ns – 20 s may be entered.

Event counts in the range 1 – 10^9 are allowed.

EDGE Trigger Symbols

Trigger Symbols are used to allow immediate recognition of the current trigger conditions. Examples of Edge trigger symbols are given in the following figure. The heavier transitions show where a trigger will be generated.

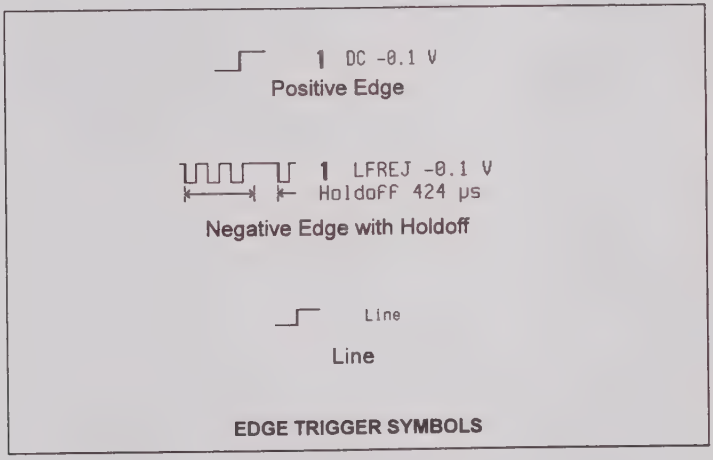

EDGE TRIGGER SYMBOLS

SMART TRIGGER

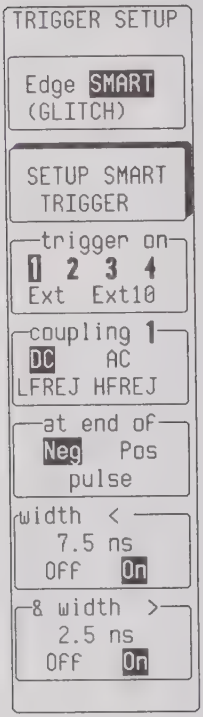

The following describes the SMART trigger setup menu (called up by pressing the SETUP SMART TRIGGER menu button).

After activating the SMART trigger with the top menu button, all of the parameters for the current SMART trigger are shown for modification in the menu.

The SETUP SMART TRIGGER menu button gives access to a lower level menu where a different SMART trigger can be chosen. The top button in this menu gives the choice of SMART trigger types available (see following pages).

GLITCH Trigger

The GLITCH trigger tests the pulse width – at the trigger level – of the input signal. It is mainly used to trigger on glitches (fast transitions) that may occur in a signal under test.

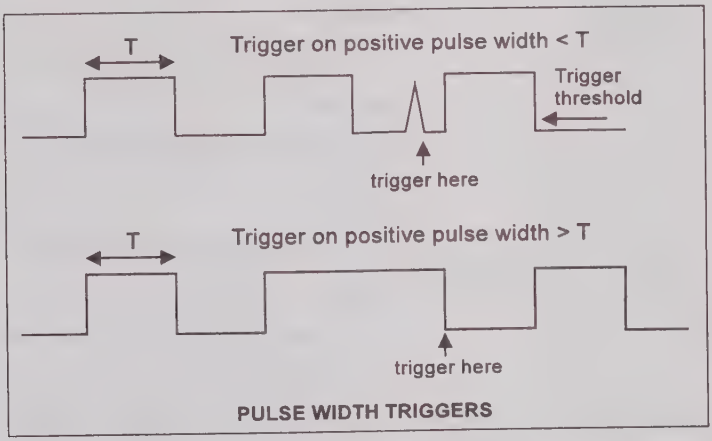

PULSE WIDTH TRIGGERS

This trigger generates an event at the end of a pulse that satisfies the desired limits on its width. Both negative and positive pulses can be used. The width limits can be chosen as smaller or greater than a given value, within a time window, or outside a time window.

This feature offers a wide range of capabilities for application fields as diverse as digital and analog electronic development, ATE, EMI, telecommunications, and magnetic media studies. Catching elusive rare glitches becomes very easy. In digital electronics, where the circuit under test normally uses an internal clock, a glitch can be theoretically defined as any pulse with a width smaller than the clock period (or half period).

In a broader sense, a glitch can be defined as a pulse much faster than the waveform under observation.

Widths with 2.5 ns resolution starting at a minimum value of 2.5 ns can be selected. For recurrent glitches, the oscilloscope's random interleaved sampling mode allows glitch visualization with an equivalent sampling rate of up to 10 GS/s, i.e. one sample point every 100 ps.

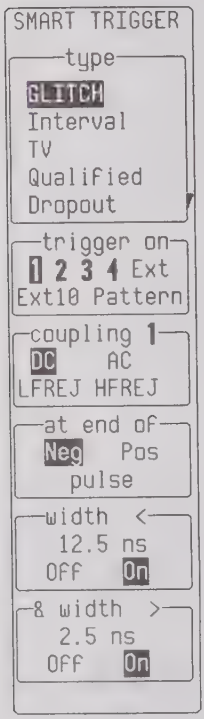

type

Select **GLITCH** trigger.

trigger on

Selects the source of the GLITCH trigger.

coupling

Selects the coupling of the GLITCH trigger.

at end of

Defines the test on either **positive** or **negative** pulses.

width <

Trigger if the pulse is smaller than the value defined in that field. The value can be adjusted with the menu knob associated with the field. The test can be turned on or off by pressing the menu button, and can be used in combination with the **width >** test.

Width values in the range 2.5 ns to 20 s may be entered.

& width >

Trigger if the pulse is greater than the value defined in that field. The value can be adjusted with the menu knob associated with the field. The test can be turned on or off by pressing the menu button, and can be used in combination with the **width <** test.

The two width limits are combined to select glitches within (&) a window if the width < value is greater than the width > value. Otherwise, they are combined to select glitches outside of (OR) the window.

When "Pattern" is selected in GLITCH trigger type, the instrument triggers on the logic AND of up to four sources (up to two on 2–channel instruments). See also Pattern trigger, page 11-19.

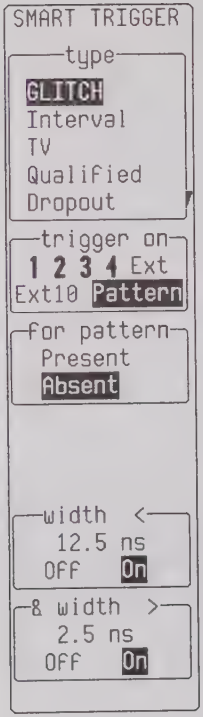

trigger on

Select **Pattern**.

for pattern

Select pattern **Present** or **Absent**.

width <

Trigger if the pattern is present – or absent – for less than the time value defined in that field. The value can be adjusted with the menu knob associated with the field. The test can be commuted to **for >** by pressing the menu button.

& width >

Trigger if the pattern is present – or absent – for more than the time value defined in that field. The value can be adjusted with the menu knob associated with the field. The test can be commuted to **for <** by pressing the menu button.

Interval Trigger

Similar to GLITCH trigger except that the test is performed over an interval width rather than over a pulse width. See figure below.

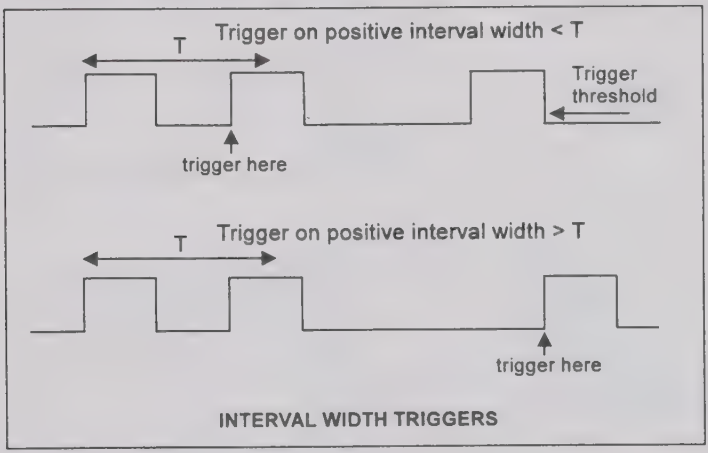

INTERVAL WIDTH TRIGGERS

This trigger generates an event if the interval between two similar transitions of the trigger signal satisfies the desired limits. It is similar to the GLITCH trigger except that the lower time limit is 10 ns.

Missing bits in long data streams are easily triggered on using the interval-width triggering facility. For ranging applications, interval trigger may be used to ignore unwanted signal reflections.

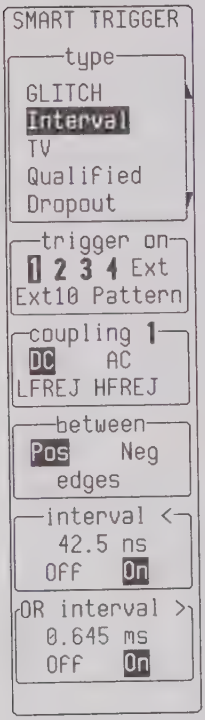

type

Select **Interval** trigger.

trigger on

Selects the source of the Interval trigger.

coupling

Selects the coupling of the Interval trigger.

between

Defines the interval between two adjacent **positive** or **negative** edges.

interval <

Trigger if the interval is smaller than the value defined in that field. The value can be adjusted with the menu knob associated with the field. The test can be turned on or off by pressing the menu button, and can be used in combination with the **interval >** test.

Interval values in the range 10 ns to 20 s may be entered.

OR interval >

Trigger if the interval is greater than the value defined in that field. The value can be adjusted with the menu knob associated with the field. The test can be turned on or off by pressing the menu button, and can be used in combination with the **interval <** test.

The two interval limits are combined to select intervals within (&) a window if the interval < value is greater than the interval > value. Otherwise, they are combined to select intervals outside of (OR) the window.

TV Trigger

The TV trigger allows stable triggering on standard or user-defined composite video signals. The oscilloscope can trigger on a specific line of a given field.

This trigger is a special form of the Edge-qualified trigger. A composite video signal on the trigger input is analyzed to provide a signal for the beginning of the chosen field (any, odd, or even) and a signal at the beginning of each line. The field signal provides the starting transition and the beginning of line pulses are counted to allow the final trigger on the chosen line. The TV trigger includes an enhanced field counting capability which can maintain the trigger on a known field relative to some initial trigger (FIELDLOCK). The field, number of fields and the field rate, interlace factor, and number of lines/picture must be specified for this feature. Standard settings exist for the most popular forms of TV signals. The TV trigger can also function in a simple any-line mode. Applications can be found wherever TV signals are present.

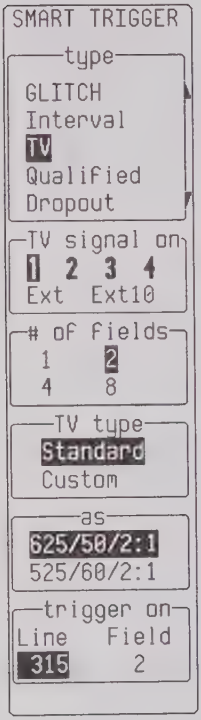

type

Select **TV** trigger.

TV signal on

Selects the source of the TV trigger.

# of fields

Defines the number of fields (up to 8).

TV type

Selects either standard or custom TV decoding.

as

When the TV type on the above field is set to standard, selects between 625/50/2:1 or 525/60/2:1 standard. When the TV type is set to custom, defines the number of lines, number of cycles, and interlacing factor for non-standard TV signals.

trigger on

Selects the line and field number the oscilloscope should trigger on.

NOTES

A. Most TV systems have more than two fields and the enhanced field-counting capability (FIELDLOCK) allows the oscilloscope to trigger consistently on a chosen line within a chosen field of the signal. It should be noted that the field numbering system is relative in that the oscilloscope cannot distinguish between lines 1, 3, 5, and 7 (or 2, 4, 6, and 8) in an absolute way.

B. For each of the characteristics the following remarks apply:

1) 625/50/2:1 (European style PAL and SECAM systems)

This setting should be used for most of the standard 50 field/s signals. The lines may be selected in the range 1 to 626 where line 626 is identical to line 1.

Number of fields = 8 should be very useful for color PAL signals. Number of fields = 4 is appropriate for SECAM signals.

2) 525/60/2:1 (American style NTSC systems)

This setting should be used for standard 60 field/s NTSC signals. The lines are selectable in the range 1 to 1051, where line 1051 is identical to line 1.

Number of fields = 4 should be very useful for American-style NTSC systems.

3) ?/50/?, ?/60/?

In order to allow maximum flexibility, no line-counting convention is used. The line count should be thought of as a line-synchronizing pulse count, and it includes the transitions of the equalizing pulses. For certain extreme cases of TV signals, the field transition recognition will no longer work. In this case, only the "any line" mode will be available.

C. The enhanced field-counting capability cannot be used for RIS acquisitions.

D. Composite video signals must have negative-going synch to be decoded correctly.

Qualified Trigger

In this mode a transition of one signal above or below a given level, the validation, serves as an enabling condition to a second signal which is the source of the trigger. The trigger can occur either immediately after the validation, within a time limit after the validation, or after a predetermined time delay or count of potential trigger events. It is important to note that the time delay or trigger count is restarted at every validation. For the State-qualified mode of this trigger, the amplitude of the first signal must remain in the desired state until the trigger occurs. In the Edge-qualified mode, the validation is sufficient and there is no additional requirement placed on the first signal.

Typical applications can be found wherever time violations may occur, for example in micro-processor debugging or telecommunications.

State-Qualified Trigger

In **State** mode, the qualifier signal is valid when it goes and stays above (or below) a defined threshold. A trigger is accepted – while the qualifier signal is valid – before or after a given time or after a given number of trigger events. When the qualifier signal ceases to be valid, the time– and event–counters are reset.

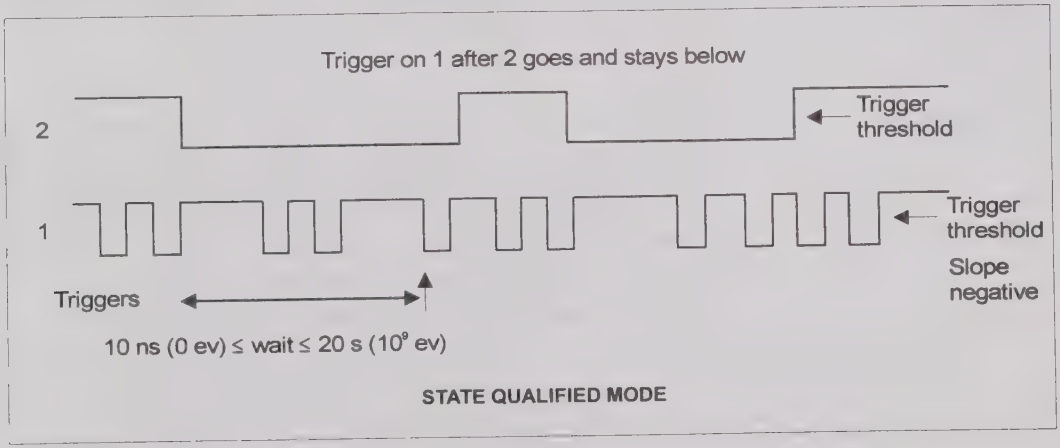

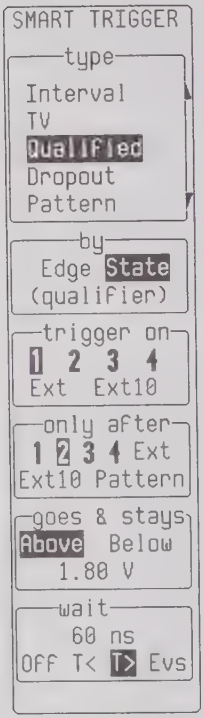

type

Select **Qualified** trigge. r

by

Select **State**.

trigger on

Selects the trigger source. The other conditions for this source can be set up using an Edge trigger.

only after

Selects the qualifier source. The other conditions for this source can be set up using an Edge trigger.

goes & stays

The rotary knob adjusts the qualifier threshold and the pushbutton determines whether the qualifier signal is valid above or below that threshold. When "Pattern" is selected as the qualifier source, this field determines whether the pattern should be "present" or "absent". See also Pattern trigger, page 11–19.

wait/within

Specifies the time limit (T<) for accepting the trigger event. Alternatively, it specifies how much time (T>) or how many trigger events (Evs) should be allowed before the acquisition is taken on the next trigger event. The qualifier signal must remain valid until the final trigger has been received.

The time value can be chosen in the range 10 ns – 20 s.

The trigger event count can be chosen in the range 1 – 10^9.

Edge-Qualified Trigger

In **Edge** mode, the qualifier signal is valid as soon as it has gone above (or below) a defined threshold (valid transition). A trigger is accepted within a time or after a given time or number of trigger events. However, as soon as a new valid transition occurs, the time– and event–counters are reset.

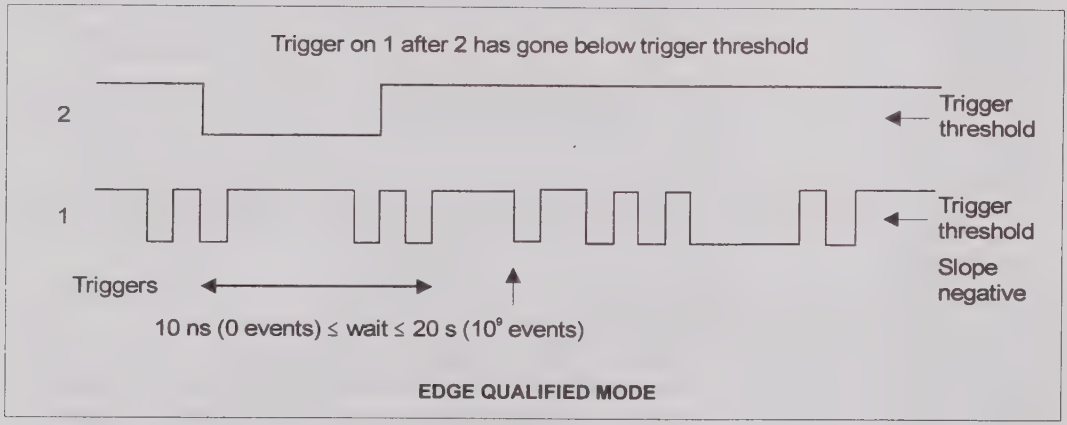

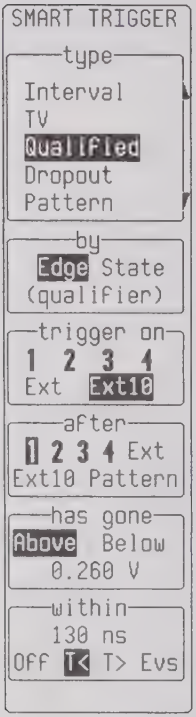

type

Select **Qualified** trigge. r

by

Select **Edge**.

trigger on

Selects the trigger source. The other conditions for this source can be set up using an Edge trigger.

after

Selects the qualifier source. The other conditions for this source can be set up using an Edge trigger.

has gone

Adjusts the qualifier threshold and determines whether the qualifier signal is valid once it *has gone* above or below that threshold. When "Pattern" is selected as the qualifier source, this field determines whether the pattern should be "present" or "absent". See also Pattern trigger, page 11–19.

wait/within

Specifies the time limit (T<) for accepting the trigger event. Alternatively, it specifies the delay in time (T>) or number of trigger events (Evs) after a valid transition has occurred. A trigger can only be accepted after this delay

Note: Any subsequent qualifier event restarts this count.

The time value can be chosen in the range 10 ns – 20 s.

The trigger event count can be chosen in the range 1 – 10^9.

Dropout Trigger

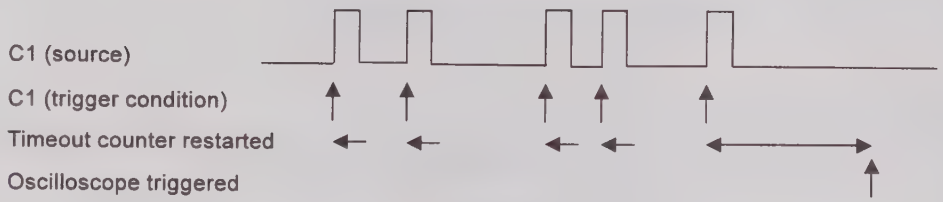

DROPOUT TRIGGER MODE

In this mode, a trigger is generated if edge-like signal transitions cease on the trigger source for the timeout value selected. The trigger event is generated at the end of the timeout period following the "last" trigger source transition.

A typical application is to look at the last "normal" interval of a signal that has disappeared completely. This is an essentially single-shot application, usually with a pre-trigger delay. A RIS acquisition does not make any sense since the timing of the trigger timeout is not sufficiently well correlated with the input channel signals.

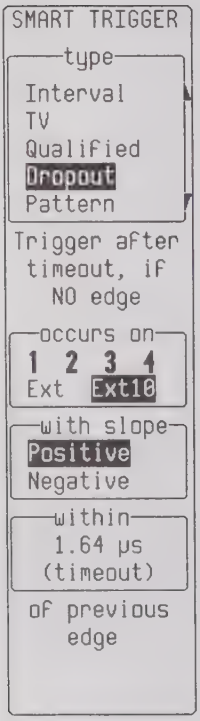

type

Select **Dropout** trigger.

trigger after timeout, if NO edge occurs on

Selects the Dropout trigger source.

with slope

Defines whether the measurement has to be made starting on a **Positive** or **Negative** slope of the trigger signal.

within... of previous edge

Defines the time-out value in the range 25 ns – 20 s.

Pattern Trigger

A pattern trigger is defined as a logical AND combination of the states of Channel 1, Channel 2, Channel 3, Channel 4 and EXT. The states are defined as being either low (L) or high (H) or don't care (X) with respect to the individually defined trigger thresholds. Furthermore, the user decides whether the oscilloscope should trigger at the beginning of the defined pattern or at the end, i.e. when the pattern is "entered" or "exited".

The pattern trigger will be appreciated every time complex logic has to be tested. Examples are: computer or microprocessor debugging; High Energy Physics where a physical event is identified by several events occurring simultaneously; and debugging of data transmission buses in telecommunications.

When set to pattern trigger, the oscilloscope always checks the logic AND of the defined input logic states. However, with the help of de Morgan's laws, the pattern becomes much more general. To demonstrate this, consider an example which is of particular importance, that is a *bi-level* or *window* trigger.

Bi-level trigger means that the user is expecting a single-shot signal where the amplitude will go outside a known range in either direction.

To set up a bi-level trigger the signal should be connected to two inputs, Channel 1 and Channel 2 (or any other pair of triggerable inputs). For example, the threshold of Channel 1 should be set to +100 mV and the threshold of Channel 2 to –200 mV. The required bi-level trigger will occur if the oscilloscope triggers on Channel 1 for any pulse greater than +100 mV or on Channel 2 for any pulse more negative than –200 mV. For improved precision, the gains of the two channels should be at the same setting.

In Boolean notation we can write:

$$\text{Trigger} = \text{CH1} + \overline{\text{CH2}}$$

i.e. trigger when entering the pattern:

CH1 = high OR CH2 = low

By de Morgan's laws this is equivalent to:

$$\text{Trigger} = \overline{\overline{\text{CH1}} \cdot \text{CH2}}$$

i.e. trigger when exiting the pattern:

CH1 = low AND CH2 = high

This configuration can be programmed easily.

The possibility of setting the threshold individually for each channel extends this method to a more general window trigger where, in order to have a trigger it is required that the input pulse amplitude lies within or outside a given arbitrary window.

The pattern trigger has been designed to let the user choose the trigger point. By choosing LHX entering, the trigger will be given at the moment that the pattern LHX becomes true.

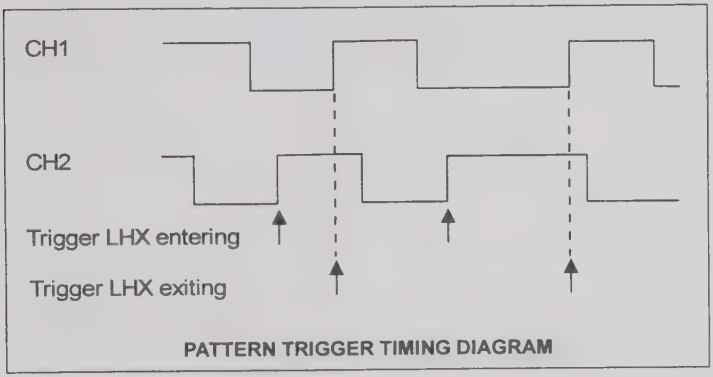

PATTERN TRIGGER TIMING DIAGRAM

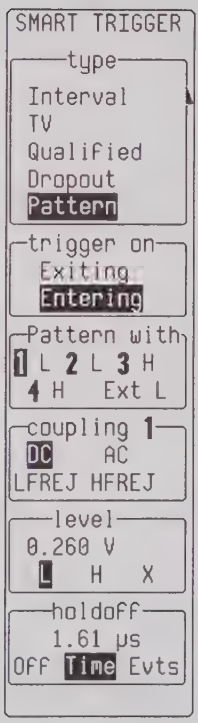

type

Select **Pattern** trigger.

trigger on

Select **Entering** if the oscilloscope ought to trigger when the pattern starts to be "true", or **Exiting** if it ought to trigger when the pattern stops being "true".

Pattern with

Select the channel to be modified, then change settings in lower menu boxes.

coupling

Select coupling desired.

Note: HF coupling is not available for Pattern trigger.

level

Use the knob to adjust the level, and the button to choose between **L** (Low), **H** (High), or **X** (Don't care).

holdoff

Holdoff disables the oscilloscope's trigger circuit for a definable period of time or number of events *after* a trigger event occurs.

By pressing the holdoff menu button, holdoff can be defined as:

- a period of time
- a number of events (an event being a change in the input signals that satisfies the trigger conditions)

The menu knob is used to vary the "holdoff" value.

Time holdoff values in the range 50 ns – 2.0 s are allowed.

Event counts in the range 1 – 10^9 are allowed.

SMART Trigger Symbols

Trigger Symbols are used to allow immediate recognition of the current trigger conditions. Examples of SMART trigger symbols are given in the following figure. The heavier transitions show where a trigger will be generated.

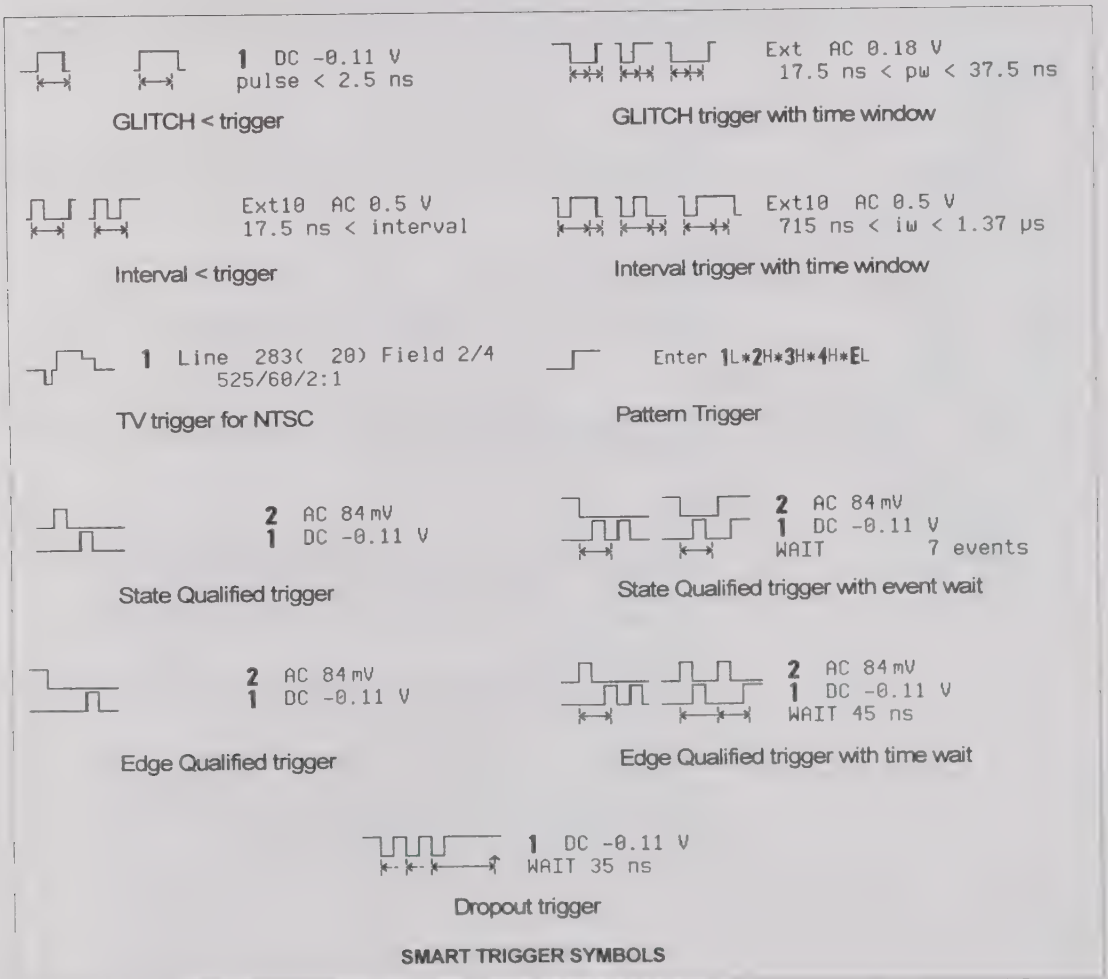

SMART TRIGGER SYMBOLS

2–channel oscilloscopes

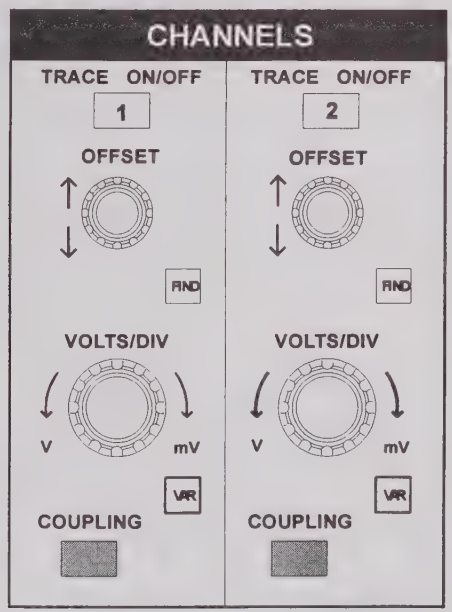

TRACE ON/OFF Pressing a TRACE ON/OFF button causes the corresponding channel trace to be displayed or to be switched off.

OFFSET This knob vertically positions the channel.

FIND This button automatically adjusts the offset and the volts/div to match the input signal in the channel.

VOLTS/DIV Selects the vertical sensitivity factor in a 1–2–5 sequence, or continuously (see VAR). The effect of gain changes on the acquisition offset can be chosen as described in the SPECIAL MODES menu (Chapter 19).

VAR This button allows the user to choose whether the VOLTS/DIV knob modifies the vertical sensitivity in a continuous manner or in discrete 1–2–5 steps.

The format of the vertical sensitivity in the acquisition summary field (bottom left of the screen) shows whether the VOLTS/DIV knob is operating in the "continuous" or "stepping" mode.

COUPLING This button calls up the COUPLING menu described in Chapter 13.

4–channel oscilloscopes

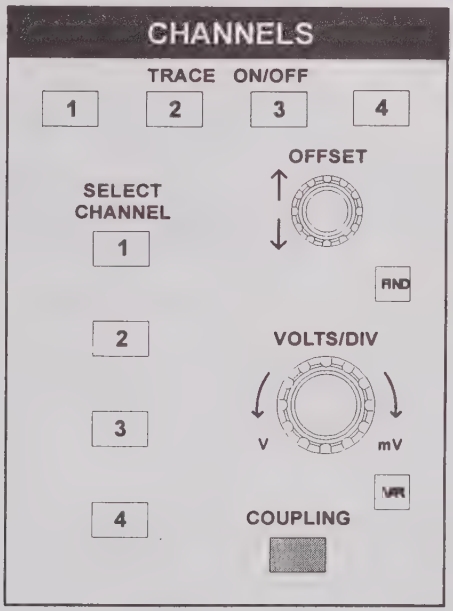

TRACE ON/OFF

Pressing a TRACE ON/OFF button causes the corresponding channel trace (1, 2, 3 or 4) to be displayed or to be switched off. The OFFSET and VOLTS/DIV controls will then be attributed to this channel, which will be referred to as the active channel.

SELECT CHANNEL

The SELECT CHANNEL buttons are used to activate the corresponding channel (i.e. all the vertical controls will be attributed to it). This control is independent of whether the channel is displayed or not. The selected channel is highlighted in the acquisition summary field.

OFFSET

This knob vertically positions the active channel.

FIND

This button automatically adjusts the offset and the volts/div to match the input signal in the active channel.

VOLTS/DIV Selects the vertical sensitivity factor in a 1–2–5 sequence, or continuously (see VAR). The effect of gain changes on the acquisition offset can be chosen as described in the SPECIAL MODES menu (Chapter 19).

VAR This button allows the user to select whether the VOLTS/DIV knob modifies the vertical sensitivity in a continuous manner or in discrete 1–2–5 steps.

The format of the vertical sensitivity in the acquisition summary field (bottom left of the screen) shows whether the VOLTS/DIV knob is operating in the "continuous" or "stepping" mode.

COUPLING This button calls up the COUPLING menu described in Chapter 13.

COUPLING MENU

The Coupling menu is used to select:

- The coupling and grounding of each input channel
- ECL or TTL gain, offset and coupling preset for the channel shown
- The bandwidth limiter for all of the channels
- The probe attenuation of each input channel

Note: On 4–channel models the SELECT CHANNEL buttons on the front panel allow the selection of the channel number in the COUPLING menu. On 2–channel models, a dedicated COUPLING menu button is available for each channel.

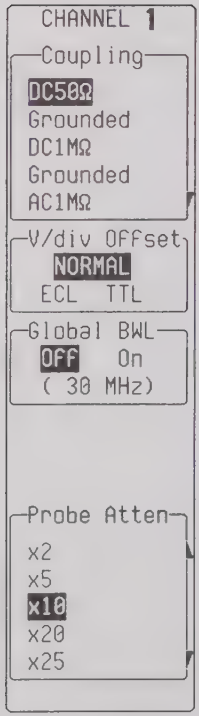

Coupling

Selects the coupling of the input channel. If an OVERLOAD condition is detected on a channel, the instrument will automatically set this channel to the grounded state. The button will then show OVERLOAD.

V/div Offset

If NORMAL is highlighted, pushing the button once sets the offset, Volts/div, and input coupling to properly display ECL signals. Pushing the button a second time gives the settings for TTL signals. Pushing the button once more returns the settings to those used at the last manual setup of the channel.

Global BWL

Sets the bandwidth limit OFF or ON.)

The bandwidth can be reduced from 400 MHz to 30 MHz (–3dB). Bandwidth limiting may be useful in reducing signal and system noise or preventing high-frequency aliasing. For example, bandwidth limiting reduces any high-frequency signals that may cause aliasing in single-shot applications.

Note: This command is global and affects all the input channels.

Probe Atten

Sets the probe attenuation factor related to the input channel.

ProBus SYSTEM

The ProBus™ system provides a complete measurement solution from probe tip to oscilloscope display, automatically sensing the probe attenuation. Vertical gain, offset and coupling are all automatically handled via the usual front-panel controls so that the probing system is totally integrated to the instrument – and transparent to the operator. In addition, each probe has an offset and gain correction table that is automatically read by ProBus and taken into account in the oscilloscope.

This menu shows the settings available for AP020 ×10 active probe.

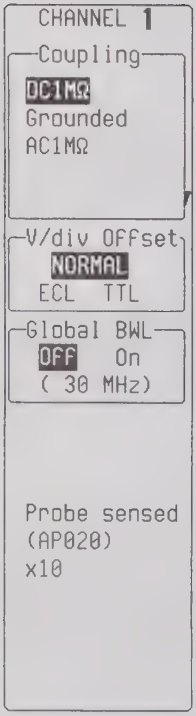

MORE ON COUPLING

In the AC position, signals are coupled capacitively, thus blocking the input signal's DC component and limiting the signal frequencies below 10 Hz.

In the DC position, all signal frequency components are allowed to pass through, and 1 MΩ or 50 Ω may be chosen as the input impedance. It should be noted that with 1 MΩ input impedance the bandwidth is limited to approximately 250 MHz.

The maximum dissipation into 50 Ω is 0.5 W and inputs will automatically be disconnected whenever this occurs. An indication of the overload can be found in the Acquisition Summary Field and in this menu. The overload condition is reset by removing the signal from the input and selecting the 50 Ω input impedance again.

PROBES

Model PP002 passive probes are supplied with the oscilloscope. These probes have 10 MΩ input impedance and 16 pF capacitance. The system bandwidth with these probes is DC to 250 MHz (typical) in 1 MΩ DC coupling, and >10 Hz to 250 MHz in AC coupling.

To calibrate the PP002 probe, connect it to one of the input channels' BNC connectors. Connect the probe's grounding alligator clip to the CAL BNC ground and touch the tip to the inner conductor of the CAL BNC. The CAL signal is a 1 kHz square wave, 1 V p–p.

Set the channel coupling to DC 1 MΩ, turn the trace ON and push AUTO SETUP to set up the oscilloscope. If over– or undershoot of the displayed signal occurs, the probe can be adjusted by inserting the small screwdriver, supplied with the probe package, into the trimmer on the probe's barrel and turning it clockwise or counterclockwise to achieve the optimal square-wave contour.

A wide range of processing functions can be performed on acquired waveforms. These capabilities are accessed through the ZOOM + MATH controls on the front panel.

Four (processed) traces, A, B, C, and D are available for either zooming alone or for waveform mathematics.

ZOOM

Any trace, A, B, C or D, can be set up to zoom any of the acquired traces C1, C2 (C3, C4), any of the reference memories M1 – M4 (see Chapter 20 on storing waveforms), or any of the other traces A, B, C or D (but not itself). The Displayed Trace field will show the source of the ZOOM. The four rotary knobs of this front-panel section are used to manipulate the horizontal and vertical positions and the horizontal and vertical expansion factors of the zoomed trace. When several traces are displayed, the controls must be assigned to the desired trace with the SELECT A B C D button, since only one trace can be modified at a time.

Precise Timing Measurements With Zooming

Even on the models with 50k points per channel, the horizontal expansion factor can be as large as 1000, greatly improving the time resolution on the viewed trace. It is possible to have several traces zoom onto the same waveform for precise timing measurements.

As an example, consider a waveform where the time interval between two signal transitions that are about 500 μs apart must be measured accurately. This waveform should be acquired with a 0.1 ms/div timebase so that the transitions appear on the screen about 5 horizontal divisions apart. Trace A can now be set up to zoom onto the first transition of the signal, while trace B is set up to zoom onto the second transition.

In an instrument with 20000 points per channel, the traces can be expanded to as much as 0.1 μs/div, i.e. a factor 1000. By applying the "relative horizontal" cursors (see Chapter 22) the 500 μs time interval can be measured with a resolution of better than 5 ns. Thus, the combination of long memory with zooming allows time interval measurements with great accuracy.

Multi–Zoom

It is sometimes convenient to be able to move the zoomed (intensified) region along two or more different traces, or two or more regions of the same trace, simultaneously. When the Multi-Zoom feature is turned on in the MATH SETUP menu, the horizontal zoom and position controls apply simultaneously to all displayed traces A,

B, C and D, allowing a convenient simultaneous viewing of similar sections of different traces. The vertical controls still act individually on the traces, and can be switched from one trace to another with the SELECT A B C D button. The boxes around the trace titles in the Displayed Trace Field show whether the Multi-Zoom is on or off.

Viewing Reference Memories

The reference memories M1 M4 cannot be displayed directly. They must be viewed through one of the traces A, B, C or D, and the menu MATH SETUP is used to define the trace as a zoom on the desired reference memory. A shortcut is available in the menu RECALL WAVEFORM (Chapter 21), in which it is possible to "recall" a reference waveform into one of the traces A, B, C or D. Whenever such a "recall' is executed, the destination trace is redefined as a zoom of the reference memory and the trace display is turned on. The previous definition of the destination trace is lost.

WAVEFORM MATHEMATICS

Any trace A, B, C or D can be set up as a mathematical function. Waveform negation, identity, addition, subtraction, multiplication and division, as well as summed averaging of up to 1000 waveforms and the (sin x)/x interpolation function, are standard. The waveform processing options WP01 offer a wide range of additional possibilities:

- continuous averaging
- summed averaging of up to 1,000,000 waveforms
- enhanced resolution by up to 3 bits with filtering
- extrema, i.e. envelope of many waveforms
- mathematical functions, such as integral, derivative, logarithm, exponential, square, and square root
- Fast Fourier Transform (option WP02), including FFT averaging

Waveform mathematics can be applied to any channel C1, C2 (C3, C4) or any reference memory M1 – M4. Also, they can be applied to the traces A, B, C or D so that several computations can be executed in sequence. For example, trace A can be set up as the difference between C1 and C2; then, trace B can be defined as the average of A; finally, trace C can be the integral of B. Thus, trace C displays the integral of the averaged difference between channels 1 and 2.

In order to avoid slowing the instrument down for unwanted computations, a mathematical function is only computed when its display is turned on. However, in the example above, it would be sufficient to

display trace C only; the instrument knows that it must compute A and B as intermediate steps to C.

The Displayed Trace field will show a processing title for each trace on display. If the title is missing, it is an indication that the processing desired cannot be done and the contents of the trace have been left unchanged.

Zoom of Math Functions

When a trace A, B, C or D is defined as a mathematical function (rather than a Zoom only), the zoom controls are still operative. Thus, it is not necessary to define another trace as a zoom of this function. In order to view the entire mathematical function, cancel any expansion or position change by pressing the button RESET.

Speed-up of Waveform Mathematics

Waveform processing can take an appreciable execution time when operating on many data points. The time, however, can be reduced by limiting the number of data points which are used in the computation. The instrument then executes the waveform processing function on the entire waveform by taking every Nth point, where N depends on the timebase and the desired maximum number of points. The first point of such a reduced record is always the data value at the left-hand edge of the screen.

What happens when channels are combined?

"Zoom & Math" traces A, B, C, D and reference memories M1, M2, M3, M4 will use the instrument's system memory, which is dynamically allocated to each trace as necessary.

Since more acquisition memory — up to 4M on 2–channel L models and up to 8M on 4–channel L models — can be achieved by combining two or four channels, one single 8M trace can "eat up" all of the reference memory capacity in the instrument, or all of its "Zoom & Math" trace capacity. When this is the case, a warning message prevents accidental storing of a new trace to a reference memory already in use.

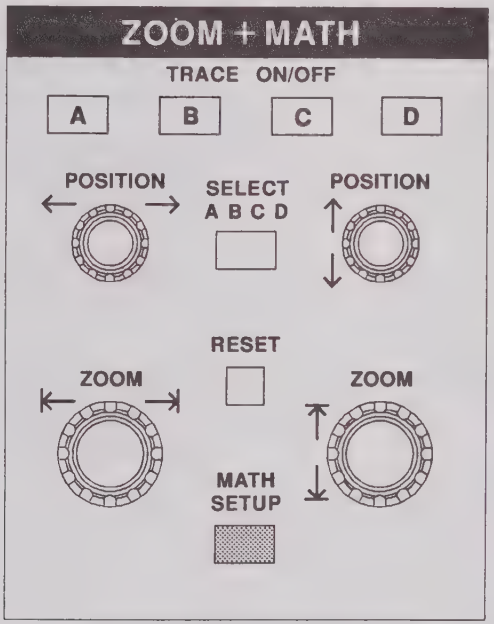

TRACE ON/OFF

Pressing a TRACE ON/OFF button causes the corresponding trace (A, B, C or D) to be displayed. The POSITION and ZOOM knobs together with the RESET button will then be attributed to this trace, which will be referred to as the active trace.

SELECT TRACE

If more than one trace is displayed, the SELECT ABCD button causes the next trace (in the ABCD sequence) to become active.

⇔ POSITION

Horizontally repositions an expanded trace. If the source of the expanded waveform is displayed, it will show an intensified region corresponding to the area of expansion. .

⇕ POSITION

Vertically repositions the active trace.

⇔ ZOOM

Horizontally expands/contracts the active trace. If the source of the expanded trace is also displayed, it will show an intensified region corresponding to the area of expansion. .

⇕ ZOOM

Vertically expands/contracts the active trace. The ⇕ position is adjusted according to the selection made in the SPECIAL MODES menu (Chapter 19).

RESET

This button resets any previously adjusted ⇔ POSITION, ⇕ POSITION, ⇔ ZOOM or ⇕ ZOOM to the initial values of the source trace.

MATH SETUP

This button calls up the MATH SETUP menu described in Chapter 16. In addition to the definition of the traces A, B, C, D, this menu also controls the multi-zoom mode and the choice of sequence segment displayed by an expand.

MATH SETUP MENU

The Math Setup menu is used to select:

- Zoom features: vertical, horizontal, multi-zoom, etc…
- Math features: Arithmetic, Average, Enhanced Resolution, Extrema, Fast Fourier Transform (FFT), and various functions such as integral, exponential, square root…
- A sequence segment to be displayed (see Chapter 8 for a description of Sequence mode).

HOW TO USE MATH

Four traces (A,B,C,D) are provided for "Math" usage. They can be configured to execute any Zoom or Math function, and they can be chained. For instance:

- Trace A can be configured to be an averaging of Channel 1
- Trace B can be a Fourier Transform (FFT) of A
- Trace C can be a Zoom of B

All these traces can be seen SIMULTANEOUSLY on the screen by pressing the required TRACE ON/OFF buttons. Also, any function can be zoomed directly.

STANDARD AND OPTIONAL PROCESSING PACKAGES

The standard Waveform Processing features of the instrument include Summed Averaging up to 1000 sweeps and Arithmetic operations (Add, Subtract, Multiply, Divide, Negate, Identity), and the (sin x)/x interpolation function.

The WP01 optional Waveform Processing firmware adds the following functionalities:

- Summed Averaging up to 1 million sweeps, Continuous Averaging up to 1024 sweeps, Reciprocate, Rescale, Absolute Value, Derivative, Integral, Logarithm (e), Logarithm (10), Exponential (e), Exponential (10), Square, Square Root.
- Enhanced Resolution: Digital filtering allows 0.5– to 3–bit vertical resolution improvement.

The WP02 optional Waveform Processing firmware adds frequency domain analysis (FFT and FFT Power Averaging), as well as Rescale in both time and frequency domains.

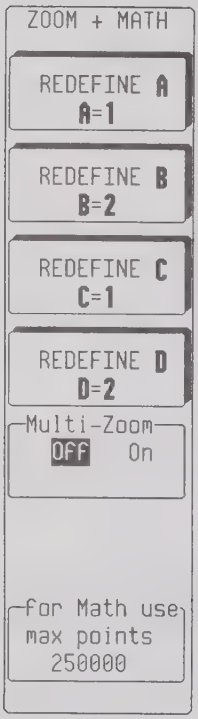

REDEFINE

Selects the trace to be redefined in the Setup menu. The various Setup menus are described in the rest of this chapter.

Multi–Zoom

When Multi–Zoom is ON, all the "Zoom" traces are simultaneously controlled by the POSITION and ZOOM knobs.

When Multi–Zoom is switched OFF, only the active trace (selected by pressing the SELECT ABCD button) is controlled by the POSITION and ZOOM buttons.

Selected

When a trace A...D that contains a Sequence mode waveform is selected, this box appears in the menu. It is used to select either a specific segment to be displayed in the trace or all the segments at once. Pressing the menu button toggles between a single **Segment** and **All Segments.** When a single segment is selected, the associated rotary knob can be used to step through the segments.

for Math use max points...

Selects the maximum number of points for all Math operations. Selecting a low number increases computation speed.

SETUP MENU FOR ZOOM

use Math?

Toggles between **No** (Zoom only) and **Yes** (Math + Zoom) setup.

Trace ... is ZOOM of

Selects the source trace on which the zoom will be applied.

SETUP MENU FOR ARITHMETIC

This menu allows addition, subtraction, multiplication and division. The two operands and the operator may be chosen in the three lower fields.

The menu illustrated on this page shows a setup of trace A as the sum of Channel 1 and Channel 2.

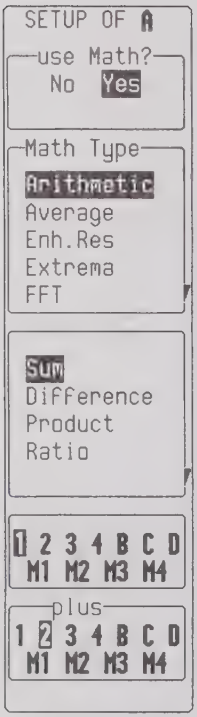

use Math?

Select **Yes**.

Math Type

Select **Arithmetic**.

SETUP MENU FOR AVERAGE

This menu allows summed (linear) averaging or continuous (exponential) averaging.

Summed averaging consists of the repeated addition, with equal weight, of successive source waveform records. If a stable trigger is available, the resulting average has a reduced random noise component, compared with a single-shot record. Whenever the maximum number of sweeps is reached, the averaging process stops. The process may be interrupted by switching the trigger mode from NORM to STOP or by turning the function trace OFF. Averaging will continue when these actions are reversed.

The accumulated average may be reset by either pushing the CLEAR SWEEPS button or by changing an acquisition parameter, such as input gain, offset or coupling, trigger condition, timebase or bandwidth limit. The number of currently averaged waveforms (of the function or of its expansion) is displayed in the Displayed Trace field.

Whenever the maximum number of sweeps is reached, a larger number of sweeps may be accumulated by simply changing the maximum number of sweeps in the setup menu. In this case care must be taken to leave the other parameters unchanged, otherwise a new averaging calculation is started.

When summed averaging is turned on, the display is updated at a reduced rate (about once every 1.5 s), to increase the averaging speed (points per second and events per second).

Summed averaging can be applied to sequence waveforms to give the average of the segments. It can also be applied to an expansion showing a segment of a sequence, to give the average waveform for that segment over many sequence acquisitions.

Continuous averaging (also called exponential averaging) consists of the repeated addition, with unequal weight, of successive source waveforms. The technique is particularly useful for reducing noise on signals that drift very slowly in time or amplitude. However, the statistics of a continuous average tend to be worse than those from a summed average on the same number of sweeps, since the most recently acquired waveform has more weight than all previously acquired ones. Therefore, the continuous average is dominated by the statistical fluctuations of the most recently acquired waveforms.

The weight of "old" waveforms in the continuous average gradually tends to zero (following an exponential rule) at a rate that decreases as the weight increases.

The menu below shows a setup of trace A as a Summed Average – over 1000 sweeps – of Channel 1.

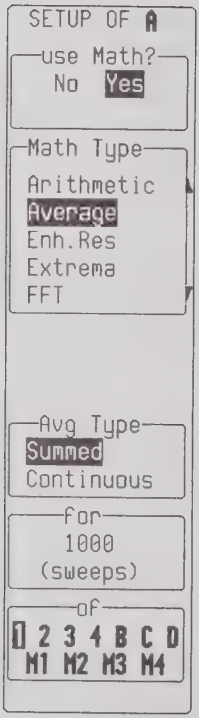

use Math?

Select **Yes**.

Math Type

Select **Average**.

Avg Type

Selects between **Summed** and **Continuous Average**.

for... / weight

In Summed Averaging mode, this field is used to define the number of sweeps desired for the operation. In Continuous Averaging mode, this field is used to define the weight (similar to the number of sweeps) desired for the operation.

In other words, in summed averaging, "for n sweeps" means the *first* n sweeps will be taken into account. In continuous averaging, "weight 1 : n" means that the last sweep will be given a weight of 1 and the previous result a weight of n in calculating the new average.

of

Selects the source trace to be averaged.

SETUP MENU FOR ENHANCED RESOLUTION

This menu allows the selection of low-pass digital filters that increase the resolution of the displayed signal to the detriment of its bandwidth. Appendix B gives a detailed explanation.

Note: These digital filters work very much like analog bandwidth-limit filters. In single-shot mode, these filters, as well as the sampling speed, affect bandwidth. If high bandwidth is needed at slow timebases, consider using averaging and repetitive sampling.

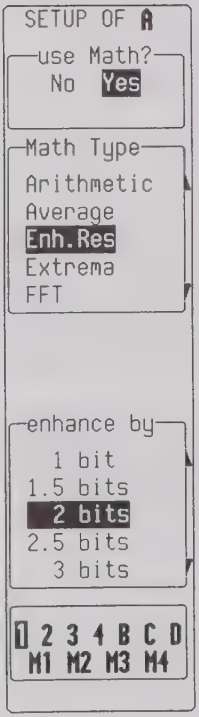

use Math?

Select **Yes**.

Math Type

Select **Enhanced Resolution**.

enhance by

Selects the different filters which will enhance the resolution of the displayed signal from 1 to 3 bits in 0.5–bit steps. The last box on the menu allows selection of the source trace to be filtered

SETUP MENU FOR EXTREMA

This menu is used to acquire the envelope of a trace over many acquisitions.

Extrema waveforms are computed by a repeated comparison of successive source waveform records with the already accumulated extrema waveform, which consists of a maxima record (roof) and a minima record (floor). Whenever a given data point of the new waveform exceeds the corresponding maximum value in the roof record, it replaces it. If the new data point is smaller than the corresponding floor value, it replaces it. Thus the maximum and the minimum envelope of all waveform records is accumulated.

Roof and **Floor** records can be displayed individually or both together.

Whenever the selected maximum number of sweeps is reached, the accumulation process stops. The process may be interrupted by switching the trigger mode from NORM to STOP or by turning the function trace OFF. Accumulation will continue when these actions are reversed. The currently accumulated extrema waveform may be reset by either pushing the CLEAR SWEEPS button or by changing an acquisition parameter, such as input gain, offset or coupling, trigger condition or the timebase or bandwidth limit. The number of currently accumulated waveforms is displayed in the Displayed Trace field of the function or of its expansion.

A larger number of sweeps may be accumulated by simply changing the maximum number of sweeps in the setup menu. In this case, care must be taken to leave the other parameters unchanged, otherwise the extrema calculation is started again.

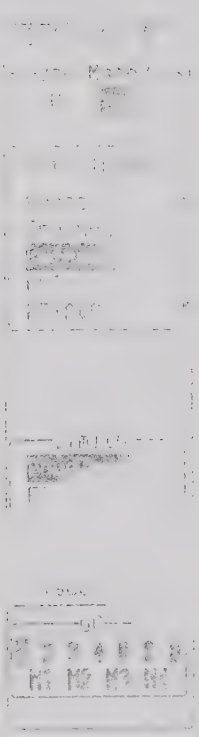

Math Type

Select Extrema

Selects between Envelope, Ho... only the low... part of the envelo... part of the envelope. Changin... to start again.

Selects the number of sweeps des...

Selects the source trace.

SETUP MENU FOR FFT AVERAGE

This menu is used to display the FFT power averaging of an FFT source trace.

Power averaging is useful for the characterization of broadband noise or of periodic signals for which a stable trigger signal is not available. Note that this type of averaging measures the total power (signal and noise) at each frequency.

Note: The source trace must be an FFT function.

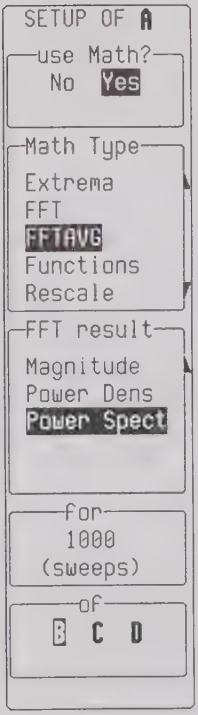

use Math?

Select **Yes**.

Math Type

Select **FFT AVG**.

FFT result

Selects the output format of the FFT Average: **Magnitude**, **Power Density**, **Power Spectrum**.

for

Selects the number of sweeps desired for the operation.

of

Selects the FFT source.

The FFT AVERAGE can be reset by pushing the CLEAR SWEEPS button. The number of currently accumulated waveforms is displayed in the Displayed Trace field of the function or its expansion.

SETUP MENU FOR FUNCTIONS

This menu is used to display any of the following functions:

Absolute value	Log 10 (base 10)
Derivative	Negation
Exp (base e)	Reciprocal
Exp 10 (base 10)	Sinx/x
Identity	Square
Integral	Square root
Log (base e)	

Notes:

Square Root is actually computed on the absolute value of the source waveform.

For logarithmic and exponential functions the numerical value (without units) of the input waveform is used.

For the integral function the source waveform may be offset by an Additive Constant in the range -10^{16} to $+10^{16}$ times the vertical unit of the source waveform.

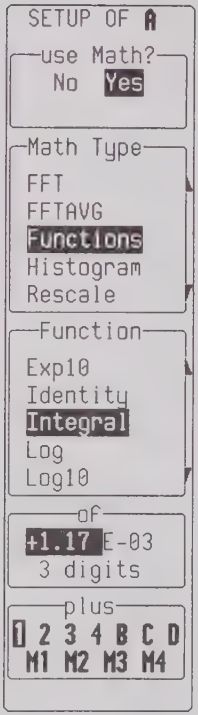

use Math?

Select **Yes**.

Math Type

Select **Functions**.

Function

Selects the function type.

of

Selects the signal offset. (Used to compensate for any DC offset in the signal.)

plus

Selects the source trace.

SETUP MENU FOR RESCALE

This menu is used to select a waveform and adjust the multiplication factor a and the additive constant b in:

$$(a * \text{waveform}) + b$$

Both constants can have values between -10^{15} and $+10^{15}$.

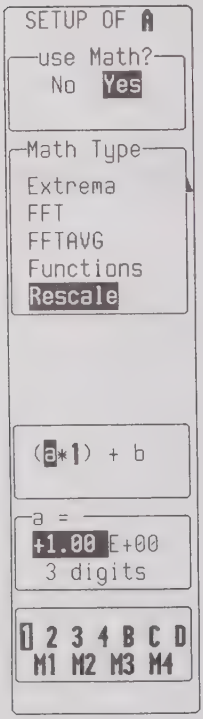

use Math?

Select **Yes**.

Math Type

Select **Rescale**.

Use the button next to **(a * 1) + b** to highlight either **a** or **b**.

a = (or b =)

Use this button to highlight the mantissa, the exponent, or the number of digits.

Use the knob to change the highlighted value.

The last box on the menu allows selection of the source waveform to be rescaled.

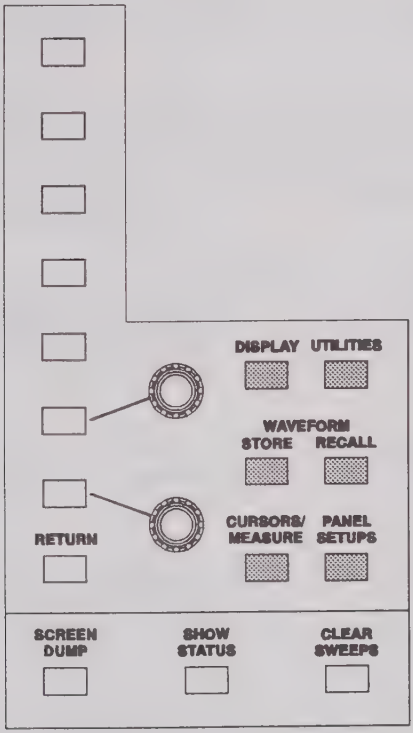

MENU BUTTONS

When a menu is activated by pressing one of the dark-grey menu-entry keys on the front panel, up to seven fields appear on the right-hand side of the display. These fields can be controlled by using one of the seven menu buttons.

The eighth (bottom) button marked RETURN is used to go back to a higher-level menu, or – when at the highest possible level – to switch the menu off.

MENU KNOBS

The two menu knobs are associated with the last two menu fields. Both the button and the adjacent knob provide control of the field. For example, the button may be used to step through a list of parameters and the knob used to set the selected parameter's value.

DISPLAY

This button calls up the DISPLAY menu, described in Chapter 18, which controls grids, intensities, persistence modes, etc.

UTILITIES

This button calls up the UTILITIES menu, described in Chapter 19, which controls printer setups, GPIB addresses, etc.

WAVEFORM STORE

This button calls up the WAVEFORM STORE menu, described in Chapter 20, which is used to store waveforms to internal or external memory.

WAVEFORM RECALL

This button calls up the WAVEFORM RECALL menu, described in Chapter 21, which is used to retrieve waveforms stored in internal or external memory.

CURSORS/MEASURE

This button calls up the CURSORS/MEASURE menu, described in Chapter 22, for precise cursor and parameter measurements on traces.

PANEL SETUPS

This button calls up the PANEL SETUPS menu, described in Chapter 23, which is used to save or recall a configuration of the instrument.

SCREEN DUMP

Causes a print or plot of the current screen display to an on-line hardcopy device, via the oscilloscope's GPIB or RS–232–C interface ports, or to an optional Centronics port, or to optional devices such as an internal floppy, memory card or printer. All the screen illustrations included in this manual were produced using the Screen Dump function. (See Hardcopy Setup Menu on page 19–2)

Once the SCREEN DUMP button has been pressed, *all* the displayed information will be copied. It is possible to copy the waveforms without also copying the grid, by turning the grid intensity down to 0 in the Display Setup menu.

While a screen dump is taking place, as indicated by the PRINTING or PLOTTING message on the lower right part of the screen, it can be aborted by pressing the SCREEN DUMP button a second time. Allow some time for the buffer to empty before copying stops.

Note: See Chapter 19, UTILITIES for HARDCOPY SETUP.

SHOW STATUS

This button calls up the STATUS menu, described in Chapter 24, which shows summaries of the instrument's status regarding acquisition, system, etc.

CLEAR SWEEPS

Many operations require several acquisitions (referred to as sweeps), among which are averaging (see Chapter 16 for description of AVERAGE menu), persistence, and pass/fail testing. The CLEAR SWEEPS button "restarts" these operations by resetting the sweep counter(s) to zero.

GENERAL INSTRUMENT RESET

To reset the instrument, simultaneously press the AUTO SETUP button, the top menu-button, and the RETURN button. The instrument will revert to its default power-up settings.

DISPLAY MENU

The Display menu is used to select:

- Standard or XY mode
- Persistence OFF or ON
- Dot Join OFF or ON
- The number of grids on screen
- The intensity adjustments for the waveforms and text
- The intensity adjustments for the grids

STANDARD DISPLAY VS. XY DISPLAY

The standard display allows the presentation of source waveforms versus time (or versus frequency for FFTs).

The XY display allows the presentation of one source waveform versus another.

The XY display can be generated if the traces selected have the same time or frequency span (same T/div) and have the same horizontal unit (second or Hertz). As soon as two compatible traces are selected, the XY display is automatically generated. If incompatible traces are selected, a warning message is displayed at the top of the screen. If the two compatible traces are not matched in time, their XY diagram will still be displayed with an indication of the shifting – in time or in frequency – between the two traces. The ΔT or Δf indicator is displayed in the displayed trace field on the left of the screen.

PERSISTENCE DISPLAY

In Persistence Display – available in both Standard and XY mode – the oscilloscope can display points so that they accumulate on screen over many acquisitions. "Eye diagrams" and "Constellation displays" can be achieved using this display mode. The most recent sweep is displayed as a "vector" trace over the persistence display. This last feature, however, is not available in XY or in Sequence mode.

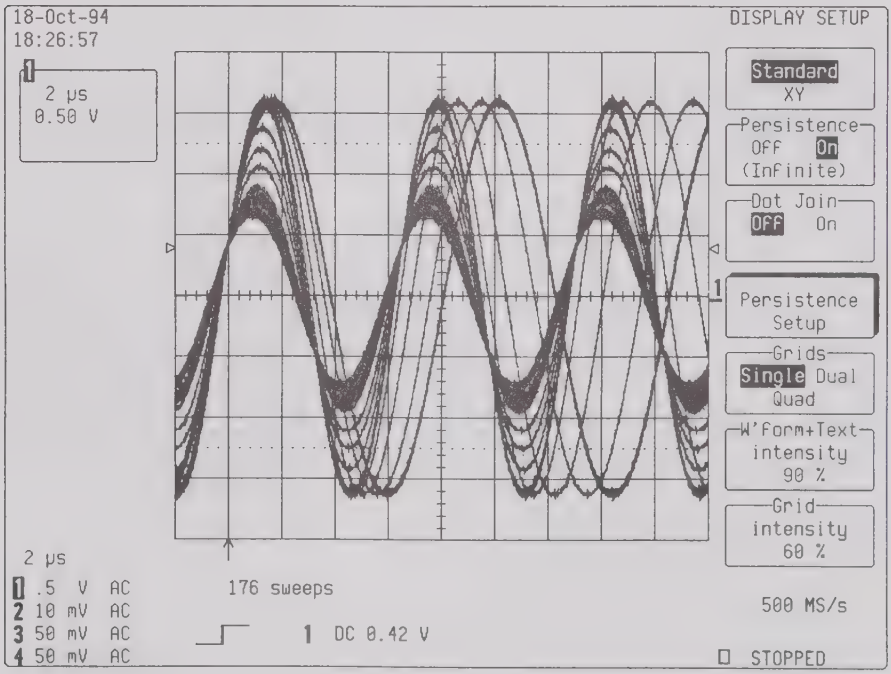

SCREEN PRESENTATION

Grid sizes and presentations depend on whether the instrument is in Standard or in XY display.

The "Parameter" display can only be chosen in Standard display with persistence OFF, by accessing the CURSORS/MEASURE menu and selecting parameters or PASS/FAIL. In "Parameter" display, only single-grid presentation is available.

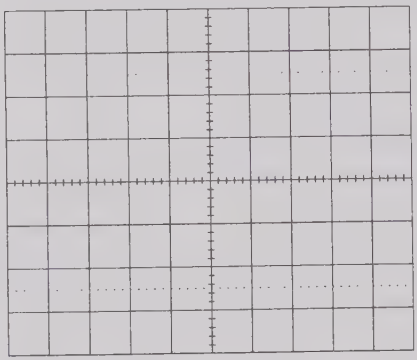

Single Grid

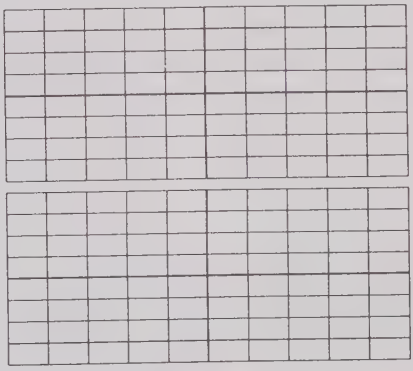

Dual Grid

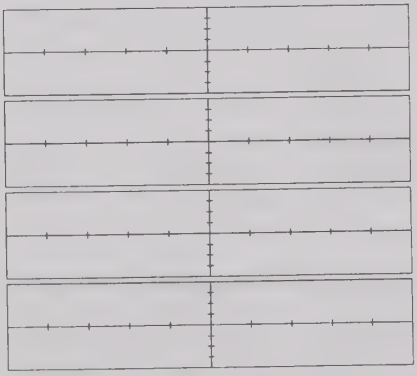

Quad Grid

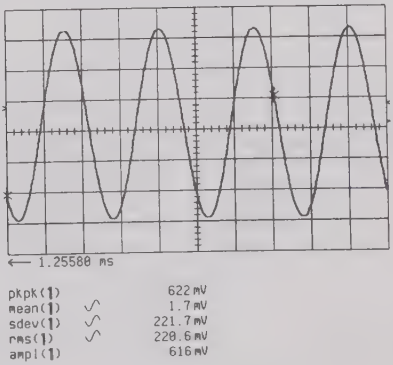

Parameters Grid

STANDARD DISPLAY MODE

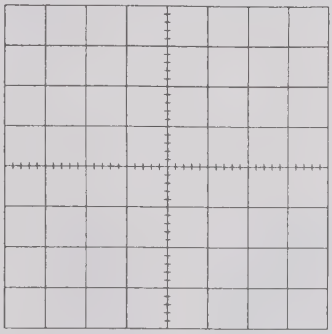

"XY only" Grid

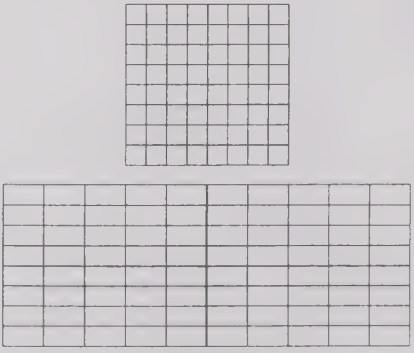

"XY + Single" Grid

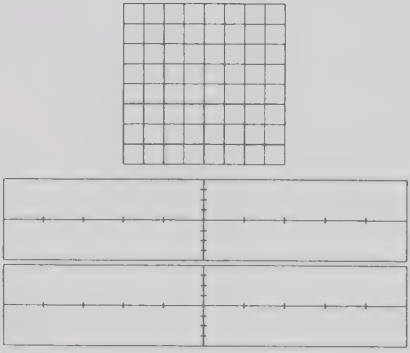

"XY+ Dual" Grid

XY DISPLAY MODE

STANDARD DISPLAY

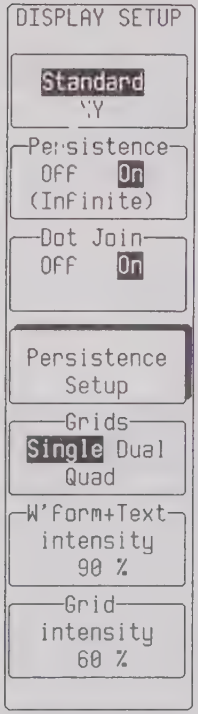

Persistence

Selects the persistence mode. When set to ON, can be cleared and reset by pressing the CLEAR SWEEPS button or by changing any acquisition condition, any waveform processing condition, or the number of grids.

Dot Join

When set to ON, connects the sample points with a line segment. When set to OFF, only the sample points are displayed.

Persistence Setup

Calls the persistence setup menu.

Grids

Selects the desired number of grids. If the "Parameters" or the "PASS/FAIL" mode is selected in the CURSORS/MEASURE menu, then only the single grid is available.

W'form + Text intensity

Adjusts the screen intensity for waveforms and text, using the attributed menu knob.

Grid intensity

Adjusts the screen intensity for grids, using the attributed menu knob. If the grid intensity is turned down to 0, the grids will not show on a screen dump.

XY DISPLAY

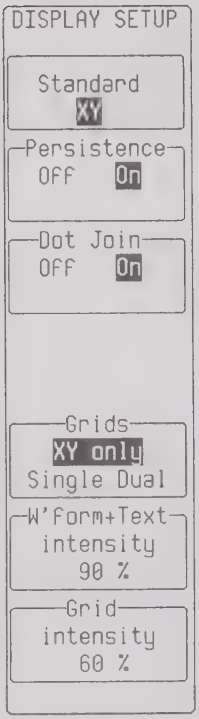

Persistence

Selects the persistence mode. When set to ON, can be cleared and reset by pressing the CLEAR SWEEPS button or by changing any acquisition condition, any waveform processing condition, or the number of grids. The number of sweeps accumulated (up to 1000000) is displayed below the grid. Persistence is not available for traces with more than 50000 points (L and M models only).

Dot Join

When set to ON, connects the sample points with a line segment. When set to OFF, only the sample points are displayed.

Grids

Selects the desired number of grids. In "XY only" mode, the XY grid occupies the maximum possible space on screen. In Single Grid, a smaller square grid is used for the XY display while the rectangular grid underneath simultaneously shows the original source waveforms. The rectangular grid can also be used in a dual grid mode by selecting Dual Grid.

W'form + Text intensity

Adjusts the screen intensity for waveforms and text, using the attributed menu knob.

Grid intensity

Adjusts the screen intensity for grids, using the attributed menu knob. If the grid intensity is turned down to 0, the grids will not show on a screen dump.

PERSISTENCE

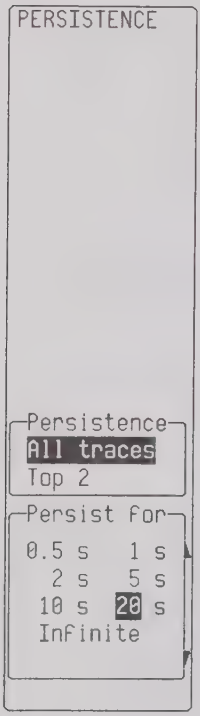

Persistence

Selects whether persistence is applied to all or to the two top traces.

Persist for

Selects the persistence duration, in seconds.

UTILITIES MENU

This section describes the Utilities menu which is used to select:

- The hardcopy settings.
- The time and date settings for the real-time clock.
- The GPIB and RS232 settings.
- The mass storage utilities (copy and format, delete files...).
- The Special Mode of operation (offset behavior, sequence time-out).
- The function of the signal at the CAL BNC connector (magnitude, frequency, shape, trigger out, pass/fail use).

UTILITIES MAIN MENU

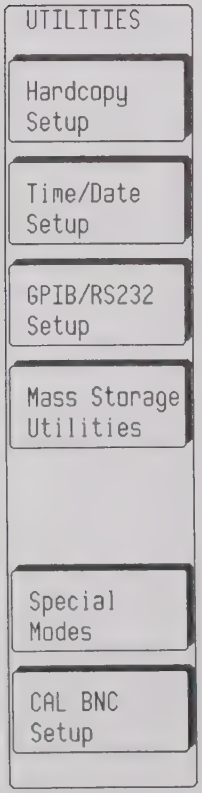

Hardcopy Setup (See page 19-2)

Press this button to view/change the current printer or plotter settings.

Time/Date Setup (See page 19-4)

Press this button to adjust the real-time clock displayed in the upper left corner of the screen.

GPIB/RS232 Setup (See page 19-5)

Press this button to view/change the current interface settings.

Mass Storage Utilities (See page 19-12)

Press this button to access the Mass Storage Utilities menu.

Special Modes (See page 19-20)

Press this button to access the Special Modes menu.

CAL BNC Setup (See page 19-22)

Press this button to access the CAL BNC menu. This button only appears in instruments with the CLBZ hardware option.

HARDCOPY SETUP MENU

output to (See SCREEN DUMP on page 17–2)

Selects the device to which the instrument should output. If using a port, check the GPIB & RS232 menu to make sure that the settings are correct.

The device can be either a port (RS232, GPIB, Centronics) to which a plotter or printer is connected, a storage unit, or the internal printer. The list of devices shows the options installed in the instrument.

When copying to a storage unit, a file name will be assigned automatically, following the rules set out in the file-naming section.

page feed

Select **On** to start on a new page each time the SCREEN DUMP button is pressed.

plotter/printer/protocol (See SCREEN DUMP on page 17–2)

Use the menu buttons to select the appropriate driver.

Note: Press the SCREEN DUMP button on the front panel to make a copy of the current screen display.

plot size (for plotters only)

Selects the desired size: A4 (11" × 8.5"), A5 (8.5" × 5.5").

pen number (for plotters only)

Selects the number of pens installed on the plotter. The oscilloscope assumes the pens are loaded consecutively in the lower slots.

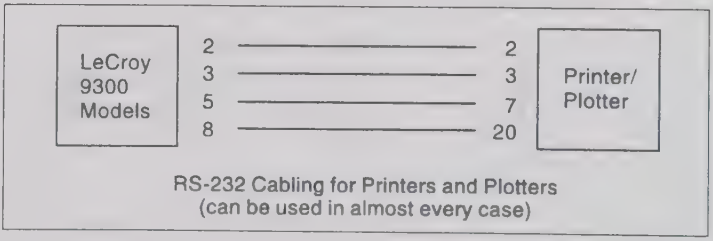

RS-232 Cabling for Printers and Plotters
(can be used in almost every case)

INTERNAL PRINTER SETUP MENU (Optional)

output to

Select **Internal Printer**.

auto print

When set to "On", generates a hardcopy of the screen to the internal printer after every acquisition.

cm/division

Select the appropriate expansion factor.

Note: A "persistence" trace cannot be expanded. Also, cursors do not show on an expanded printout.

TIME/DATE MENU

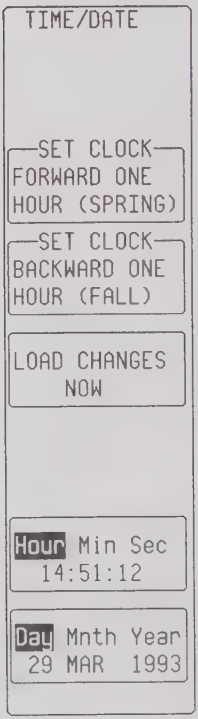

SET CLOCK...(SPRING)

Press this button to switch to summer time.

SET CLOCK...(FALL)

Press this button to switch to winter time.

LOAD CHANGES NOW

Activates the changes made with the "Hour/Min/Sec" and "Day/Mnth/Year" buttons and knobs.

Hour/Min/Sec

Press the menu button to toggle between "hour", "minutes", and "seconds". Use the menu knob to adjust the corresponding value.

Day/Mnth/Year

Press the menu button to toggle between "day", "month", and "year". Use the menu knob to adjust the corresponding value.

GPIB & RS232 MENU

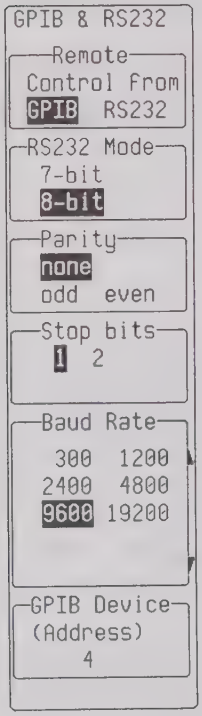

Remote Control from

Selects the port for remote control.

Note: When RS–232 is selected, the GPIB interface is in "Talk Only" mode.

RS232 Mode

Selects 7–bit or 8–bit mode for RS–232 communication.

Parity

Selects the parity for RS–232 communication.

Stop bits

Selects the number of stop bits for RS–232 communication.

Baud Rate

Selects the appropriate baud rate, using the attributed menu knob.

GPIB Device (Address)

Selects the appropriate GPIB address.

Note: Any change becomes immediately effective.

RS–232–C CONNECTOR

The RS–232–C port on the rear panel can be used for remote oscilloscope operation, as well as for direct interfacing of the oscilloscope to a hardcopy device to produce copies of displayed waveforms and other screen data..

While a printer or plotter unit is connected to the oscilloscope, its RS–232–C port can be computer controlled from a host computer via the GPIB port. The oscilloscope's built-in drivers allow hard copies to be made without an external computer.

RS–232–C connector pin assignments:

DB9 Pin #		Description
3	T × D	Transmitted data (from the oscilloscope).
2	R × D	Received data (to the oscilloscope).
7	RTS	Request to send (from the oscilloscope). If the software Xon/Xoff handshake is selected, it is always TRUE. Otherwise (hardware handshake) it is TRUE when the oscilloscope is able to receive characters and FALSE when the oscilloscope is unable to receive characters.
8	CTS	Clear to send (to the oscilloscope). When TRUE, the oscilloscope can transmit; when FALSE, transmission stops. It is used for the oscilloscope output hardware handshake.
4	DTR	Data terminal ready (from the oscilloscope). Always TRUE.
5	SIG GND	Signal ground.

This corresponds to a DTE (Data Terminal Equipment) configuration.

MASS STORAGE FILE SYSTEM

The mass storage utilities menu contains the user controls for the mass storage file system. This system supports storage and retrieval of data files to and from memory cards, floppy disks and removable hard disk media. .

Memory Card Format

The Memory Card's structure, based on the PCMCIA II / JEIDA 4.0 standard, consists of a DOS partition containing files as in any DOS floppy or hard disk.

When the card is formatted by the oscilloscope it is segmented in contiguous sectors of 512 bytes each. The oscilloscope does not support error detection algorithms such as CRC's or checksum that are inserted between the sectors. In this case, the oscilloscope may still be able to read the card but be unable to write to the card.

Floppy Disk Format

The floppy supports DOS 1.44 MB and 720 kB formats. .

Hard Disk Format

The hard disk structure is based on the PCMCIA III / JEIDA 4.0 standard. The media is arranged as a DOS partition containing files as in any DOS floppy or hard disk.

The hard disk format uses 512 bytes per sector and 4 sectors per cluster. One cluster is the minimum file size, i.e. any files of smaller than 2048 bytes in size will still use one cluster's allocation of 2048 bytes of disk space.

Subdirectories

All files are written to and read from the media from the current working directory. The default name of the working directory is LECROY_1.DIR. This directory is automatically created when the media is formatted. If the media is formatted elsewhere – for instance on a PC – the directory will be created the first time a file is stored to the memory card, floppy disk or hard disk. .

The working directory can be changed to any valid DOS directory name, using the file-name preferences menu. All working directories are created as sub-directories from the root directory.

The maximum number of files allowed in any one directory is 2400.

File-naming Conventions

As in MS-DOS, the file name can take up to 8 characters followed by an extension of 3 characters.

A file is treated as:

- a panel setup if its extension is PNL.
- a waveform if its extension is a 3–digit number.
- a waveform template if its extension is TPL.
- a hardcopy if its extension is TIF, BMP, PRT or PLT.

If the file you are storing carries the same name as a file already on the media, the old file will be deleted.

The instrument has a pre-defined naming convention for the 8-character file names and directory names. These default names can be customized by the user. The file-naming conventions are shown in the table below :

Type	Default Name	Customized Name
Manually stored waveform files	Stt.nnn	xxxxxxxx.nnn
Automatically stored waveform files	Att.nnn	xxxxxxxx.nnn
Panel files	Pnnn.PNL	xxxxxnnn.PNL
Hardcopy files	Dnnn.TIF Dnnn.BMP Dnnn.PRT Dnnn.PLT	xxxxxnnn.TIF xxxxxnnn.BMP xxxxxnnn.PRT xxxxxnnn.PLT
Template files	LECROYvv.TPL	Cannot be changed
Directory name	LECROY_1.DIR	xxxxxxxx

Where:

'x' is any legal DOS file-name character.

'tt' defines the trace name of C1, C2, C3, C4, TA, TB, TC, TD.

'nnn' denotes a 3-digit decimal sequence number starting at 001 that is automatically assigned.

'vv' is the template version number. If the version is 2.1 for example, the template will be saved as LECROY21.TPL.

Extension 'TIF' or 'BMP' denotes hardcopy graphics image files.

Extension 'PLT' denotes hardcopy plotter files.

Extension 'PRT' denotes hardcopy printer files.

memory card contains a small, button-size battery to The battery can be changed when necessary and with a "BAD BATTERY" message that . To access the battery, remove the small slot on the upper edge of the card. The battery can be changed even when the memory card is still installed in the oscilloscope. In fact, it should be changed while the card is inserted in the oscilloscope. temporarily without a battery.

MASS STORAGE MENU

This is the main menu for mass storage control.

Memory Card, Floppy Disk, Hard Disk Utilities

To delete files, format the media, or copy a machine template. Described on page 19–13.

Mass storage preferences

To set a working directory, add a new one, delete it, or customize file names. Described on page 19–17.

File Transfers

To copy files from one storage device to another. Described on page 19–16.

STORAGE MEDIA MENU

This menu displays information about the storage media installed in the oscilloscope:

- Last "format" date and time
- Media size and available free space
- Date, time and size information of the selected file on the media (highlighted in the bottom menu-field)

In addition, this menu provides access to the following operations:

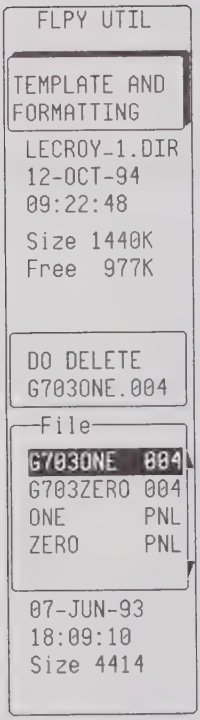

TEMPLATE AND FORMATTING

Select this menu to format the storage media or to copy the machine template to the media. The template is an ASCII text-file which contains all the information required to decode the descriptor part of a binary waveform.

DO DELETE

Deletes the file selected in the box below.

File

Selects the file to be deleted, using the attributed menu knob or buttons.

FLOPPY MENU

This menu appears every time a floppy operation is required:

- if a new floppy is inserted in the drive.
- if no floppy is present in the drive.

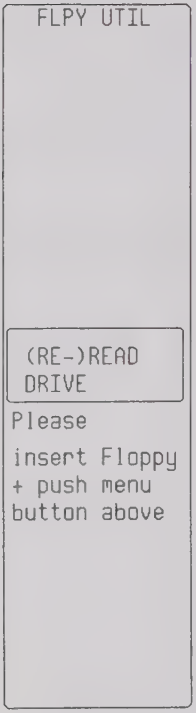

(RE–)READ DRIVE

Reads the floppy and displays the contents of the directory.

TEMPLATE AND FORMATTING MENU

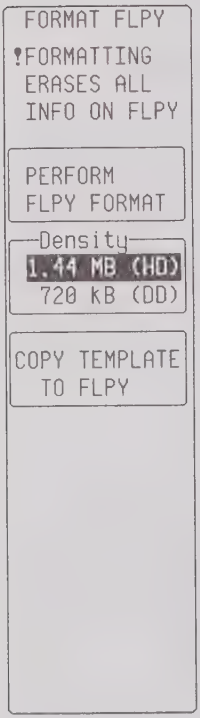

PERFORM ... FORMAT

Formats the media. Density of 1.44 MB or 720 kB, can be selected for the floppy. The floppy will have a DOS format, with an interleave factor of 2 to optimize throughput to and from the oscilloscope.

Density (Floppy only)

Select density desired – **1.44 MB (HD)** or **720 kB (DD)**.

COPY TEMPLATE TO ...

Copies the machine template to the media. The template is an ASCII text-file which contains all the information required to decode the descriptor part of a binary waveform.

FILE TRANSFERS MENU

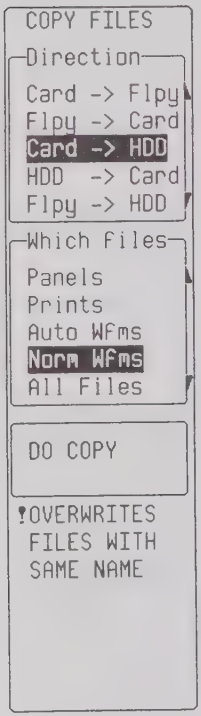

Direction

Select the copy source → destination.

Which files

Choose the file types to be copied.

DO COPY

Copies the selected files.

PREFERENCES MENU

This menu is used to: :

- Select the working directory
- Delete a directory
- Access the Filename Preferences menu
- Access the Add New Directory menu

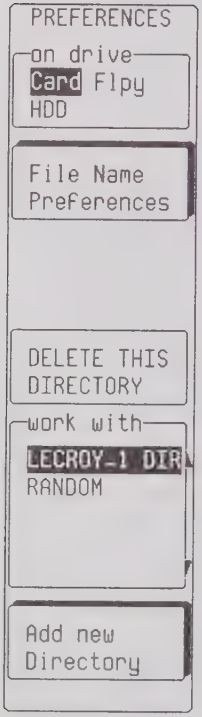

on drive

Selects the media onto which the preferences will be applied.

File Name Preferences

Select this menu to define custom names for waveform–, setup–, or hardcopy files.

DELETE THIS DIRECTORY

Deletes the directory selected in the box below.

work with

Selects the directory that will be used for file storage and retrieval.

Add new Directory

Select this menu to add a new directory.

FILENAME PREFERENCES MENU

This menu is used to define custom names for waveform–, setup–, or hardcopy files.

to be set to:

Select character to be modified.

RESTORE DEFAULT NAME

Restores the file type, selected in the lower box, to its default name.

ENTER NEW FILE NAME

Validates the new name defined.

BACKSPACE

Moves back and erases the previous character.

INSERT

Moves forward one character.

character

Selects the character, using the menu knob.

File Type

Selects the file type to be customized.

NEW DIRECTORY MENU

This menu is used to define a new directory with a custom name.

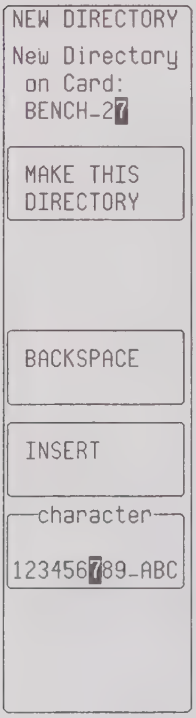

New Directory on Card:

Select character to be modified.

MAKE THIS DIRECTORY

Validates the new directory.

BACKSPACE

Moves back and erases the previous character.

INSERT

Moves forward one character.

character

Selects the character, using the menu knob.

SPECIAL MODES MENU

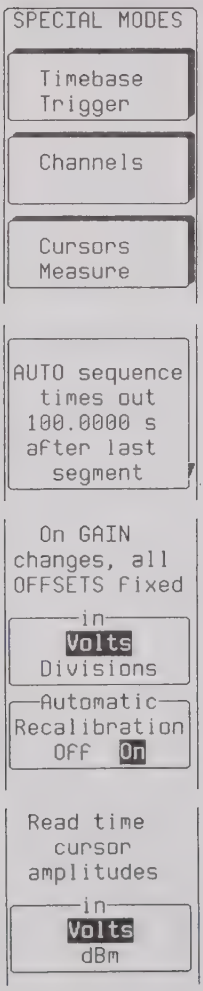

[Timebase Trigger Sub-menu]
AUTO sequence

Specifies the time-out in Sequence mode (see Chapter 9, page 9-2, and Chapter 10, page 10-3). Use the associated menu knob to change the value.

[Channels Sub-menu]
...Offsets ... in

Specifies the offset behavior on a gain (VOLTS/DIV) change. The offset can be fixed either in Volts or in vertical Divisions.

Automatic Recalibration

Turns the automatic recalibration ON or OFF. Default is ON. Turning off the auto-calibration may speed up the acquisition, but during that time calibration is not garanteed.

[Cursors Measure sub-menu]
Read time cursor amplitudes in

Selects the time cursor amplitude units in Volts or dBm.

REFERENCE CLOCK MENU

This menu allows the sampling clock of the DSO to be phase-synchronized to an external 10 MHz reference on the default internal clock reference.

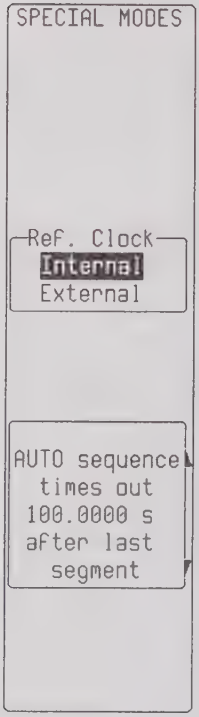

CAL BNC OUT MENU

The type of signal put out at the CAL BNC connector can be controlled from this menu. It is used to select:

- The frequency of the calibration signal
- The amplitude of the calibration signal
- The pulse shape for the calibration signal

Furthermore, with the CKIO software option, the CAL BNC connector can be used to provide a pulse:

- at the occurrence of each trigger
- as an action for PASS/FAIL testing

Note that when the instrument is turned on, the calibration signal is automatically set to its default state (1 kHz 1 V square wave).

The menu is shown here as it appears for an instrument with the CKIO software option.

mode

Press this button to change the kind of signal made available.

SET TO

Press this button to quickly reset the CAL BNC output to its default state.

Shape

Press this button to change the form of the calibration signal.

Amplitude

Use the knob to set the desired high level for all uses of the CAL BNC. If output to 50 Ω, the amplitude will be halved.

Frequency

Use the knob to set the desired frequency of a CAL signal in the range 500 Hz to 2 MHz.

WAVEFORM STORE MENU

The Waveform Store menu is used to select:

- The waveform(s) to be stored to internal memory, to the memory card (optional), to the floppy (optional), or to the hard disk (optional).
- Automatic storage (Auto-Store) to the memory card (optional), or to the floppy (optional).
- Auto-Store mode: stop when media is full or "wraparound" as in a circular buffer (optional).

Auto–Store

Appears only when storage to memory card or floppy is selected in the bottom menu box. Select **Auto–Store** to automatically store waveforms after each acquisition.

Two kinds of Auto-Store mode can be selected: **Fill** stores acquired waveforms until the media becomes full, and **Wrap** stores continuously to the media, discarding the oldest autostored files in a first-in-first-out manner.

DO STORE

Use this menu button to perform the STORE operation based on the instructions given in the two following menu boxes.

store

Selects the waveform to be stored. "All displayed" can only be selected when storing to one of the optional storage devices (see below).

to

Selects either one of the internal memories (M1 to M4), the memory card (optional), the floppy (optional), or the hard disk (optional).

Note: Reference and "Zoom & Math" memories match the capacity of the acquisition memories. A 9354M, for instance, with 200K record length per channel will have 200K points in each of the reference memories M1 to M4 and also 200K points for each of the A, B, C and D "Zoom & Math" traces.

As more acquisition memory – up to 4M on 2–channel L models and up to 8M on 4–channel L models – can be achieved by combining

two or four channels, one single 8M trace can "eat up" all of the reference memory capacity in the instrument – or all of its "Zoom & Math" trace capacity. When this is the case, a warning message is given to prevent accidentally storing a new trace to a reference memory already in use.

WAVEFORM RECALL MENU

The Recall Waveform menu is used to recall a waveform from one of the internal memories, from the memory card (optional), from the floppy (optional), or from the hard disk (optional).

RECALLING FROM AN INTERNAL MEMORY

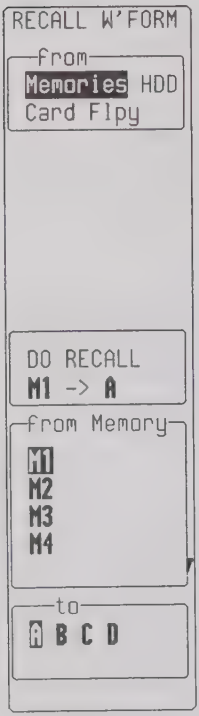

from

Select **Memories**.

DO RECALL

This menu button is used to perform the RECALL operation based on the instructions given in the two following menu boxes. At the same time, the horizontal and vertical positions and zooms are reset to show the full contents of the memory at its original magnification.

from Memory

Selects source memory.

to

Selects the destination trace.

Note 1: Performing a recall operation from an internal memory to a trace A…D overrides any previous definition of the destination trace. (See Chapter 14, Zoom + Math Capabilities).

Note 2: Reference and "Zoom & Math" memories match the capacity of the acquisition memories. A 9354M, for instance, with 200K record length per channel will have 200K points in each of the reference memories M1 to M4 and also 200K points for each of the A, B, C and D "Zoom & Math" traces.

As more acquisition memory – up to 4M on 2–channel L models and up to 8M on 4–channel L models – can be achieved by combining two or four channels, one single 8M trace can "eat up" all of the reference memory capacity in the instrument – or all of its "Zoom & Math" trace capacity. When this is the case, a warning message is given to prevent accidentally storing a new trace to a reference memory already in use.

RECALLING FROM A STORAGE DEVICE (Optional)

from

Select desired storage device.

DO RECALL

This menu button is used to perform the RECALL operation, based on the instructions given in the two following menu boxes.

File

Selects the waveform file, using the attributed menu knob.

Note: The files listed will be those in the current working directory. This directory can be changed in the "Filename Preferences" menu, see page 19–17.

to

Selects the destination memory. If the "All **M**" destination memory option is selected, up to four files with the same 3-digit numeric extension as the currently selected 'File' will be recalled into memories M1...M4.

CURSORS IN STANDARD DISPLAY

Cursors provide basic tools for measuring signal values. Vertical cursors can be moved in steps as small as 1/64 of a division to measure signal amplitudes with 0.2% resolution. Horizontal cursors can be placed at a desired time to read the amplitude of a signal at that time, and can be displaced in time with a resolution of 2000 steps across the grid width (0.05% of the entire displayed time span).

In Absolute mode, one cursor can be controlled and readings at the cursor location for amplitude, or time and amplitude, are displayed. Measured amplitudes are relative to ground, and measured times are relative to the trigger point.

In Relative mode, two cursors can be controlled, providing readings of the difference in amplitude, or time and amplitude, between the two cursors.

Amplitudes are always shown in the trace label field for each trace. For horizontal cursors, the time is shown below the grid. In Relative mode, the frequency corresponding to the time interval between the two cursors is also displayed here. When the horizontal scale implies that less than 500 digitized points fill the screen, the oscilloscope interpolates, using straight line segments between actual data points. If 200 points or less are used, the digitized points are clearly visible as intensified points on the screen. When a cursor is placed on an actual data point, horizontal bars appear on the cursor.

When there are more than 500 digitized points, the trace is displayed on the screen with a resolution of 500 display points. A compacting algorithm showing all minimum and maximum values ensures that no information is lost when a trace is displayed. Time cursors can be positioned on any one of the 500 display points of a compacted trace.

Note that setting the cross-hair marker to 0 time provides a visual indication of the trigger point.

CURSORS IN PERSISTENCE DISPLAY

Voltage cursors are similar to those in standard display mode. Time cursors consist of vertical bars which are placed on the desired part of the displayed waveform.

CURSORS IN XY DISPLAY

As in the standard display, time and voltage cursors can be used in the XY display.

Absolute voltage cursors show as a vertical and a horizontal bar.

Relative voltage cursors show as a pair of vertical and a pair of horizontal bars.

Absolute and Relative time cursors are similar to those in standard display mode.

Combinations of the vertical values (voltages) are shown on the left side of the square XY grid:

(1)	The ratio	ΔYvalue / ΔX value
(2)	The ratio in dB units	20*log10(ratio)
(3)	The product	ΔY value * ΔX value
(4)	The distance to the origin	r = sqrt (ΔX * ΔX + ΔY * ΔY)
(5)	The angle (polar)	q = arc tan (ΔY / ΔX) range [–180° to +180°].

Cursors					
			T_{Abs}		
	V_{Abs}	V_{Rel}	Org = (0,0)	Org = $V_{XOffset}$ $V_{YOffset}$	T_{Rel}
ΔX	$V_{XRef} - 0$	$V_{XDif} - V_{XRef}$	$V_{XRef} - 0$	$V_{XRef} - V_{XOffset}$	$V_{XDif} - V_{XRef}$
ΔX	$V_{YRef} - 0$	$V_{YDif} - V_{YRef}$	$V_{YRef} - 0$	$V_{YRef} - V_{YOffset}$	$V_{YDif} - V_{YRef}$

The definition of ΔX and ΔY is dependent on the type of cursors used. The following table shows how ΔX and ΔY are defined for each type of measurement.

Where

V_{Abs} = Absolute Voltage cursors
V_{Rel} = Relative Voltage cursors
T_{Abs} = Absolute Time cursors
T_{Rel} = Relative Time cursors
Org = Origin
V_{XRef} = Voltage of the reference cursor on the X trace
V_{YRef} = Voltage of the reference cursor on the Y trace
V_{XDif} = Voltage of the difference cursor on the X trace
V_{YDif} = Voltage of the difference cursor on the Y trace

AUTOMATIC MEASUREMENTS

Certain signal properties can be determined automatically, using a parameter measurement mode.The following table lists all the parameters that can be determined by the instrument. Appendix D describes the methods employed to determine these parameters.

Statistical variations of these signal parameters over several successively captured signals can be observed as average, standard, and extreme deviations.

PASS/FAIL

Pass/Fail tests can be done using these parameter measurements. The tests require a combination of parameter measurements to be within chosen limits, and provoke an action if the test either passes or fails. Alternatively, the pass/fail test can be a test of a signal against a tolerance mask.

PARAMETER	ABBREV.	EXPLANATION
amplitude	ampl	Absolute value of the top minus the base.
area	area	Sum of sampled values between cursors times the duration of a sample.
base	base	First of two most probable states. This is characteristic of rectangular waveforms and represents the first most probable state determined from the statistical distribution of data point values in the waveform.
cycles	cycles	Number of pairs of transitions in the same direction.
delay	delay	Time from trigger point to the midpoint of the first transition.
Δdelay	Δdly	Time between midpoint transition of two sources.
Δt at level	Δt@lv	Time between selectable transition levels of two sources or time from trigger to a selectable transition level.
duty cycle	duty	Width as a percentage of period.
fall time	fall	Duration of the pulse waveform's falling transition from 90% to 10%, averaged for all falling transitions between the cursors.
fall 80-20%	f80-20%	Duration of the pulse waveform's falling transition from 80% to 20%, averaged for all falling transitions between the cursors.
fall at level	f@level	Duration of the pulse waveform's falling edges between selectable transition levels.
first	first	Time from trigger to first (leftmost) cursor.
frequency	freq	Reciprocal of period.
last	last	Time from trigger to last (rightmost) cursor.
maximum	maximum	Maximum value of the trace between the cursors.
mean	mean	Average or DC level of the waveform. If the waveform is periodic, it is computed over an integral number of periods.
median	median	The average of base and top values.
minimum	minimum	Minimum value of the trace between the cursors.
overshoot negative	over–	Lower most probable value minus the minimum sample value, expressed as a percentage of the amplitude.
overshoot positive	over+	Maximum sample value minus the higher most probable value, expressed as a percentage of the amplitude.
peak-to-peak	pkpk	Difference between the maximum and the minimum values.
period	period	Time of a full cycle averaged for all full cycles between the cursors.

PARAMETER	ABBREV.	EXPLANATION
points	points	Number of points between the vertical cursors.
rise time	rise	Duration of the pulse waveform's rising transition from 10% to 90%, averaged for all rising transitions between the cursors.
rise 20-80%	r20-80%	Duration of the pulse waveform's rising transition from 20% to 80%, averaged for all rising transitions between the cursors.
rise at level	r@level	Duration of the pulse waveform's rising edges between selectable transition levels.
root mean square	rms	Square root of sum of squares, divided by number of terms. If waveform is periodic, it is computed over an integral number of periods.
standard deviation	sdev	Square root of sum of squares of difference from mean, divided by number of terms. If the waveform is periodic, it is computed over an integral number of periods.
top	top	Second of two most probable states. This is characteristic of rectangular waveforms and represents the second most probable state determined from the statistical distribution of data point values in the waveform.
width	width	Width of the first pulse (either positive or negative), averaged for all similar pulses between the cursors.

PARAMETER INFORMATION AND WARNING SYMBOLS

The algorithms which determine the pulse waveform parameters are capable of detecting certain situations where the mathematical formulas may be applied but the results obtained must be interpreted with caution. In these cases, the name of the parameter and its value are separated on the screen by a graphic symbol. The symbols and their meanings are indicated in the figure below.

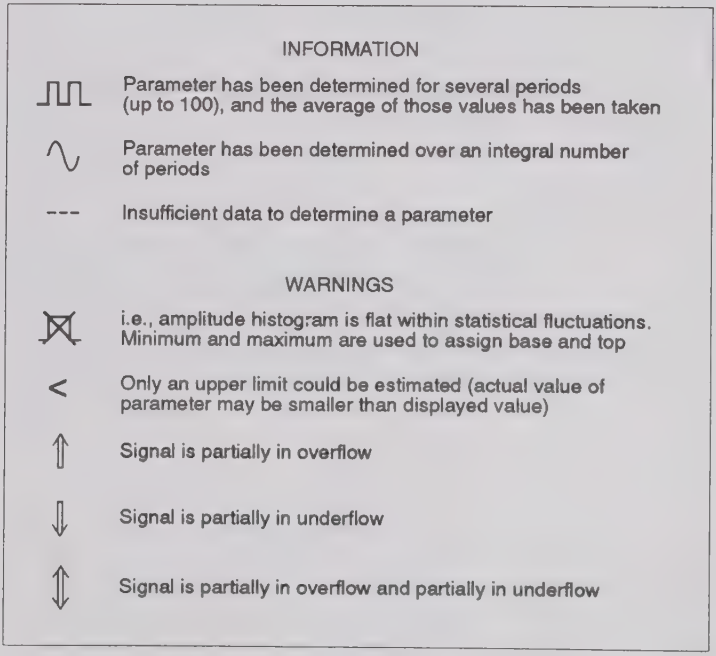
INFORMATION
Parameter has been determined for several periods (up to 100), and the average of those values has been taken
Parameter has been determined over an integral number of periods
---
Insufficient data to determine a parameter
WARNINGS
i.e., amplitude histogram is flat within statistical fluctuations. Minimum and maximum are used to assign base and top
<
Only an upper limit could be estimated (actual value of parameter may be smaller than displayed value)
Signal is partially in overflow
Signal is partially in underflow
Signal is partially in overflow and partially in underflow

CURSORS MENU

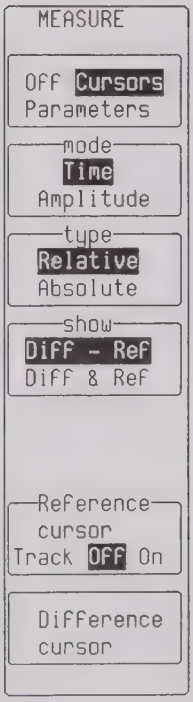

Off/Cursors/Parameters

Select **Cursors**.

mode

Selects **Time** (time or frequency) or **Amplitude** (voltage or amplitude) cursors.

type

Toggles between **Relative** and **Absolute**. Relative displays two cursors – reference and difference – and indicates either the voltage or the time and voltage between the two cursors. **Absolute** displays one cursor that indicates either a voltage compared to the ground level, or a time compared to the trigger point and a voltage compared to the ground level.

show (not available in persistence mode)

Diff – Ref shows the subtraction between the difference– and the reference–cursor amplitudes.

Diff & Ref shows the amplitude values for each of the cursors.

Reference cursor

Available with the **Relative** type cursors. The corresponding menu knob controls the Reference cursor.

When **Track** is ON, both Reference and Difference cursors are controlled by this knob and move together, keeping a constant time or voltage interval between them. This tracking interval is represented by a bar (horizontal for time, vertical for voltage) that appears either on the top (time) or on the left (voltage) edge of the grid.

Difference cursor

Available with the **Relative** type cursors. The corresponding menu knob controls the Difference cursor.

Cursor position

Available with the **Absolute** type cursors. The corresponding menu knob controls the cursor.

PARAMETERS MENU

Parameters can be measured in two standard classes, making commonly needed measurements on a single signal in either the amplitude domain or the time domain.

Parameter measurements can be customized to determine up to five quantities from the list in the table at the beginning of this chapter on different signals. These customized parameter measurements can also be used for pass/fail testing against chosen limits.

For all of these modes, statistics on the parameter values are accumulated and can be displayed. In addition to the overall number of sweeps used, each parameter has its average, lowest and highest value. The standard deviation of the parameter is also calculated.

STANDARD VOLTAGE PARAMETERS

This class of parameters measures for one trace:

- Peak-to-Peak (amplitude between maximum and minimum sample values)
- Mean of all sample values (corrected for periodic signals)
- Standard Deviation (equivalent to RMS–DC component)
- RMS of all sample values (corrected for periodic signals)
- Amplitude of the signal

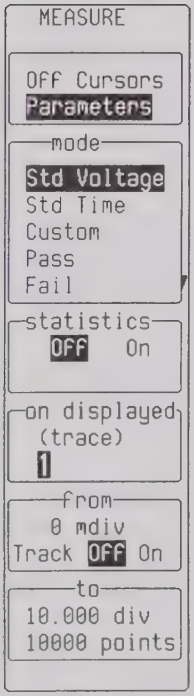

Off/Cursors/Parameters

Select **Parameters**.

mode

Select **Standard Voltage** parameters.

statistics

This shows the average, the lowest, the highest, and the standard deviation of a parameter, as well as the number of sweeps included in the statistics. The number of sweeps is cleared each time the acquisition conditions change, or by pressing the CLEAR SWEEPS button.

The accumulation of statistics continues, even if the statistics are not shown, as long as **Parameters** are selected.

on displayed (trace)

Selects the trace for which the voltage parameters are measured.

from

Determines the starting point (in screen divisions) for parameter measurements.

to

Determines the end point (in screen divisions) for parameter measurements. It also indicates the total number of data points used for the measurements.

STANDARD TIME PARAMETERS

This class of parameters measures for one trace:

- Period
- Width (at 50% amplitude)
- Risetime (10–90% of amplitude)
- Falltime (90–10% of amplitude)
- Delay (from trigger to first 50% amplitude point)

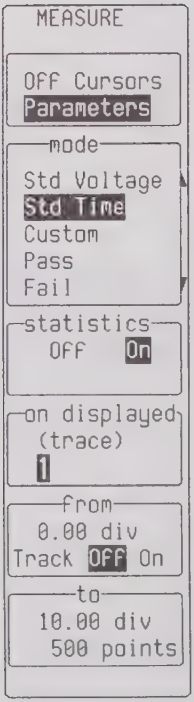

Off/Cursors/Parameters

Select **Parameters**.

mode

Select **Standard Time** parameters.

statistics

This shows the average, the lowest, the highest, and the standard deviation of a parameter, as well as the number of sweeps included in the statistics. The number of sweeps is cleared each time the acquisition conditions change, or by pressing the CLEAR SWEEPS button.

The accumulation of statistics continues, even if the statistics are not shown, as long as **Parameters** are selected.

on displayed (trace)

Selects the trace for which the time parameters are measured.

from

Determines the starting point (in screen divisions) for parameter measurements.

to

Determines the end point (in screen divisions) for parameter measurements. It also indicates the total number of data points used for the measurements.

CUSTOM PARAMETERS

In this parameter measurement mode, up to five parameters selected from the list in the table at the beginning of this chapter can be displayed for different traces.

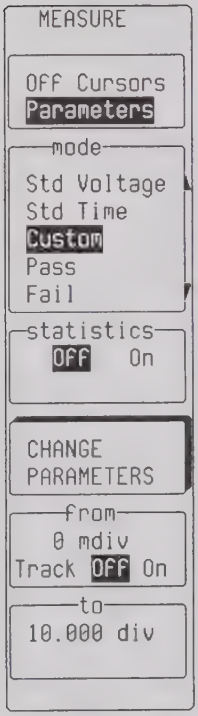

Off/Cursors/Parameters

Select **Parameters**.

mode

Select **Custom** parameters.

statistics

This shows the average, the lowest, the highest, and the standard deviation of a parameter, as well as the number of sweeps included in the statistics. The number of sweeps is cleared each time the acquisition conditions change, or by pressing the CLEAR SWEEPS button.

The accumulation of statistics continues, even if the statistics are not shown, as long as **Parameters** are selected.

CHANGE PARAMETERS

The Change Parameters menu is used to select the quantities and the traces for which these quantities are to be measured (see description given subsequently in this chapter).

from

Determines the starting point (in screen divisions) for parameter measurements.

to

Determines the end point (in screen divisions) for parameter measurements.

ADDING OR DELETING CUSTOM PARAMETERS

This menu is used to choose the custom parameters that need to be displayed.

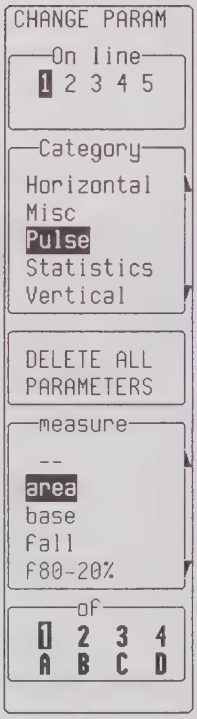

on line

Up to five different parameters are displayed, each on a separate line. This button selects the line to be modified.

Category

Specifies the category or type of parameter to be selected.

DELETE ALL PARAMETERS

Deletes all parameters previously selected (set all to "– –").

measure

Selects the new parameter to be measured on this line. When "– –" is selected the line is not used.

of

Selects the trace on which the parameter will be measured.

PARAMETERS REQUIRING SETUP

Parameters may be customized to meet specific needs. For example, in the Dual category the following parameters can be customized:

- Δdly
- Δt@lv

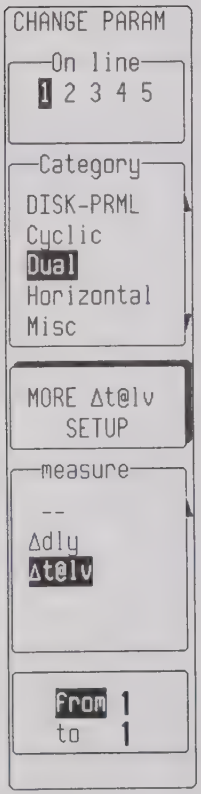

Online

Up to five different parameters are displayed, each on a separate line. This button selects the line to be modified.

Category

Specifies the category or type of parameter to be selected.

MORE Δt@lv SETUP

Calls the **Δt@lv** customization menu.

measure

Set at **Δt@lv**.

from ...to

Selects the channel (1, 2, 3, 4) or memory (A, B, C, D) from which and to which the measurement is to be made.

PARAMETERS REQUIRING SETUP (Customize Menu)

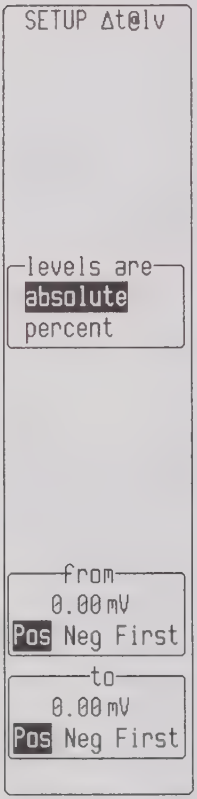

levels are

Selects whether the levels should be set in absolute values or in percentage values.

from...to

The voltage setting selects the level on the trace at which the timing should start or finish.

The three options determine where the timing should start or finish: **Pos** for rising edge, **Neg** for falling edge, **First** for "either positive or negative edges".

PASS/FAIL TESTING

PASS/FAIL testing can be performed in two different ways:

1. **PASS/FAIL tests on parameters**

   Up to five parameters can be tested simultaneously against limits.

2. **PASS/FAIL tests on a tolerance mask**

   A trace is compared to a tolerance mask.

Whether the test PASSes or FAILs, any or all of the following actions can be provoked:

- Stop capturing further signals
- Dump the screen image to a hardcopy unit
- Store selected traces to internal memory, to a memory card (optional), or to a floppy (optional)
- Sound the buzzer
- Emit a pulse on the CAL BNC

The Pass/Fail display shows the results on the current waveforms, the number of events passing and the total number of sweeps treated, as well as the actions to be taken.

PASS/FAIL MENU

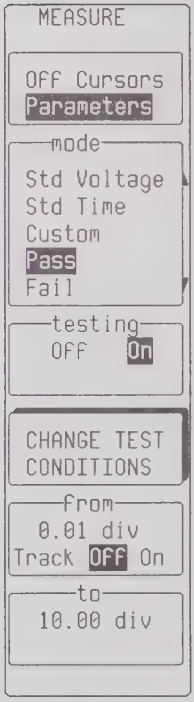

Off/Cursors/Parameters

Select **Parameters**.

mode

Select **Pass** or **Fail**.

testing

Testing can be disabled in order to observe only the parameter variations.

CHANGE TEST CONDITIONS

The Change Test Conditions menu is used to choose the class of tests, the quantities and traces to be measured and their limits, or the tolerance mask, as well as the actions to be performed according to the result of the test (see description given subsequently in this chapter).

from

Determines the starting point (in screen divisions) for parameter measurements.

to

Determines the end point (in screen divisions) for parameter measurements.

CHANGE PASS/FAIL TESTS ON PARAMETERS

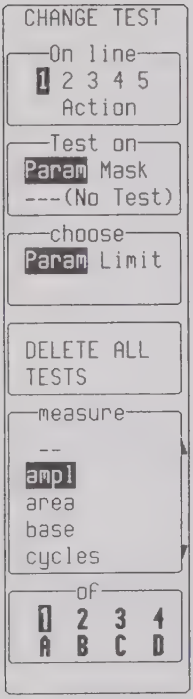

On line

Up to five different parameters are displayed, each on a separate line. This menu button selects the line to be modified. To change **Action** see page 22–22.

Test on

Set to test on **Param** (for tests on **Masks** see page 22–19). Set to **...(No Test)** if no test is required on the selected line.

choose

Set to **Param**. To change **Limit** see page 22–18.

DELETE ALL TESTS

Deletes all tests previously selected (set all to "– –").

measure

Selects the new parameter to be measured on this line. When "– –" is selected the line is not used.

of

Selects the trace on which the parameter will be measured.

CHANGE LIMITS FOR PASS/FAIL TESTS ON PARAMETERS

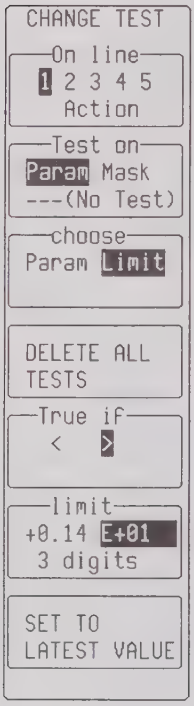

On line

Up to five different tests are displayed, each on a separate line. This button selects the line of the test to be modified.

Test on

Set to test on **Param** (for tests on **Masks** see page 22–19).

choose

Set to **Limit** (to change **Param** see page 22–17).

DELETE ALL TESTS

Deletes all tests previously selected.

True if

Selects the adequate relation – smaller than < , or greater than >.

limit

Three fields can be manipulated separately to modify a limit, its mantissa, its exponent, and the number of digits to represent the mantissa. The menu button is used to choose the field, and the menu knob is used to modify the number in that field.

SET TO LATEST VALUE

This menu button is used to set the limit to the latest measured value, to serve as a starting value for the final adjustment.

CHANGE PASS/FAIL TEST ON A MASK

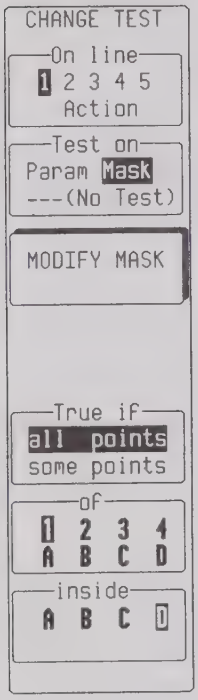

On line

Up to five different parameters are displayed, each on a separate line. This menu button selects the line to be modified. To change **Action** see page 22–22.

Test on

Set to **Mask** (for tests on Parameters see page 22–17). Set to **—(No Test)** if no test is required on the selected line.

MODIFY MASK

Use this menu button to modify the mask settings.

True if

Selects test condition on the mask.

of

Selects trace to be tested.

inside/outside

Selects mask trace.

Note: When performing pass/fail testing against a mask, please note that the test is affected by horizontal and vertical zooming of the mask trace. Also, the test will be made ***inside*** *the area bordered by the parameter cursors.*

Timebases of the mask and the trace under test should be matched.

GENERATING A MASK FROM A WAVEFORM

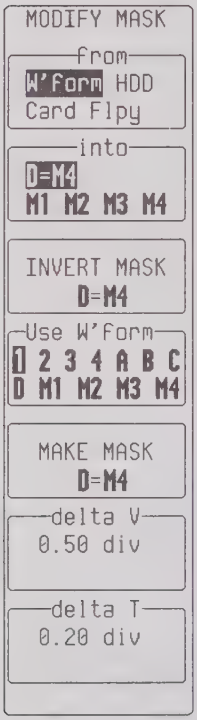

from

Select **W'form**.

into

Select **D=M4** if the mask has to be automatically displayed on the screen, otherwise select **M1** to **M4**. Using the Waveform Recall menu, memories M1 to M4 can be recalled to traces A to D for display (see page 21–1).

INVERT MASK

Use this menu button to generate an inverted mask.

Use W'form

Select the waveform to be used as a reference. The mask will be generated around this waveform.

MAKE MASK

Use this menu button to generate the mask.

delta V

Select tolerance in amplitude, using the menu knob attributed to this field.

delta T

Select tolerance in time, using the menu knob attributed to this field.

RECALLING A MASK FROM A MASS STORAGE DEVICE

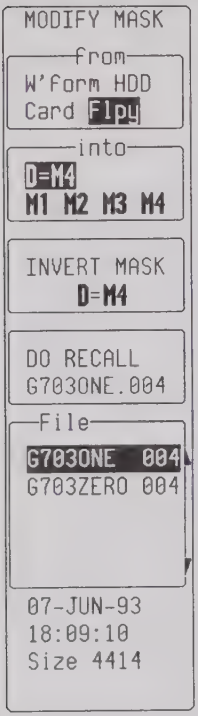

from

Select desired device.

into

Select **D=M4** if the mask has to be automatically displayed on the screen, otherwise select **M1** to **M4**.

INVERT MASK

Use this menu button to generate an inverted mask.

DO RECALL

Use this menu button to recall the mask.

File

Select the appropriate mask, using the menu knob attributed to this field.

SETTING PASS/FAIL ACTIONS

Depending on the result of the test – PASSed or FAILed – certain actions can be taken, as described below.

On line

Select **Action**.

DELETE ALL ACTIONS

Deletes all previously selected actions.

If

The action can be taken if the test PASSes or FAILs.

Then:

Selects the action to be taken.

The bottom field enables or disables the action to be taken.

PANEL SETUPS MENU

The Panel Setups menu is used to:

- Save the instrument's configuration (Panel Setup) to a non-volatile memory, to the memory card, to the floppy, or to the hard disk.
- Recall one of the Panel Setups from a non-volatile memory, from the memory card, from the floppy, or from the hard disk.

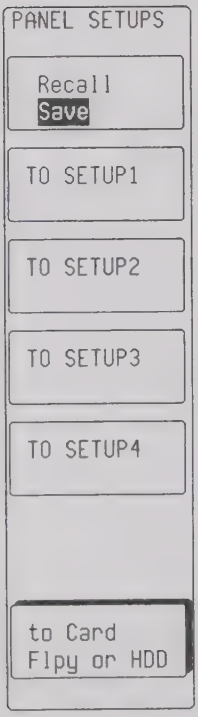

Save

Select **Save** in the top menu-field (to recall a setup see next menu).

TO SETUP...

Use the appropriate button to select one of the four setups available.

to Card, Flpy or HDD

Use this button to save a setup file to the memory card, floppy or hard disk.

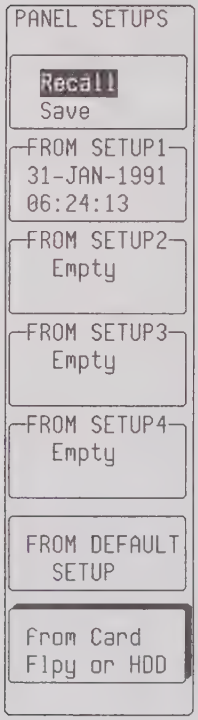

Recall

Select **Recall** in the top menu-field.

FROM SETUP...

Use the appropriate button to select one of the four setups available.

FROM DEFAULT SETUP

Use this button to select a factory-defined default setup.

from Card, Flpy or HDD

Use this command to go to the Recall Setups menu to recall a setup file on the card, on the floppy, or on the hard disk (see next menu).

RECALLING A SETUP FROM A CARD, FLOPPY, OR HARD DISK (OPTIONAL)

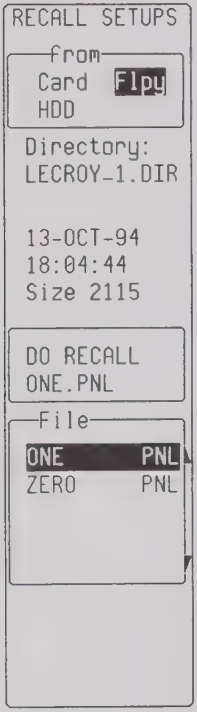

from

Select **Card**, **Flpy** or **HDD**.

DO RECALL

Performs the recall from the selected filename.

File

Selects the setup file, using the attributed menu knob.

SHOW STATUS MENU

The Show Status menu shows the following summaries of the instrument's status:

- Acquisition
- System
- Waveform text and trigger times
- Waveform
- Memory used

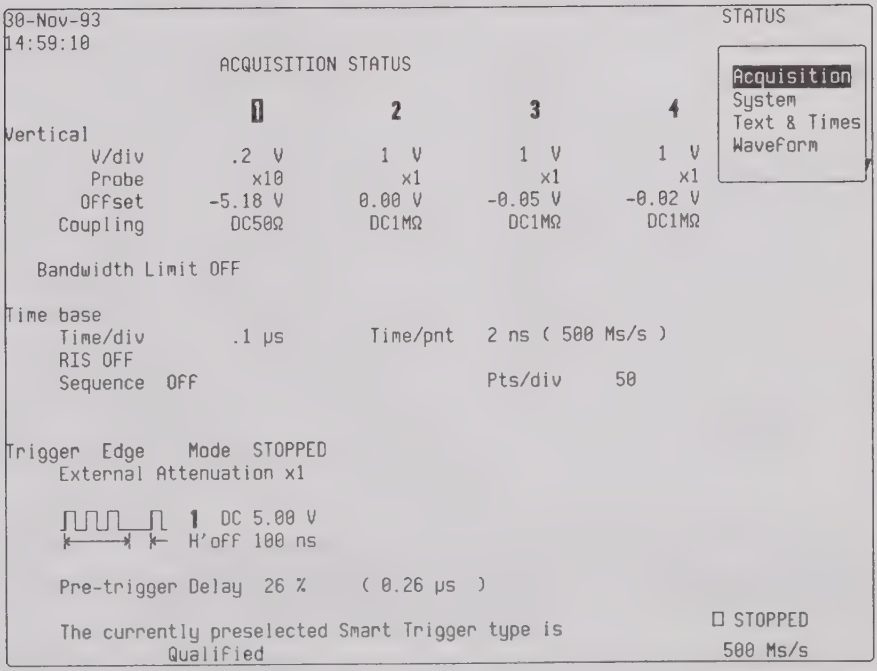

ACQUISITION SUMMARY

Shows for each channel the vertical sensitivity, probe attenuation, offset and coupling, followed by the timebase, trigger and delay status summaries.

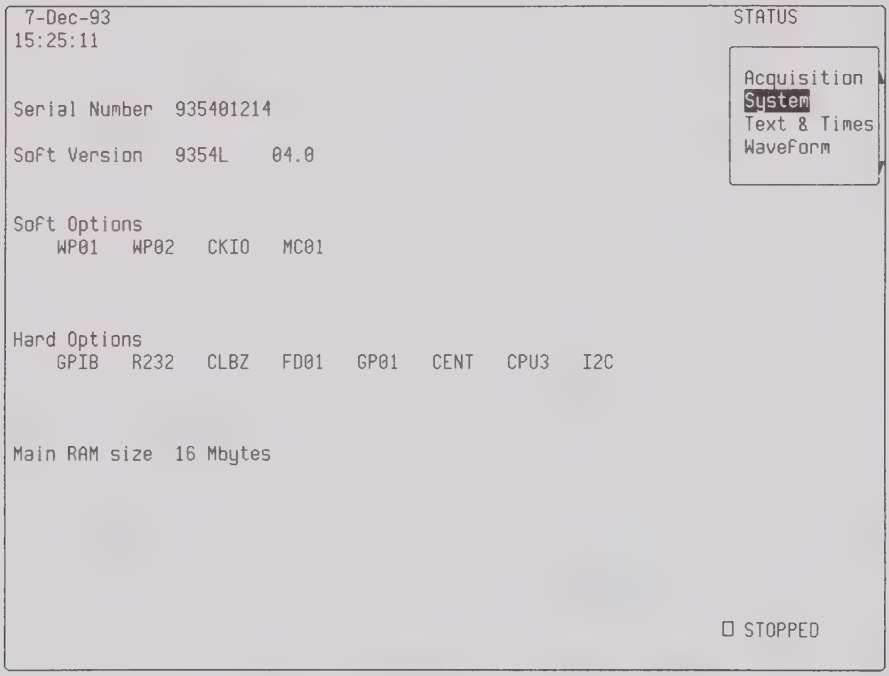

SYSTEM SUMMARY Shows the instrument's serial number, the firmware version, and the software or hardware options installed.

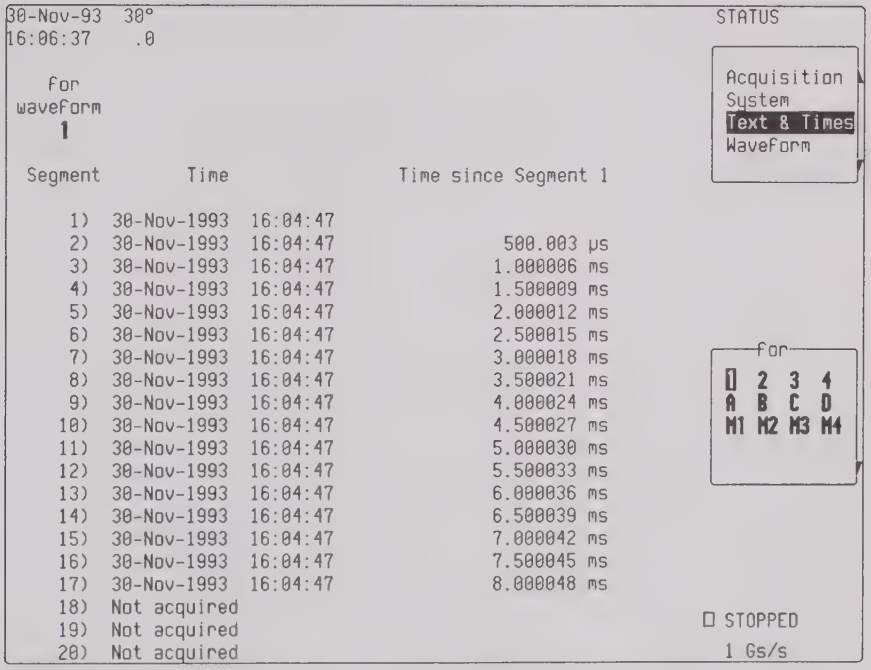

TEXT & TIMES SUMMARY Shows the user text in the waveform descriptor (see Remote Control Manual), together with the trigger timing information.

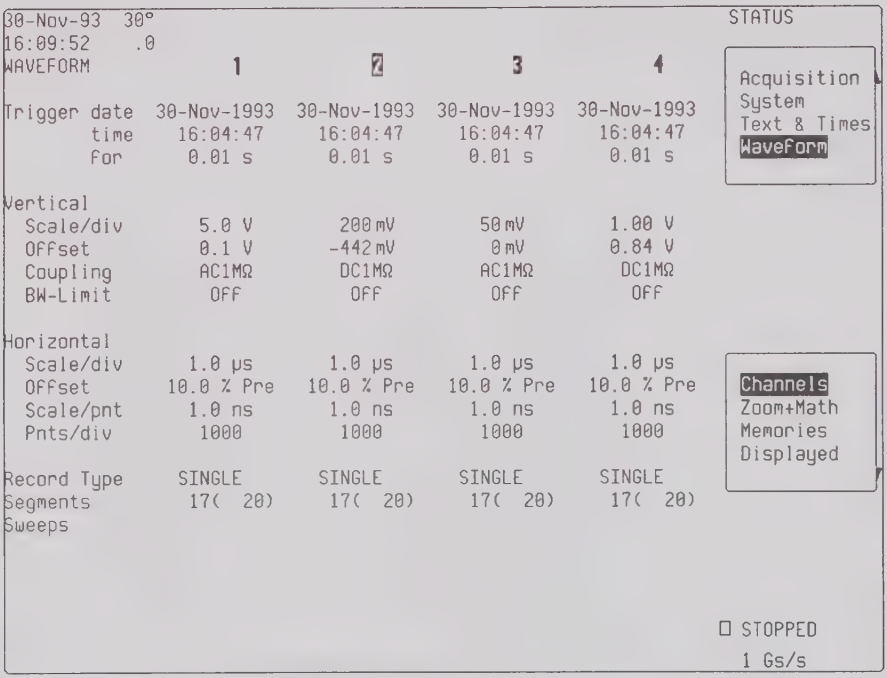
30-Nov-93 30°
16:09:52 .0
WAVEFORM
1 2 3 4
STATUS
Acquisition
System
Text & Times
Waveform
Trigger date 30-Nov-1993 30-Nov-1993 30-Nov-1993 30-Nov-1993
time 16:04:47 16:04:47 16:04:47 16:04:47
for 0.01 s 0.01 s 0.01 s 0.01 s
Vertical
Scale/div 5.0 V 200 mV 50 mV 1.00 V
Offset 0.1 V -442 mV 0 mV 0.84 V
Coupling AC1MΩ DC1MΩ AC1MΩ DC1MΩ
BW-Limit Off Off Off Off
Horizontal
Scale/div 1.0 µs 1.0 µs 1.0 µs 1.0 µs
Offset 10.0 % Pre 10.0 % Pre 10.0 % Pre 10.0 % Pre
Scale/pnt 1.0 ns 1.0 ns 1.0 ns 1.0 ns
Pnts/div 1000 1000 1000 1000
Record Type SINGLE SINGLE SINGLE SINGLE
Segments 17(20) 17(20) 17(20) 17(20)
Sweeps
Channels
Zoom+Math
Memories
Displayed
STOPPED
1 Gs/s

WAVEFORM SUMMARY Shows detailed status information on channels, zoom + math traces, memories, or the displayed traces. Use the bottom menu box to select the desired summary.

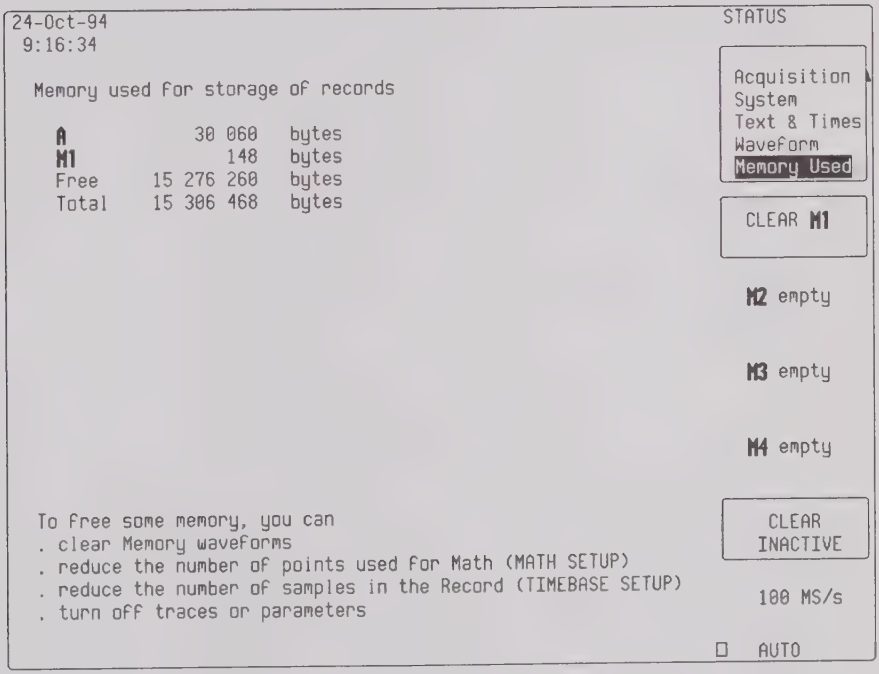

MEMORY USED SUMMARY Shows memory allocation. Memories M1 to M4 can be cleared using this menu.

APPENDIX A

ACQUISITION SYSTEM

Bandwidth (– 3 dB)

@ 50Ω: DC to 500 MHz
100 mV/div: 400 Mhz
50 mV/div and below: 350 MHz

@ 1 MΩ: DC to 250 MHz typical at probe tip with optional 1 Ghz FET probe AP020.

No. of channels: 4 (9354A) or 2 (9350A)

No. of digitizers: 4 (9354A) or 2 (9350A)

Maximum sampling rate and acquisition memories: See tables on page 10–2.

Sensitivity: 2 mV/div to 5 V/div, fully variable.

Scale factors: A wide choice of probe attenuation factors are selectable.

Offset:		
	2 – 9.9 mV/div	± 120 mV
	10 – 199 mV/div	± 1.2 V
	0.2 V – 5 V/div	± 24 V

DC accuracy: Typically 1%. Guaranteed ≤ ± 2% full scale (8 divisions) at 0 V offset.

Vertical resolution: 8 bits.

Bandwidth limiter: 30 MHz.

Input coupling: AC, DC, GND.

Input impedance: 1 MΩ//15 pF or 50 Ω ± 1%.

Max input voltage: 1 MΩ: 250 V (DC + peak AC ≤10 kHz),
50Ω: ± 5 V DC (500 mW) or 5 V RMS.

TIMEBASE SYSTEM

Timebases: Main and up to four zoom traces.

Time/div range: 1 ns/div to 1000 s/div.

Clock accuracy: ≤ 10 ppm.

Interpolator resolution: 10 ps.

Roll mode: Ranges 500 ms to 1,000 s/div. For > 50k points: 10 s to 1,000 s/div.

External clock: ≤100 MHz on EXT input with ECL, TTL or zero crossing levels. Optional up to 50 MHz to 500 MHz rear-panel fixed frequency clock input.

External reference: Optional 10 MHz rear-panel input.

TRIGGERING SYSTEM

Trigger modes: Normal, Auto, Single, Stop.

Trigger sources: CH1, CH2, Line, Ext, Ext/10 (9354A: CH3, CH4). Slope, Level and Coupling for each source can be set independently.

Slope: Positive, Negative.

Coupling: AC, DC, HF, LFREJ, HFREJ.

Pre-trigger recording: 0 to 100% of full scale (adjustable in 1% increments).

Post-trigger delay: 0 to 10,000 divisions (adjustable in 0.1 div increments).

Holdoff by time: 10 ns to 20 s.

Holdoff by events: 0 to 99,999,999 events.

Internal trigger range: ± 5 div.

EXT trigger max input:

1 MΩ//15 pF: 250 V (DC + peak AC ≤10 kHz)
50 Ω ± 1%: ± 5 V DC (500 mW) or 5 V RMS

EXT trigger range: ± 0.5 V (± 5 V with Ext/10)

Trigger timing: Trigger date and time are listed in the Memory Status Menu.

Trigger comparator: Optional ECL rear panel output.

SMART TRIGGER TYPES

Pattern: Trigger on the logic AND of 5 inputs – CH1, CH2, CH3, CH4, and EXT Trigger, (9350A: 3 inputs – CH1, CH2, EXT) where each source can be defined as High, Low or Don't Care. The Trigger can be defined as the beginning or end of the specified pattern.

Signal or Pattern Width: Trigger on width between two limits selectable from < 2.5 ns to 20 s. Will typically trigger on glitches 1 ns wide.

Signal or Pattern Interval: Trigger on interval between two limits selectable from 10 ns to 20 s

Dropout: Trigger if the input signal drops out for longer than a timeout from 25 ns to 20 s.

State/Edge Qualified: Trigger on any source only if a given state (or transition) has occurred on another source. The delay between these events can be defined as a number of events on the trigger channel or as a time interval.

TV: Allows selection of both line (up to 1500) and field number (up to 8) for PAL, SECAM, NTSC or nonstandard video.

ACQUISITION MODES

Random Interleaved Sampling (RIS): For repetitive signals from 1 ns/div to 2 μs/div (M, L: from 1 ns/div to 5 μs/div).

Single shot: For transient and repetitive signals from 10 ns/div (all channels active).

Peak detect: Captures and displays 2.5 ns glitches or other high-speed events.

Sequence: Stores multiple events in segmented acquisition memories.

Number of segments available:

9350A–9354A..... 2–200
9350AM–9354AM 2–500
9350AL–9354AL..... 2–2,000

Max. dead time between segments: 100 μs.

DISPLAY

Waveform style: Vectors connect the individual sample points, which are highlighted as dots. Vectors may be switched off.

CRT: 12.5 × 17.5 cm (9" diagonal) raster.

Resolution: 810 x 696 points.

Modes: Normal, X-Y, Variable or Infinite Persistence.

Real-time clock: Date, hours, minutes, seconds.

Graticules: Internally generated; separate intensity control for grids and waveforms.

Grids: 1, 2 or 4 grids.

Formats: YT, XY, and both together.

Vertical Zoom: Up to 5× vertical expansion (50× with averaging, up to 40 μV sensitivity, only with WP01).

Maximum horizontal zoom factors:

9350A–9354A..... 2,000×
9350AM–9354AM ..... 10,000×
9350AL–9354AL..... 100,000×

Waveforms can be expanded to give 2–2.5 points/division. This allows zoom factors up to 400,000× for the 9354AL when channels are combined.

INTERNAL MEMORY

Waveform memory: Four 16-bit memories (M1, M2, M3, M4).

Processing memory: Four 16-bit waveform processing memories (A, B, C, D).

Setup memory: Four non-volatile memories. Optional cards or disks may also be used for high-capacity waveform and setup storage.

CURSOR MEASUREMENTS

Relative time: Two cursors provide time measurements with resolution of ± 0.05% full-scale for unexpanded traces; up to 10% of the sampling interval for expanded traces. The corresponding frequency value is displayed.

Relative voltage**:** Two horizontal bars measure voltage differences up to ± 0.2% of full-scale in single-grid mode.

Absolute time: A cross-hair marker measures time relative to the trigger, and voltage with respect to ground.

Absolute voltage: A reference bar measures voltage with respect to ground.

WAVEFORM PROCESSING

Up to four processing functions can be called and set up via menus, and may be performed simultaneously. Functions available are: Add, Subtract, Multiply, Divide, Negate, Identity, Summation Averaging and Sine x/x.

Average: Summed averaging of up to 1,000 waveforms in the basic instrument. Up to 10^6 averages are possible with Option WP01.

Extrema*: Roof, Floor, or Envelope values from 1 to 10^6 sweeps.

ERES*: Low-Pass digital filter gives up to 11 bits vertical resolution.

Sampled data is always available, even when a trace is turned off. Any of the above modes can be invoked without destroying the data.

FFT*: Spectral Analysis with five windowing functions and FFT averaging.

**Extrema and ERES modes are provided in Math Package WP01. FFT is in WP02.*

Pulse parameters: Based on ANSI/IEEE Std 181-1977 "Standard on Pulse Measurement and Analysis by Objective Techniques". The terminology is derived from IEEE Std 194-1977 "Standard Pulse Terms and Definitions".

Automatic measurements available by category						
Standard measurements						WP03 option
Cyclic	Dual	Horizontal	Misc	Pulse	Vertical	Statistics
cmean	Δdly	delay	dur	area	ampl	avg
cmedian	Δt@lv	freq	first	base	cmean	fwhm
crms		period	last	fall	cmedian	fwxx
csdev		points	points	f80-20%	crms	hampl
cycles		t@level		f@level	csdev	hbase
duty		width		over+	data	high
freq				over-	maximum	hmedian
period				rise	mean	hrms
				r20-80%	median	htop
				r@level	minimum	low
				top	pkpk	maxp
				width	rms	mode
					sdev	pctl
						pks
						range
						sigma
						totp
						xapk

Statistical analysis can be performed on each of the automatic measurements, displaying the following statistical information for each measured parameter:

- Average
- High
- Low
- Sigma (Standard Deviation)

Automatic PASS/FAIL allows up to five waveform parameters to be tested against selectable thresholds. Waveforms may also be tested against a tolerance template which can be generated inside the instrument.

Optional Processing

Extra processing power can be added by installing LeCroy's waveform processing options. Option WP01 provides waveform characterization in high resolution mode up to 11 bits, and extended mathematical analysis (integration, differentiation, etc.), as well as averaging and extrema mode for the accumulation of maximum and minimum values. Option WP02 performs spectral analysis (FFT processing). Other powerful options from LeCroy include a parameter histogramming and statistical analysis package (WP03), and DDM/PRML which is a disk-drive firmware package for the development and test of high-density storage media.

HARDWARE OPTIONS

GP01: Internal printer + Centronics interface. Raster printer, thermal, resolution 190 DPI. Printout size: 126 × 90 mm.

FD01: 3.5" floppy drive + Centronics interface. DOS format, supports 1.44 MB and 720 kB densities.

MC01/04: PCMCIA II memory-card interface + 512k memory card.

HD01: PCMCIA III hard-disk interface.

935XA–CKTRIG: 10 MHz external clock reference input; 500 MHz external clock input; trigger comparator output.

AUTOSETUP

Pressing the AutoSetup button automatically scales the timebase, trigger and sensitivity settings to display a wide range of repetitive signals.

Type of signals detected: Repetitive signals with amplitudes between 2 mV and 40 V, frequency above 50 Hz and a duty cycle greater than 0.1%.

Autosetup time: Approximately 2 seconds.

Vertical find: Automatically scales sensitivity and offset.

PROBES

Model: One PP002 (10:1, 10 MΩ // 15 pF) probe supplied per channel. 300 V max input.

The 9350A series is fully compatible with LeCroy's range of FET probes which may be purchased separately.

Probe calibration: Max 1 V into 1 MΩ, 500 mV into 50 Ω, frequency and amplitude programmable, pulse or square wave selectable, rise and fall time 1 ns typical. Alternatively, the calibrator output can provide a trigger output or a PASS/FAIL test output.

INTERFACING

Remote control: Possible by GPIB and RS-232-C for all front-panel controls, as well as all internal functions.

RS-232-C port: Asynchronous up to 19200 baud for computer/terminal control or printer/plotter connection.

GPIB port: (IEEE-488.1) Configurable as talker/listener for computer control and fast data transfer. Command language complies with requirements of IEEE-488.2.

Centronics port: Optional hard-copy parallel interface.

Hard copy: The following printers and plotters can be used to make hard copies of the display: HP DeskJet (color or BW), HP ThinkJet, QuietJet, LaserJet, PaintJet and EPSON printers; HP 7470 and 7550 plotters or similar, and HPGL-compatible plotters. An optional internal high-resolution graphics printer is also available. TIFF and BMP graphics formats are available to incorporate the oscilloscope screens in word processing and desktop publishing software packages. Screen dumps are activated by a front-panel button or via remote control.

GENERAL

Auto-calibration ensures specified DC and timing accuracy.

Temperature: 5° to 40° C (41° to 104° F) rated; 0° to 50° C (32° to 122° F) operating.

Humidity: <80%.

Shock and vibration: Meets requirements of MIL-STD-810C modified to LeCroy design specifications, and MIL-T-28800C.

Power: 90–250 V AC, 45–66 Hz, 230 W.

Battery backup: Front-panel settings maintained for two years.

Dimensions: (HWD) 21cm x 37cm x 41cm (8½"x14½"x16¼").

Weight: 13 kg (28.6 lbs) net, 18.5 kg (40.7 lbs) shipping.

Warranty: Three years.

ENHANCED RESOLUTION

Quite often the high sampling rate available in LeCroy oscilloscopes is higher than is actually required for the bandwidth of the signal being analyzed. This oversampling, facilitated by the oscilloscope's long memories, can be used to advantage by filtering the digitized signal in order to increase the effective resolution of the displayed trace. This is similar to smoothing the signal with a simple moving average filter, except that it is more efficient in terms of bandwidth, and has better passband characteristics. It can be used instead of averaging successive traces for waveforms with single-shot characteristics.

Advantages of Enhanced Resolution

Two subtly different characteristics of the instrument are improved by the enhanced resolution filtering:

1. In all cases the resolution (i.e. the ability to distinguish closely-spaced voltage levels) is improved by a fixed amount for each filter. This is a true increase in resolution which occurs whether or not the signal is noisy, and whether or not it is a single-shot or a repetitive signal.
2. The signal-to-noise ratio (SNR) is improved in a manner which depends on the form of the noise in the original signal. This occurs because the enhanced resolution filtering decreases the bandwidth of the signal, and will therefore filter out some of the noise.

Implementation

The oscilloscope implements a set of constant phase finite impulse response (FIR) filters, optimised to provide fast computation, excellent step response and minimum bandwidth reduction for resolution improvements of between 0.5 and 3 bits in 0.5 bit steps. Each 0.5 bit step corresponds to a bandwidth reduction by a factor of two, allowing easy control of the bandwidth/resolution trade-off. The parameters of the six filters are given in the following table:

Resolution Increase (Enhancement)	–3 dB Bandwidth (× Nyquist)	Filter Length (samples)
0.5	0.5	2
1.0	0.241	5
1.5	0.121	10
2.0	0.058	24
2.5	0.029	51
3.0	0.016	117

Parameters of the FIR Enhanced Resolution Filters

The filters used are low-pass filters, so the actual increase in SNR obtained in any particular situation will depend on the power spectral density of the noise present on the signal. The improvement in SNR corresponds to the improvement in resolution if the noise in the signal is white, i.e. evenly distributed across the frequency spectrum. If the noise power is biased towards high frequencies then the SNR improvement will be better than the resolution improvement, whereas if the noise is mostly at lower frequencies, the improvement may not be as good as the resolution improvement. The improvement in the SNR due to the removal of coherent noise signals (for example, feed-through of clock signals) depends on whether the dominant frequency components of the signal fall in the passband of the filter or not. This can easily be deduced by using the spectrum analysis option (WP02) of the oscilloscope.

The filters used for the enhanced resolution function have an exactly constant zero phase response. This has two desirable properties. Firstly, the filters do not distort the relative position of different events in the waveform even if the frequency content of the events is different. Secondly, by also using the fact that the waveforms are stored, the delay normally associated with filtering (between the input and output waveforms) can be exactly compensated for during the computation of the filtered waveform.

All filters have been implemented to have exactly unity gain (at low frequency). Therefore, enhanced resolution should not cause overflow if the source data were not overflowed. If part of the source trace had overflowed, filtering will be allowed, but it must be remembered that the results in the vicinity (within the length of the filter impulse response) of the overflowed data will be incorrect. This is permitted because in some circumstances an overflow may be a spike of only one or two samples. The energy in this spike might not be sufficient to significantly affect the results, so it would be undesirable to disallow the whole trace in this case.

When should Enhanced Resolution be used?

There are two main situations for which enhanced resolution is especially useful. Firstly, if the signal is noticeably noisy (and measurements of the noise are not required), the signal can be "cleaned up" by using the enhanced resolution function. Secondly, even if the signal is not particularly noisy, but high precision measurements of the waveform are required (perhaps when using Expand with high vertical gain) then enhanced resolution will increase the resolution of the measurements.

In general, enhanced resolution replaces the averaging function in situations where the data record has a single-shot or slowly repetitive nature and averaging cannot be used.

The following examples illustrate uses of the enhanced resolution function in these situations.

Low-pass filtering

The figure below shows the spectrum of a square signal before (top grid) and after (bottom grid) enhanced resolution processing. The result clearly shows how the filter rejects high-frequency components from the signal. The higher the bit enhancement, the lower the resulting bandwidth.

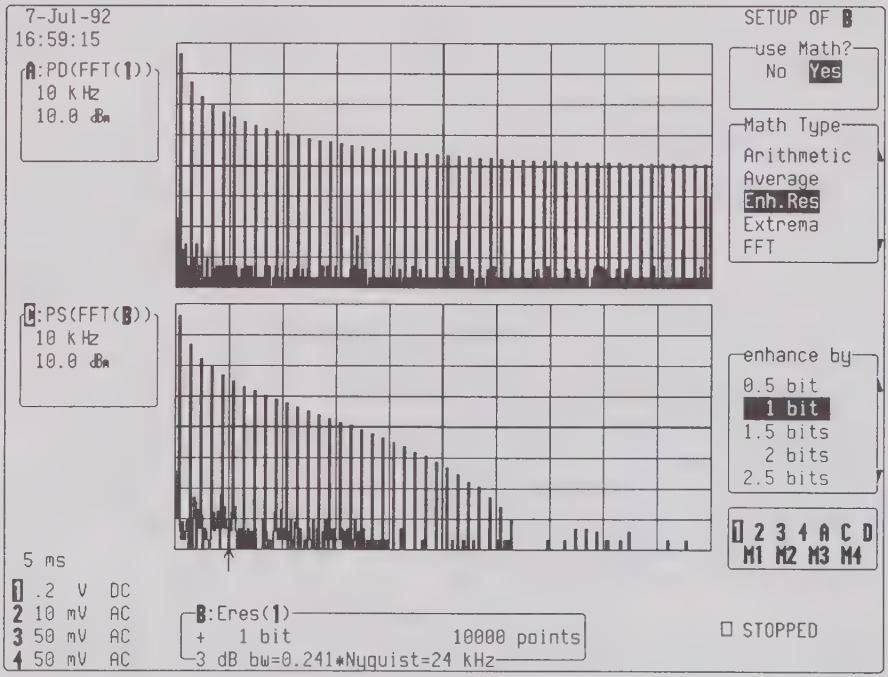

Increasing Vertical Resolution

In the following example the bottom trace has been significantly enhanced by a 3–bit enhanced resolution function.

Note: The original signal being highly over-sampled, the resulting bandwith is still high enough for the signal not to be distorted.

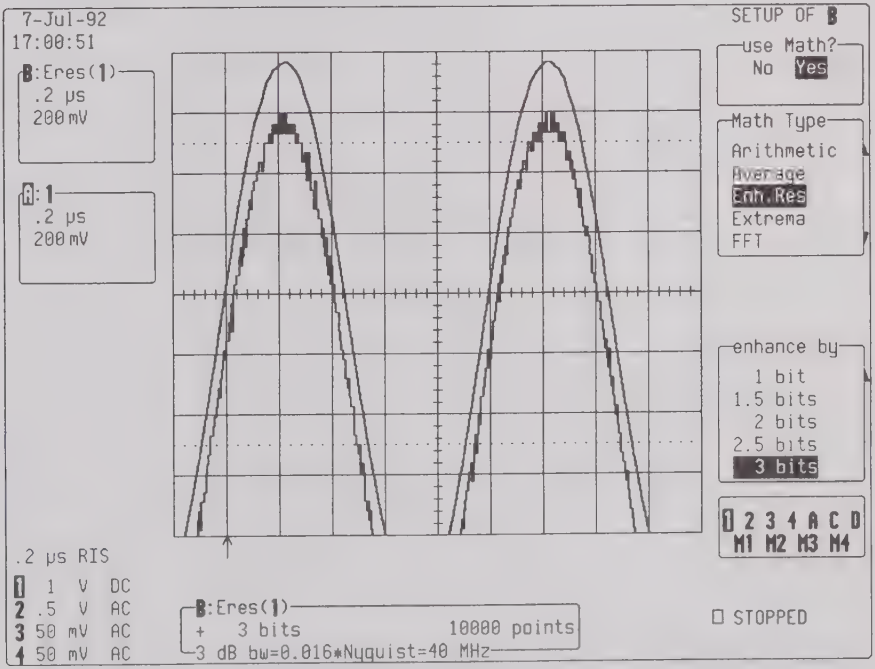

Reducing Noise

The following figure shows the effect of enhanced resolution on a noisy signal.

The original trace (top grid) has been processed by a 2–bit enhanced resolution filter.

The result (bottom grid) shows a "smooth" trace where much of the noise has been eliminated.

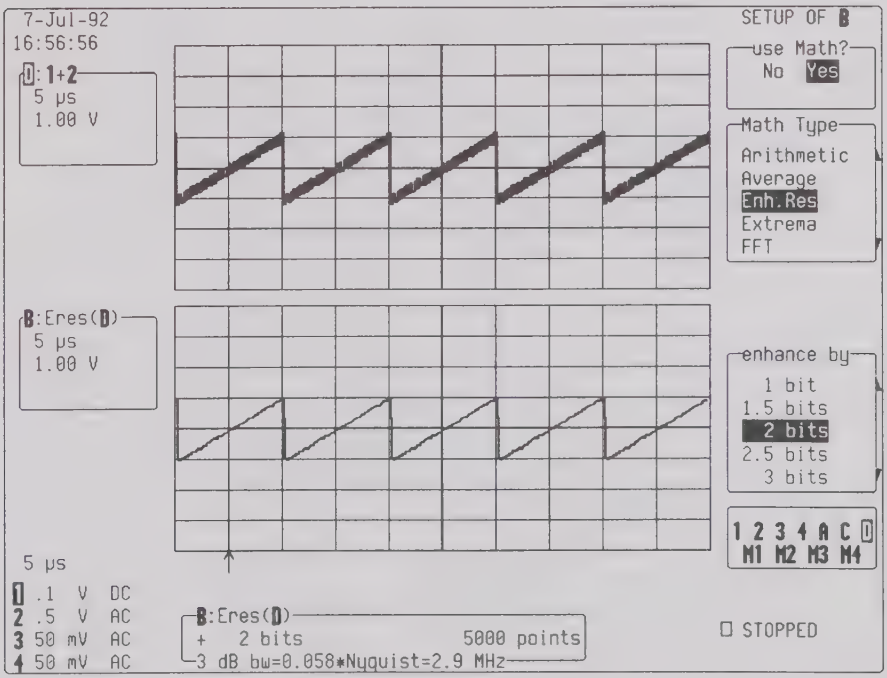

Cautionary notes

The enhanced resolution function only improves the resolution of a trace, it cannot improve the accuracy or linearity of the original quantization by the 8–bit ADC.

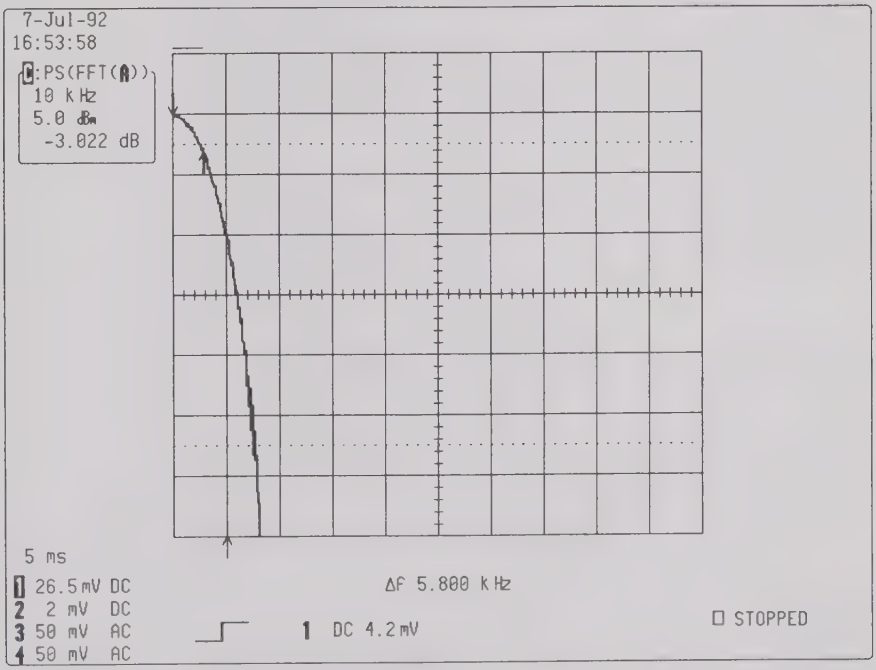

The constraint of good temporal response for the enhanced resolution filters excludes the use of maximally-flat filters. Therefore, the passband will cause signal attenuation for signals near the cut-off frequency. One must be aware when using these filters that the highest frequencies passed may be slightly attenuated. The frequency response of a typical enhanced resolution filter (the 2–bit enhancement filter) is shown in the above figure. The –3 dB cut-off frequency at 5.8% of the Nyquist frequency is marked.

The filtering must be performed on finite record lengths, therefore data is lost at the start and end of the waveform, so the trace becomes slightly shorter after filtering.

The number of samples lost is exactly equal to the length of the impulse response of the filter used, and thus varies between 2 and 117

samples. Because the oscilloscope has very long waveform memories this loss is not normally noticed (it is only 0.2% of a 50,000 point trace). However, it is possible to ask for filtering on a record so short that there would be no data output. The oscilloscope will not allow filtering in this case.

The FFT option (WP02) adds the spectrum analysis capability to the oscilloscope. This appendix gives additional information on its use

Spectra of single time-domain waveforms can be computed and displayed and Power Averages can be obtained over as many as 50000 spectra.

Spectra are displayed with a linear frequency axis running from zero to the Nyquist frequency. The frequency scale factors (Hz/div) are in a 1–2–5 sequence. The Nyquist frequency is at the right-hand edge of the trace.

The processing equation is displayed at the bottom of the Fourier Transform menu, together with three key parameters which characterize an FFT spectrum:

1) Transform Size N (number of input points).

2) Nyquist frequency (= ½ sample rate).

3) Δf (the frequency increment) between two successive points of the spectrum. These parameters are related as follows:

$$\text{Nyquist frequency} = \Delta f * N/2$$

Also note that $\Delta f = 1/T$, where T is the duration of the input waveform record (10 * time/div).

The number of output points is equal to N/2.

The menu allows the user to set the following parameters:

Type

Power Spectrum (dBm) is the signal power (or magnitude) represented on a logarithmic vertical scale. 0 dBm corresponds to the voltage (0.316 V peak) which is equivalent to 1 mW into 50Ω. The power spectrum is suitable for characterizing spectra which contain isolated peaks.

Power Density (dBm) is the signal power normalized to the bandwidth of the equivalent filter associated with the FFT calculation. The power density is suitable for characterizing broad-band noise.

Magnitude (same units as the input signal) is the peak signal amplitude represented on a linear scale.

Phase (degrees) is measured with respect to a cosine whose maximum occurs at the left-hand edge of the screen, at which point it has 0° similarly, a positive-going sine starting at the left-hand edge of the screen has –90° phase.

Real, Imaginary and **Real + Imaginary** (same units as the input signal) represent the complex result of the FFT processing.

Maximum Number of Points

FFT spectra are computed over all of the source time-domain waveform. This parameter limits the number of points used for FFT processing. If the input waveform contains more points than the selected maximum, these are decimated prior to FFT processing. If the input waveform has fewer points, all points are used.

Window Type

The window type defines the bandwidth and shape of the equivalent filter associated with the FFT processing.

The **Rectangular** window is normally used when:

a) the signal is a transient which is completely contained in the time-domain window.

b) the signal is known to have a fundamental frequency component which is an integer multiple of the fundamental frequency of the window.

Signals not in this class show varying amounts of spectral leakage and scallop loss, which can be corrected by using one of the other windows.

The popular **Von Hann (Hanning)** and **Hamming** windows reduce leakage and improve amplitude accuracy. However, the frequency resolution is also reduced.

The **Flat Top** window provides excellent amplitude accuracy, with moderate reduction of leakage, at the cost of frequency resolution.

The **Blackman-Harris** window reduces the leakage to a minimum, with a trade-off in frequency resolution.

The table in the FFT glossary in this section shows the parameters of equivalent filters.

FFT POWER AVERAGE

A function can be defined as the **Power Average** of FFT spectra computed by another function.

PROCESSING FACILITIES

Other waveform processing functions such as Averaging and Arithmetic can be applied to waveforms before the FFT processing. Time-domain averaging prior to FFT can be used if a stable trigger is available. It will reduce the random noise in the signal.

The FFT frequency range (i.e. Nyquist frequency) and the frequency resolution can be controlled as follows:

- To increase the frequency resolution, increase the length of the time-domain waveform record (i.e. use a slower time base).
- To increase the frequency range, increase the effective sampling frequency (i.e. increase the **maximum number of points** or use a faster time base).

The **Memory Status** menu displays parameters of the waveform descriptor (number of points, horizontal and vertical scale factors and units, etc.).

CURSORS

To read the amplitude and frequency of a data point, the **Absolute Time** cursor can be moved over into the frequency domain by going beyond the right-hand edge of a time-domain waveform.

The **Relative Time** cursors can be moved over into the frequency domain to simultaneously indicate the frequency difference and the amplitude difference between two points on each frequency-domain trace.

The **Absolute Voltage** cursor reads the absolute value of a point in a spectrum in the appropriate units, and the **Relative Voltage** cursors indicate the difference between two levels on each trace.

FFT ALGORITHMS

A summary of algorithms used in the oscilloscope's FFT computation is given for reference.

1) If the maximum number of points is smaller than the source number of points, the source waveform data are decimated prior to the FFT. The decimated data cover the full length of the source waveform.

   The resulting sampling interval and the actual transform size selected provide the frequency scale factor in a 1–2–5 sequence.

2) The data are multiplied by the selected window function.

3) FFT is computed, using a fast implementation of the DFT (Discrete Fourier Transform):

$$X_n = \frac{1}{N} \sum_{k=0}^{k=N-1} x_k \times W^{nk}$$

where x_k is a complex array whose real part is the modified source time-domain waveform, and whose imaginary part is 0.

X_n is the resulting complex frequency-domain waveform.

$W = e^{-2\pi j/N}$

N is the number of points in x_k and X_n.

The generalized FFT algorithm, as implemented here, works on N which need not be a power of 2.

4) The resulting complex vector X_n is divided by the coherent gain of the window function, to compensate for the loss of the signal energy due to windowing. This compensation provides accurate amplitude values for isolated spectrum peaks.

5) The real part of X_n is symmetric around the Nyquist frequency, that is:

$R_n = R_{N-n}$

while the imaginary part is asymmetric, that is:

$I_n = -I_{N-n}$

The energy of the signal at a frequency n is distributed equally between the first and the second halves of the spectrum; the energy at frequency 0 is completely contained in the 0 term.

The first half of the spectrum (Re, Im), from 0 to the Nyquist frequency is kept for further processing and doubled in amplitude:

$R'_n = 2 \times R_n \qquad 0 \le n < N/2$

$I'_n = 2 \times I_n \qquad 0 \le n < N/2$

6) The resultant waveform is computed for the spectrum type selected.

If **Real**, **Imaginary** or both are selected, no further computation is needed. The appropriate part of the complex result is given as the result (R'_n or I'_n or $R'_n + jI'_n$, as defined above).

If Magnitude is selected, the magnitude of the complex vector is computed as:

$$M_n = \sqrt{R'^2_n + I'^2_n}$$

Steps (1) to (6) above lead to the following result:

An AC sine wave of amplitude 1.0 V with an integral number of periods Np in the time window, transformed with the rectangular window, results in a fundamental peak of 1.0 V magnitude in the spectrum at frequency Np × Δf.

However, a DC component of 1.0 V, transformed with the rectangular window, results in a peak of 2.0 V magnitude at 0 Hz.

The waveforms for the other available spectrum types are computed as follows:

Phase: angle = arctan (I_n/R_n) $M_n > M_{min}$

angle = 0 $M_n \leq M_{min}$

where M_{min} is the minimum magnitude, fixed at about 0.001 of the full scale at any gain setting, below which the angle is not well defined.

dBm Power Spectrum:

$$dBm\ PS = 10 \times \log_{10}\left(\frac{M_n^2}{M_{ref}^2}\right) = 20 \times \log_{10}\left(\frac{M_n}{M_{ref}}\right)$$

where M_{ref} = 0.316 V (that is, 0 dBm is defined as a sine wave of 0.316 V peak or 0.224 V RMS, giving 1.0 mW into 50Ω).

The "dBm Power Spectrum" is the same as "dBm Magnitude", as suggested by the above formula.

dBm Power Density:

$$dBm\ PD = dBm\ PS - 10 \times \log_{10} \left(ENBW \times \Delta f \right)$$

where $ENBW$ is the equivalent noise bandwidth of the filter corresponding to the selected window.

Δf is the current frequency resolution (bin width).

7) The FFT Power Average takes the complex frequency-domain data R'_n and I'_n for each spectrum generated in step (5) above, and computes the square of the magnitude

$$M_n^2 = R'^2_n + I'^2_n,$$

sums M_n^2 and counts the accumulated spectra. The total is normalized by the number of spectra and converted to the selected result type using the same formulae as are used for the Fourier Transform.

EXAMPLES OF FFT PROCESSING

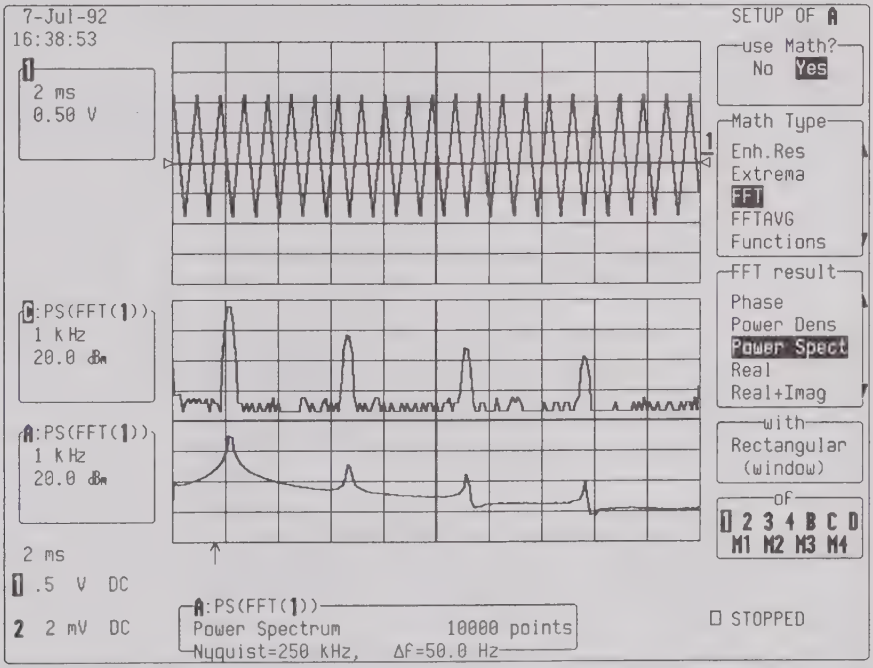

The Effect of Windowing

The figure above illustrates an example with spectral leakage and the use of an appropriate window to reduce the leakage

Channel 1 (top trace) shows a triangular wave, approximately 1 kHz frequency.

The bottom trace is an expansion of an FFT with a **Rectangular** window. Each peak, and especially the fundamental component at 1 kHz, influences the spectrum over a wide range of frequencies due to the leakage of the signal power through the side lobes of the equivalent filter.

The middle trace is an expansion of another FFT of the same Channel 1 waveform, defined with the **Blackman-Harris** window. The leakage is clearly reduced, but the peaks around the harmonics are wider. This reflects the increased bandwidth of the filter associated with the Blackman-Harris window.

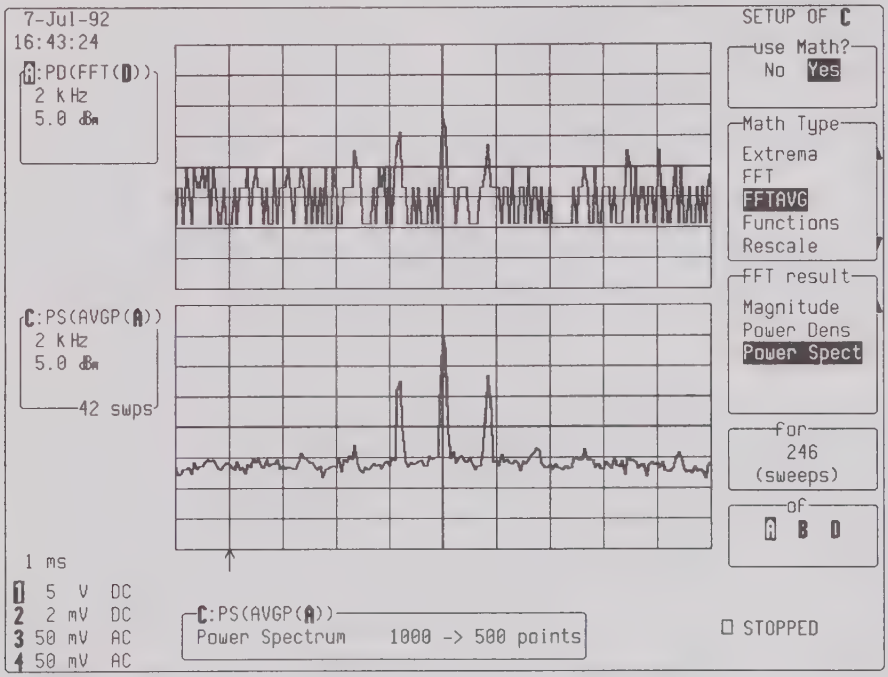

The Effect of FFT Averaging

The above figure shows an FFT of a noisy signal (top trace). By applying a power average to this FFT, all the incoherent noise is eliminated. The signal (Amplitude Modulation) is now clearly visible

FFT GLOSSARY

This glossary defines terms frequently used in FFT spectrum analysis and relates them to the oscilloscope.

Aliasing

If the input signal to a sampling acquisition system contains components whose frequency is greater than the Nyquist frequency (half the sampling frequency), there will be less than two samples per signal period. The result is that the contribution of these components to the sampled waveform will be indistinguishable from that of components below the Nyquist frequency. This is called aliasing.

The user should select the time base and transform size resulting in a Nyquist frequency higher than the highest significant component in the time-domain record.

Coherent Gain

The normalized coherent gain of a filter corresponding to each window function is 1.0 (0 dB) for a rectangular window and less than 1.0 for other windows. It defines the loss of signal energy due to the multiplication by the window function. In the oscilloscope this loss is compensated. The table below lists the values for the windows implemented.

ENBW (Equivalent Noise Bandwidth)

For a filter associated with each frequency bin, ENBW is the bandwidth of an equivalent rectangular filter (having the same gain at the center frequency) which would collect the same power from a white noise signal. In the table below, ENBW is listed for each window function implemented and is given in bins.

Window type	Highest side lobe (dB)	Scallop loss (dB)	ENBW (bins)	Coherent gain (dB)
Rectangular	–13	3.92	1.0	0.0
von Hann	–32	1.42	1.5	–6.02
Hamming	–43	1.78	1.37	–5.35
Flat-Top	–44	0.01	2.96	–11.05
Blackman-Harris	–67	1.13	1.71	–7.53

Window Frequency-Domain Parameters

Filters

Computing an N–point FFT is equivalent to passing the time-domain input signal through N/2 filters and plotting their outputs against the frequency. The spacing of filters is $\Delta f = 1/T$ while the bandwidth depends on the window function used (see Frequency bins).

Frequency bins

The FFT algorithm takes a discrete source waveform, defined over N points, and computes N complex Fourier coefficients, which are interpreted as harmonic components of the input signal.

For a real source waveform (imaginary part equals 0), there are only N/2 independent harmonic components.

An FFT corresponds to analyzing the input signal with a bank of N/2 filters, all having the same shape and width, and centered at N/2 discrete frequencies. Each filter collects the signal energy that falls into the immediate neighborhood of its center frequency, and thus it can be said that there are N/2 "frequency bins".

The distance, in Hz, between the center frequencies of two neighboring bins is always:

$$\Delta f = 1/T$$

where T is the duration of the time-domain record in seconds.

The width of the main lobe of the filter centered at each bin depends on the window function used. The rectangular window has a nominal width at 1.0 bin. Other windows have wider main lobes (see table on page C–9).

Frequency Range

The range of frequencies computed and displayed is 0 Hz (displayed at the left-hand edge of the screen) to the Nyquist frequency (at the rightmost edge of the trace).

Frequency Resolution

In a simple sense, the frequency resolution is equal to the bin width, Δf. That is, if the input signal changes its frequency by Δf, the corresponding spectrum peak will be displaced by Δf. For smaller changes of frequency, only the shape of the peak will change.

However, the effective frequency resolution (i.e. the ability to resolve two signals whose frequencies are almost the same) is further limited by the use of window functions. The ENBW value of all windows other than the rectangular is greater than Δf, i.e. greater than the bin width. The table on page C–9 lists the ENBW value for the windows implemented.

Leakage

Observe the power spectrum of a sine wave having an integral number of periods in the time window (i.e. the source frequency equals one of the bin frequencies) using a rectangular window. The spectrum contains a sharp component whose value reflects accurately the source waveform's amplitude. For intermediate input frequencies this spectral component has a lower and broader peak.

The broadening of the base of the peak, stretching out into many neighboring bins is termed the leakage. It is due to the relatively high side lobes of the filter associated with each frequency bin.

The filter side lobes and the resulting leakage are reduced when one of the available window functions is applied. The best reduction is provided by the **Blackman-Harris** and the **Flat Top** windows. However, this reduction is offset by a broadening of the main lobe of the filter.

Numbers of Points

FFT is computed over the number of points (Transform Size) whose upper bounds are the source number of points and the maximum number of points selected in the menu.

FFT generates spectra having N/2 output points.

Nyquist Frequency

The Nyquist frequency is equal to one half of the effective sampling frequency (after the decimation), i.e. $\Delta f \times N/2$.

Picket Fence Effect

If a sine wave has a whole number of periods in the time domain record, the power spectrum obtained with a rectangular window will have a sharp peak, corresponding exactly to the frequency and amplitude of the sine wave. On the other hand, if a sine wave does not have a whole number of periods in the record, the spectrum peak obtained with a rectangular window will be lower and broader.

The highest point in the power spectrum can be 3.92 dB lower (1.57 times) when the source frequency is halfway between two discrete bin frequencies. This variation of the spectrum magnitude is called the picket fence effect (the loss is called the scallop loss).

All window functions compensate this loss to some extent, but the best compensation is obtained with the Flat Top window (see table on page C–9).

Power Spectrum

The power spectrum (V^2) is the square of the magnitude spectrum.

The power spectrum is displayed on the dBm scale, with 0 dBm corresponding to $Vref^2 = (0.316\ Vpeak)^2$, where Vref is the peak value of the sinusoidal voltage which is equivalent to 1 mW into 50 Ω.

Power Density Spectrum

The power density spectrum (V^2/Hz) is the power spectrum divided by the equivalent noise bandwidth of the filter, in Hz.

The power density spectrum is displayed on the dBm scale, with 0 dBm corresponding to ($Vref^2/Hz$).

Sampling Frequency

The time-domain records are acquired at sampling frequencies which depend on the selected time base.

Before the FFT computation, the time-domain record may be decimated. If the selected maximum number of points is lower than the source number of points, the effective sampling frequency is reduced.

The effective sampling frequency equals twice the Nyquist frequency.

Scallop Loss

Loss associated with the picket fence effect (listed in the table on page C–9 for windows implemented).

Window Functions

All available window functions belong to the sum of cosines family with one to three non–zero cosine terms:

$$W_k = \sum_{m=0}^{m=M-1} a_m \cos\left(\frac{2\pi k}{N} m\right) \qquad 0 \le k < N$$

where $M = 3$ is the maximum number of terms

a_m are the coefficients of the terms

N is the number of points of the decimated source waveform

k is the time index

The table below lists the coefficients a_m.

The window functions seen in the time domain are symmetric around the point k = N/2

Window type	a0	a1	a2
Rectangular	1.0	0.0	0.0
von Hann	0.5	–0.5	0.0
Hamming	0.54	–0.46	0.0
Flat-Top	0.281	–0.521	0.198
Blackman-Harris	0.423	–0.497	0.079

Coefficients Of Window Functions

ERROR MESSAGES

For some combinations of source waveform properties and processing functions, one of the following error messages may be displayed at the top of the screen:

Incompatible input record type

FFT power average is defined only on a function defined as FFT.

Horizontal units don't match

FFT of a frequency-domain waveform is not available.

FFT source data zero filled

If there are invalid data points in the source waveform (at the beginning or at the end of the record), these are replaced by zeros before FFT processing.

FFT source data over/underflow

The source waveform data has been clipped in amplitude, either in the acquisition (gain too high or inappropriate offset) or in previous processing. The resulting FFT contains harmonic components which would not be present in the unclipped waveform.

The settings defining the acquisition or processing should be changed to eliminate the over/underflow condition.

Circular computation

A function definition is circular (i.e. the function is its own source, indirectly via another function or expansion). One of the definitions should be changed.

REFERENCES

Bergland, G.D., "*A Guided Tour of the Fast Fourier Transform*", IEEE Spectrum, July 1969, pp. 41 – 52.

A general introduction to FFT theory and applications.

Harris, F.J., "*On the Use of Windows for Harmonic Analysis with the Discrete Fourier Transform*", Proceedings of the IEEE, vol. 66, No. 1, January 1978, pp. 51 – 83.

Classical paper on window functions and their figures of merit, with many examples of windows.

Brigham, E.O., "*The Fast Fourier Transform*", Prentice Hall, Inc., Englewood Cliffs, N.J., 1974.

Theory, applications and implementation of FFT. Includes discussion of FFT algorithms for N not a power of 2.

Ramirez, R.W., "*The FFT Fundamentals and Concepts*", Prentice Hall, Inc., Englewood Cliffs, N.J., 1985.

Practice oriented, many examples of applications.

Parameter measurements are based on the recommendations of IEEE Std 181–1977 "Standard on Pulse Measurement and Analysis by Objective Techniques", and terminology is derived from ANSI/IEEE Std 194–1977 "Standard Pulse Terms and Definitions".

VOLTAGE MEASUREMENTS

In order to find magnitude reference crossings, the base and top magnitudes are assigned. The method employed follows IEEE Std 181–1977. The magnitude histogram of the waveform within the cursor window is created and searched for dominant magnitude populations. If no two dominant populations can be found, the minimum and the maximum of the distribution are used. Of the two magnitudes, the first in the cursor window is assigned to the **Base** line and the other to the **Top** line.

Amplitude is measured by the absolute difference between Base and Top.

Maximum determines the maximum voltage within the area defined by the cursors.

Minimum determines the minimum voltage within the area defined by the cursors.

The following can then be computed:

Peak to Peak value	=	Maximum – Minimum
Overshoot positive	=	(Maximum – higher value of Base and Top – Minimum) / Amplitude
Overshoot negative	=	(Maximum – lower value of Base and Top – Minimum) / Amplitude
Median	=	0.5 (Base + Top)

Note: In the following, v_i denotes the measured sample values. The number of data values used for computing Mean, Standard Deviation, RMS, and Area values depends on the identification of a periodic waveform. If one or more periods are identified, a subwindow is used which starts at the first mesial point (50% magnitude transition) and ends at the last mesial point on a leading edge in the original window (i.e. in the formulae below, N = the number of data points within the periods found up to a maximum of 100 periods). In all other cases, Mean, Standard Deviation, RMS, and Area are evaluated using all data points inside the cursor window.

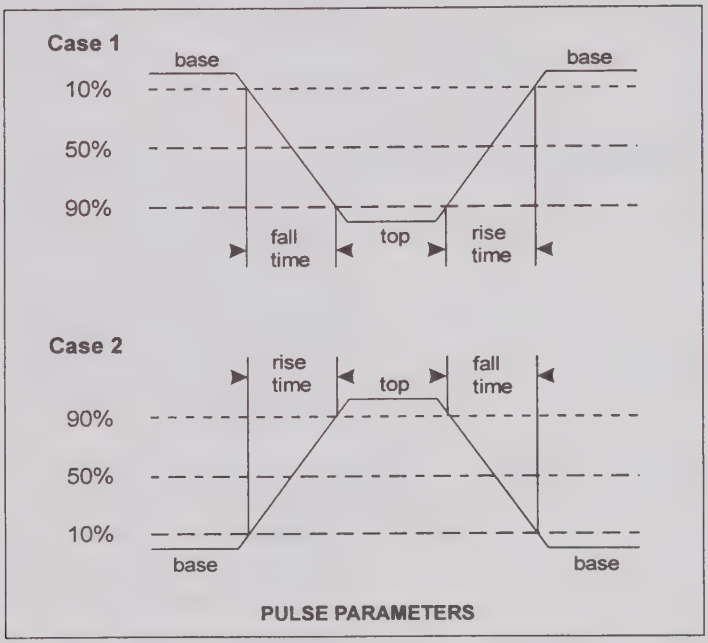

Mean determines the average value of all the data points selected as described above.

$$\frac{1}{N} \sum_{i=1}^{N} v_i$$

Standard Deviation (Sdev) is the standard deviation of the measured points from the mean. It is calculated from the following formula:

$$\sqrt{\frac{1}{N} \sum_{i=1}^{N} (v_i - mean)^2}$$

RMS is derived from the square root of the average of the squares of the magnitudes, for all the data as described above.

$$\sqrt{\frac{1}{N}\sum_{i=1}^{N}(v_i)^2}$$

The **Area** covered by the signal is computed from the sum over all the data points selected, as described above, times the sample interval.

TIME MEASUREMENTS

Note: For time measurements it is necessary to distinguish between magnitude crossings occurring on leading edges and those occurring on trailing edges. In the equations below the following notation has been used:

Ml = *number of leading edges found*

Mt = *number of trailing edges found*

Tl_i^x = *time when leading edge i crosses the x% level*

Tt_i^x = *time when trailing edge i crosses the x% level*

All times are linearly interpolated between two measured points.

Period is calculated from the average length of the full periods of the waveform within the selected interval. A full period is the time measured between the first and third 50% crossing points, the third and fifth, the fifth and seventh, etc.

$$\frac{1}{Ml-1}\sum_{i=1}^{Ml-1}\left(Tl_{i+1}^{50}-Tl_i^{50}\right)$$

Frequency is then calculated as 1/Period.

Cycles gives the number of periods found.

Pulse Width (Width) determines the duration between the **Pulse Start** (mesial point, i.e. the 50% magnitude transition point, on the leading edge) and the **Pulse Stop** (mesial point on the trailing edge) of a pulse waveform. Like the pulse start, the pulse stop is a 50% magnitude reference point.

$$\frac{1}{Mt}\sum_{i=1}^{Mt}\left(Tt_i^{50} - Tl_i^{50}\right)$$

Delay is the time from the trigger point to the first 50% transition crossing, i.e. the **Pulse Start.**

$$Tl_i^{50}$$

Duty Cycle measures the Pulse Width as a percentage of the Pulse Period.

Risetime (Rise) measures the time of a pulse waveform's transition with a positive slope.

Falltime (Fall) measures the time of a pulse waveform's transition with a negative slope.

For both risetime and falltime measurements the instrument determines the duration between the proximal point (10% magnitude transition) and the distal point (90% magnitude transition) on leading edges and the duration between the distal point and the proximal point on trailing edges:

leading edge duration =

$$\frac{1}{Ml}\sum_{i=1}^{Ml}\left(Tl_i^{90} - Tl_i^{10}\right)$$

trailing edge duration =

$$\frac{1}{Mt}\sum_{i=1}^{Mt}\left(Tt_i^{10} - Tt_i^{90}\right)$$

Depending on the sign of the slope of the leading edge transition, the instrument then assigns either:

for positive slope:	Risetime	=	leading edge duration
	Falltime	=	trailing edge duration
for negative slope:	Risetime	=	trailing edge duration
	Falltime	=	leading edge duration

CYCLIC PARAMETERS

Cyclic category parameters are determined from the first 50 full waveform cycles displayed. If more than 50 cycles are displayed, only the first 50 full cycles will be used.

Cyclic Category Parameters	
cmean	cmedian
crms	csdev
cycles	duty
freq	period

A

Acquisition
- Fast repetitive signals. *See* Sequence mode and RIS
- Memory length, 10-1
- Number of points, 10-1; C-2; C-3; C-11
- Peak detect, 8-2
- Record length, 10-1
- RIS (Random Interleaved Sampling), 3-3; 8-2; 8-3; 9-1; 9-2; 10-1; 11-5; 11-12; 11-17
- Roll mode, 8-1; 8-3; 9-1; 9-2
- Sequence mode, 8-4; 9-1; 9-2; 10-1; 10-3; 10-4; 10-5; 16-1; 16-2; 18-2; 19-19
- Single-shot, 8-1; 8-2; 8-3; 8-4; 9-2; 10-1
- Slow signals. *See* Roll mode
- Summary, 6-1; 7-2; 24-1

Arithmetic (Setup menu), 16-4

AUTO button, 9-1

AUTO SETUP button, 9-2

Averaging (Setup menu), 16-5; 16-6

B

Bandwidth
- Limiting, 13-1; A-1
- Specifications, A-1

Batteries, 19-10

C

Cabling for printers/plotters, 19-2

Calibration, 3-3; 13-4
- CAL BNC control, 19-1; 19-21

Channels
- Controls, 12-1
- Pairing, 10-2

CLEAR SWEEPS button, 16-5; 16-8; 18-5; 18-6; 22-9; 22-10; 22-11

Combining multiple functions, 14-2; 14-3

Controls
- Channels, 12-1
- Display, 7-3; 17-2; 18-1
- Front-Panel, 5-1
- Menu Buttons, 11-1; 17-1
- Timebase & Trigger, 9-1

Copying files between storage media, 19-11; 19-15

Coupling, 13-4
- Menu, 13-1

COUPLING button, 12-2; 12-4

Cursors
- Absolute, 22-7
- Amplitude, 22-7
- Diff, Ref, 22-7
- FFT (Fast Fourier Transform), C-3
- General
  - Persistence Display, 22-1
  - Standard Display, 22-1
  - XY Display, 22-1
- Measurement, 17-2
- Parameter & PASS/FAIL, 22-9; 22-10; 22-11; 22-16
- Relative, 22-7
- Time, 19-19; 22-7
- Tracking cursors, 22-7

D

DELAY knob, 9-3

Directory, 19-7; 19-11; 19-16
- Add new directory, 19-11; 19-16; 19-18
- Deleting, 19-9; 19-11; 19-16

Naming (Directory), 19-18
Naming (File), 19-8; 19-9; 19-11; 19-16; 19-17
Display, 3-3
Controls, 7-3; 17-2; 18-1
Enhanced resolution filtering, 16-7; B-1
Fields, 7-1
Grids, 7-3; 18-1; 18-3; 18-5; 18-6
Persistence, 18-1; 18-2; 18-7; 22-1
Standard, 18-1; 18-5; 22-1
XY, 18-1; 18-3; 18-6; 22-1
DISPLAY button, 7-3; 17-2; 18-1

E

Enhanced resolution display. *See* Waveform Processing (time).
External clock, 10-1; 10-5

F

Fast Fourier Transform (FFT). *See* Waveform Processing (frequency)
Features (Key), 1-1
File
Deleting, 19-9
Naming, 19-8; 19-9; 19-16; 19-17
FIND button, 12-1; 12-3
Floppy disk. *See* Utilities
Fuses, 4-1

G

GPIB
Menu, 19-5
Setup, 19-1
Grids, 7-3; 18-1; 18-3; 18-5; 18-6

H

Hard disk. *See* Utilities
Hard options, 24-2
Hardcopy, 17-2, A-7
Internal printer, 19-3
Setup Menu, 19-2

L

LEVEL knob, 9-3
Low-pass filter, 13-1; 16-7

M

Mask. *See* PASS/FAIL
Math Functions
Set Up, 14-2; 14-3
Speed-up, 14-3; 16-2
MATH SETUP button, 15-2; 16-1
Measurement
Cursors, 17-2
Parameters, 17-2
Measurement (Automatic Parameter-), 22-3; 22-8; 22-11; A-5, A-6
Custom, 22-11; 22-12
Definitions, D-1; D-3
Parameter list, 22-4
Standard Time, 22-10
Standard time, D-3
Standard Voltage, 22-9
Standard voltage, D-1
Statistics, 22-8; 22-9; 22-10; 22-11; A-6
Symbols, 22-6
Memory card. *See* Utilities
Memory Used
Summary, 24-5

Menu Buttons
Controls, 11-1; 17-1
Message Field, 7-3

N

NORM button, 9-2
Nyquist frequency. *See* Waveform Processing (frequency)

O

Offset behavior, 9-2; 10-3; 12-1; 12-4; 15-2; 19-1; 19-19
OFFSET knob, 12-1; 12-3
Operating Environment, 4-1
Overload, 4-1; 13-1; 13-4

P

Parameters
Cyclic, D-5
List, 22-4
Measurement, 17-2; A-5, D-1
PASS/FAIL
Changing limits, 22-18
General, 17-3; 19-21; 22-3; 22-8; 22-15; 22-19
Mask
Change test, 22-19
Generating, 22-20
Recalling, 22-21
Parameter Selection, 22-17
Setting actions, 22-22
Top menu, 22-16
Peak detect. *See* Acquisition
Persistence display. *See* Display
POSITION knobs, 15-1
Power On
Recall of settings, 3-4
Self-Test, 4-2
Power Requirements, 4-1
Printer (Internal). *See* Utilities
Printers/plotters
Cabling, 19-2
Setup, 19-2
Probes
Attenuation, 13-1; A-1
Calibration, 13-4
Coupling, 13-4
Passive probes, 13-4
ProBus system, 13-3
Supplied probes, 13-4

R

Random Interleaved Sampling (RIS). *See* Acquisition
Recall
Configuration, 17-2
Panel setup, 23-1; 23-2; 23-3
Waveform, 17-2; 21-1; 22-20
Reference clock, 19-20
Remote Control, 3-4; 6-1
Reset (General Instrument), 6-2; 17-3
RESET button, 15-2
RIS (Random Interleaved Sampling). *See* Acquisition
RS232
Connector, 19-6
Menu, 19-5
Port selection, 19-6
Setup, 19-1

S

Safety, 4-1
Sampling rate, 8-2; 8-3; 10-1; 10-4; 11-5; B-1
Save
  Configuration, 17-2
  Panel setup, 23-1
Screen dump, 17-2; 19-2
SELECT CHANNEL button, 12-3
Sequence mode. *See* Acquisition
Service
  Customer support, 2-1
  Maintenance, 2-2
  RAN (Return Authorization Number), 2-2
  Repair procedures, 2-2
SHOW STATUS button, 6-1; 24-1
Slope (Trigger), 11-2
SNGL button, 9-2
Soft options, 24-2
Specifications
  Bandwidth, A-1
  DC accuracy, A-1
  External clock, A-1
  Input impedance, A-1
  Maximum voltage, A-1
  Options
    Hardware, A-6
    Processing, A-6
    Software and Hardware, 24-2
  Roll mode, A-1
  Sensitivity(V/div)range, 5-1
  Timebase
    Interpolator accuracy, A-1
    Interpolator resolution, A-1
    Range, A-1
  Trigger
    External trigger input, A-2
    External trigger range, A-2
    Post-/pre-trigger range, A-2
    Timing, A-2
  Trigger (SMART)
    Dropout, A-2
    Interval, A-2
    Pattern, A-2
    Qualified, A-3
    TV, A-3
STOP button, 9-1
Storage
  Availability, 19-9
  Copying files between storage media, 19-11; 19-15
  File naming, 19-8; 19-9
  File transfers, 19-11; 19-15
  Recall panel setup, 23-1; 23-2; 23-3
  Save panel setup, 23-1
  Setup, 3-1; 3-4; 23-1
  Setup menu, 17-2
  Utilities, 19-7; 19-11
  Waveform, 17-2; 20-1
    , 20-1
Sweeps, 16-1; 16-5; 16-6; 16-8; 16-11; 17-3; 18-5; 18-6; 22-8; 22-9; 22-10; 22-11; 22-15
System information, 24-2

T

Text & Times summary, 24-3
Time and date settings, 19-4
Time measurements, D-3
Time span, 10-1; 22-1
TIME/DIV knob, 9-3

Timebase & Trigger
Controls, 9-1
TIMEBASE SETUP.button, 10-1
Trace
Expansion or zoom, 16-3
Information, 24-4
Viewing Memories, 14-1; 14-2; 20-1; 21-1
TRACE ON/OFF button, 12-1; 12-3; 15-1
Trigger, 3-3; 8-5
Bi-level, 11-19
Configuration, 7-2
Coupling, 8-6; 11-1; 11-2; 11-21
Delay, 7-2; 9-3
Dropout, 11-17; 11-18
Glitch, 11-5; 11-6; 11-7
Holdoff, 8-7; 11-2; 11-21
Interval width, 11-8; 11-9
Level, 7-1; 8-7; 9-3; 11-1; 11-5; 11-19; 11-21
Level), 9-2
Pattern, 11-7; 11-19; 11-21
Pulse width, 11-5; 11-6; 11-7
Qualified, 11-10; 11-13; 11-14; 11-16
Slope, 8-6; 11-2
Source, 8-5
Status, 7-2
Symbols, 11-3; 11-22
Timing information, 24-3
TV, 11-10; 11-11
Window, 11-19
Trigger (Edge), 8-5; 8-7; 11-1; 11-2; 11-3; 11-14; 11-15; 11-16
Trigger (SMART), 11-1; 11-2; 11-4; 11-22, A-2
TRIGGER SETUP button, 11-1

U

Utilities
CAL BNC control, 19-1; 19-21
Floppy disk, 19-7
Copying and formatting, 19-12
Deleting files, 19-12
File reorder, 19-14
Interleave factor, 19-14
Recall panel setup, 23-2; 23-3
Recall waveform, 21-2
Save panel setup, 23-1
Store waveform, 20-1
Write protect switch, 19-9
GPIB menu, 19-5
GPIB port, 19-6
Hard disk, 19-7
Recall panel setup, 23-2; 23-3
Recall waveform, 21-2
Save panel setup, 23-1
Store waveform, 20-1
Hardcopy
RS232-C cabling, 19-2
Setup, 19-2
Internal memory
Recall waveform, 21-1
Store waveform, 20-1
Internal printer setup, 19-2; 19-3; A-6
Memory Card, 19-1; 19-7
Available space, 19-1
Battery, 19-10
Copying and Formatting, 19-1
File Listing, 19-1
Recall panel setup, 23-2; 23-3
Recall waveform, 21-2
Save panel setup, 23-1

Store waveform, 20-1
Write protect switch, 19-9
RS232 menu, 19-5
RS232 port, 19-6
Special Modes, 9-2; 10-3; 12-1; 12-4; 15-2; 19-1; 19-19
Time and date settings, 19-4
UTILITIES button, 9-2; 10-3; 17-2; 19-1

V

VAR button, 12-1; 12-4
Voltage measurements, D-1
VOLTS/DIV knob, 12-1; 12-4

W

Warranty, 2-1
Waveform
Recall, 17-2
Storage, 17-2
Summary, 24-4
Waveform Processing (frequency), 14-2; 16-1; A-6; B-2
Fast Fourier Transform (FFT), C-1
Algorithms, C-3
Aliasing, C-9
Cursors, C-3
Example of power averaging, C-8
Example with spectral leakage, C-7
Frequency bins, C-10
Glossary, C-9
Interruption, 16-10
Leakage, C-11
Nyquist frequency, C-1; C-11
Setup menu, 16-10
Setup menu for power average, 16-11
Windows, 16-10; C-2; C-7; C-9; C-10; C-12
Waveform Processing (time), 14-2; A-6
Digital Filtering
Example, B-4
Enhanced resolution display, 16-7; B-1
Example, B-5
Envelope, 16-8
Extrema, 16-8
Low-pass Filtering
Example, B-4
Noise Reduction
Example, B-6
Setup menu for functions, 16-12
Setup menu for Rescale, 16-14
WP01 option. *See* Waveform processing (time)
WP02 option. *See* Waveform processing (frequency).

X

XY display. *See* Display

Z

ZERO button, 9-3
Zoom, 14-1
Math Functions, 14-3; 20-1; 21-1
Multi-Zoom, 15-2; 16-1; 16-2
Setup menu, 16-3
ZOOM knobs, 15-2

US SALES OFFICES

1 800–5–LeCroy (automatically connects you to your local sales office)

WORLDWIDE

Argentina: Search SA, 1 375 1435

Australia: Scientific Devices Pty. Ltd., 39 579 3622

Austria: Dewetron GmbH, 0316 391804

Benelux: LeCroy B.V., 04902 89285

Brazil: ATP/Hi–Tek Electronica Ltda, 11 725 5822

Canada: Allan Crawford Assoc. Ltd.,
Mississauga: 905 890 2010
N. Vancouver: 604 878 1002

Chile: Sistemas de Instrumentacion Ltda, 2 6951137

Denmark: Lutronic ApS, 43 42 9764

Eastern Europe: Elsinco GmbH, Vienna, 1 815 04 00

Finland: Orbis OY, 0 566 4066

France: LeCroy Sarl, 1 69 18 83 20

Germany: LeCroy GmbH, 6221 83 10 01

Greece: IFIPCO – J. Fourniadis & Co., 1 67 25 970

Hong Kong: Schmidt Electronics, 2 2507 0222

India: TATA–Honeywell, 212 675 532

Indonesia: P.T. DWI, 21 797 5194/5195

Israel: Ammo, 3 647 8740

Italy: LeCroy S.r.l., Roma, 6 33 67 97 00

Japan: LeCroy Japan Corp.,
Tokyo: 3 3376 9400
Osaka: 6 330 0961

Korea: Woojoo Hi-Tech Corp. 2 449 5472

Mexico: Electroingenieria de Precision SA , 559 7677

New Zealand: Gough Tech., 3 379 8740

Norway: Avantec AS. 22 61 10 90

Pakistan: Electro Tech Corp. Ltd., 21 493 9593/5171

Portugal: M.T. Brandao Lda., 2 830 27 09

Singapore: Abex Eng. Ltd., 841 2818

S. Africa: Westplex Ltd., 11 787 0473

Spain: Essa SA, 1 359 0088

Sweden: MSS AB, 8 540 829 50

Switzerland: LeCroy SA, 22 719 21 11

Taiwan: Lecoln Tech. Co., 2 232 6368

Thailand: Measuretronix Ltd., 2 375 2733

Turkey: NETES, 212–237 32 26

United Kingdom: LeCroy Ltd., 1235 533 114

CORPORATE HEADQUARTERS

700 Chestnut Ridge Road
Chestnut Ridge, NY 10977-6499
Tel.: (914) 578-6020
Fax: (914) 578-5985

EUROPEAN HEADQUARTERS

Mannheimerstrasse 175
D–69123 Heidelberg, Germany
Tel.: (49) 6221 840989
Fax: (49) 6221 833827

EUROPEAN MANUFACTURING

2, rue du Pré-de-la-Fontaine
P.O. Box 341
1217 Meyrin 1/Geneva, Switzerland
Tel.: (41) 22 719 21 11
Fax: (41) 22 782 39 15

READER'S COMMENTS

LeCroy would like to provide its product users with the most useful manual possible. We would appreciate your help in achieving this goal. Please give us your input by answering the questions below.

Manual Name _____

Is the material presented effectively – correct, clearly written, well–organized, amply illustrated, fully covered? Please explain.

_____

_____

_____

_____

_____

Did you find errors in this manual? If so, specify the error and its page location.

_____

_____

_____

_____

Name _____ Date _____

Organization _____

Street _____

City _____ State _____ Zip Code or Country _____

Thank you for your help in improving LeCroy manuals. To mail, fold and fasten. No postage necessary if mailed in the U.S.A.

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 164 SPRING VALLEY, NY

Postage will be paid by addressee:

LeCroy Corporation
ITI Division
700 Chestnut Ridge Road
Chestnut Ridge, NY 10977 - 9913

STAPLE OR TAPE HERE

LeCroy